

Hair Wraps by Maddie Kertay



Collection No. PK80031
6 Designs

MATERIALS



Isacord Thread Colors

- 0020 Black
- 0101 Eggshell
- 0105 Ash Mist
- 0108 Cobblestone
- 0111 Whale
- 0640 Parchment
- 0851 Old Gold
- 0933 Redwood
- 0940 Autumn Leaf
- 1220 Apricot
- 1252 Dark Tan
- 1346 Cinnamon
- 1600 Spanish Tile
- 1800 Wildfire
- 1911 Foliage Rose
- 2113 Cranberry
- 3900 Cerulean
- 4740 Aquamarine
- 5510 Emerald
- 5633 Lime

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD SoftWeb

Fabrics/Textiles

- Assorted OESD Favorite Felt
- Assorted Quilter's Cotton
- DIME by OESD 3-D Embroidery Foam

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Punch
- OESD MiniMat
- Embroidery Needle Sharp 80/12
- Hair Stick

Isacord Thread Colors

- Per thread chart



SUMMARY




PK80031-01



Design Size:
5.26 X 3.72 in.

PK80031-02

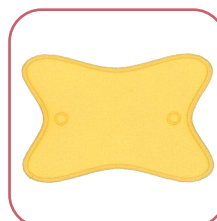


Design Size:
5.26 X 3.72 in.

PK80031-03



Design Size:
4.79 X 3.39 in.

PK80031-04

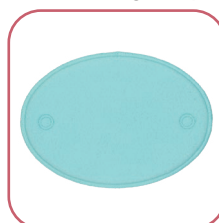


Design Size:
4.79 X 3.39 in.

PK80031-05



Design Size:
4.76 X 4.72 in.

PK80031-06

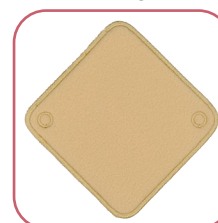

Design Size:
4.76 X 4.72 in.

Cutting

	Felt (Front)	Quilter's Cotton (Back)
PK80031-01 & PK80031-02	6 1/4" x 4 3/4"	6 1/4" x 4 3/4"
PK80031-03 & PK80031-04	5 3/4" x 4 1/2"	5 3/4" x 4 1/2"
PK80031-05 & PK80031-06	5 3/4" x 5 3/4"	5 3/4" x 5 3/4"

EMBROIDERY



General Instructions

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK80031-03 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

Step 1

- Cut the Front Felt 1/4" - 1/2" larger than the applique patterns or as indicated on the cutting summary on page 4.

Optional: Cut the 3-D Embroidery Foam the same size.




EMBROIDERY




□ Step 2

- Cut the Back Fabric 1/4" - 1/2" larger than the applique patterns or as indicated in the design supply list on page 4.
- Cut the Red applique fabric 1/4" - 1/2" larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all fabrics to provide some body to the fabric.

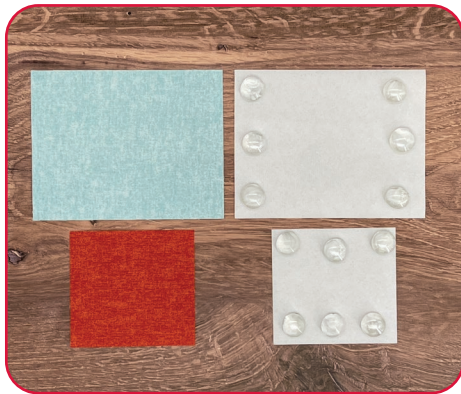

□ Step 3

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

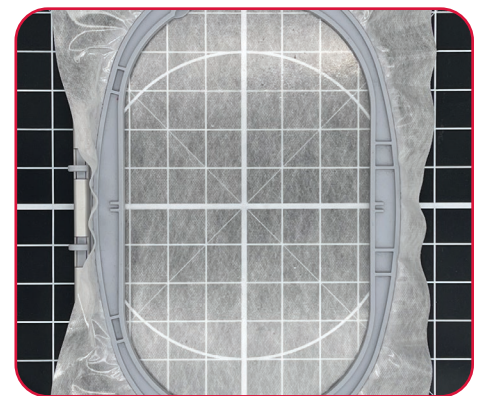


EMBROIDERY



□ Step 4

- Load the selected design into the machine.
- Example design is PK80031-03.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Foam/Front Teal Felt Placement Stitch.

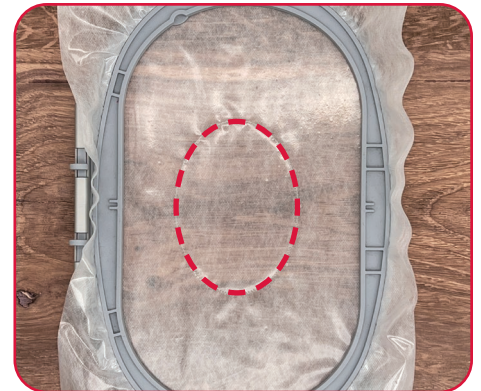


□ Step 5

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the 3-D Embroidery Foam.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



□ Step 6

- Completely cover the 3-D Embroidery Foam with the Front Felt.
- Tape in place to secure.

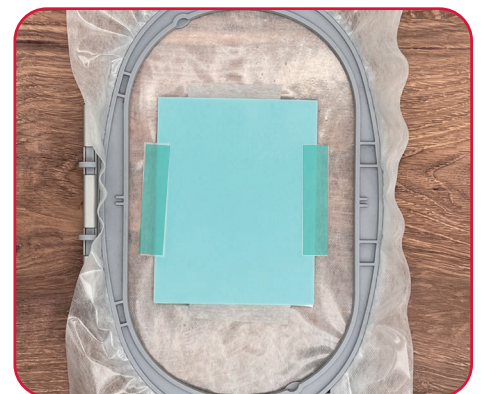


EMBROIDERY




□ Step 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

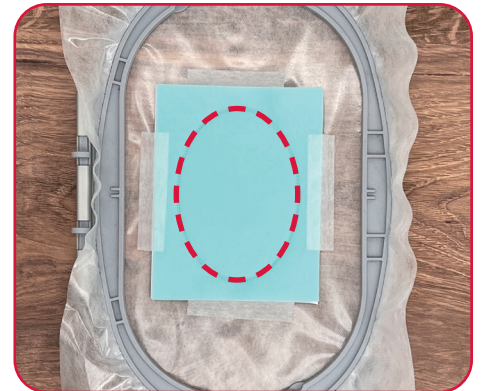

□ Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

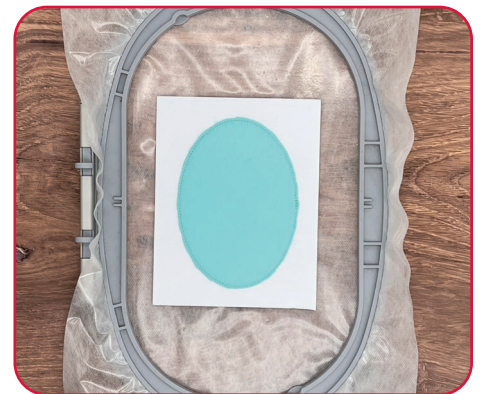

✍ Note: The 3-D Foam does not need to be trimmed as it can be torn away after the satin cover stitch.

🔔 Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.




EMBROIDERY




□ Step 9

- Return the hoop to the machine.
- Stitch Machine Step 3, Red Fabric Placement Stitch.

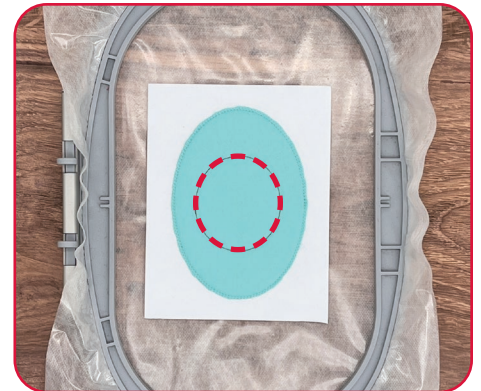

□ Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the red applique fabric.
- Completely cover the placement stitch with the prepared red applique fabric.
- Tape in place to secure.

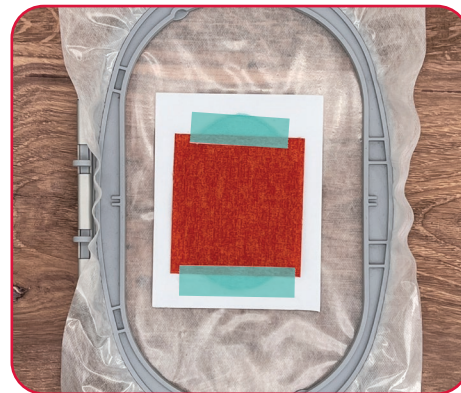


EMBROIDERY




□ Step 11

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

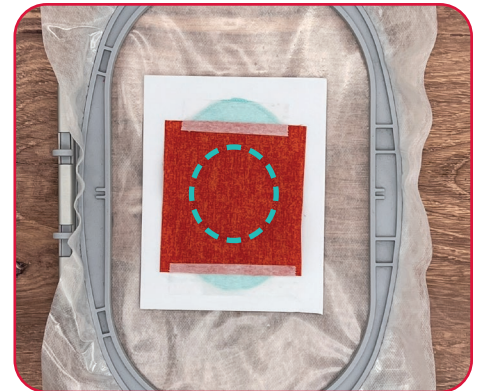


□ Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.

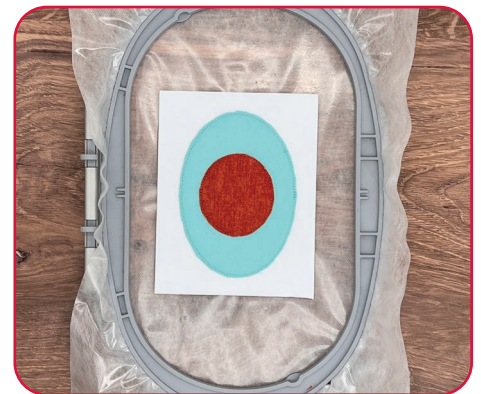

□ Step 13

- Return the hoop to the machine.
- Stitch Machine Steps 5 – 12.

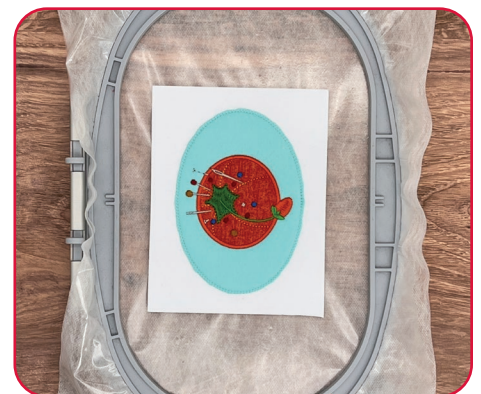

EMBROIDERY



□ Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the Back Fabric.
- Turn the hoop over and place the prepared Back Fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.



 **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**

□ Step 15

- Return the hoop to the machine.
- Stitch Machine Step 13, Back Teal Fabric Cut Line and Tackdown.



EMBROIDERY



□ Step 16

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



□ Step 17


- Return the hoop to the machine.
- Stitch Machine Step 14, Cover Stitch and Punch Guides, **with matching bobbin thread.**



EMBROIDERY


□ Step 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Gently tear away the excess 3-D Foam.

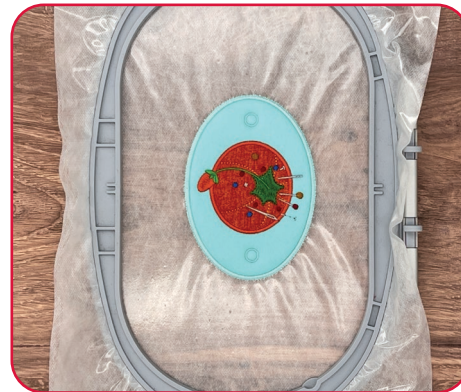

□ Step 19

- Remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.

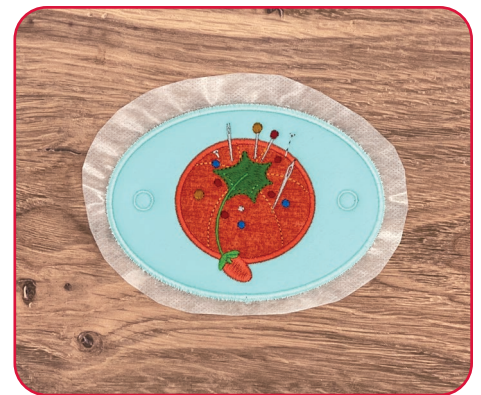

FINISHING TOUCHES



Step 20

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.
- If pieces of foam are peeking out from under the satin cover stitch, use a hair dryer or heat gun to shrink the foam under the stitches.



Note: Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.

Note: Avoid touching your embroidery with a heat gun or hair dryer, as this can damage your finished project.

Step 21

- Use the OESD MiniMAT and the OESD Perfect Punch with the 4mm attachment to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guides on page 16.

Tip: Take care to not cut the satin stitching.



FINISHING TOUCHES

□ Step 22


- The project is complete. Enjoy!




PUNCH TOOL GUIDES




PK80031-01

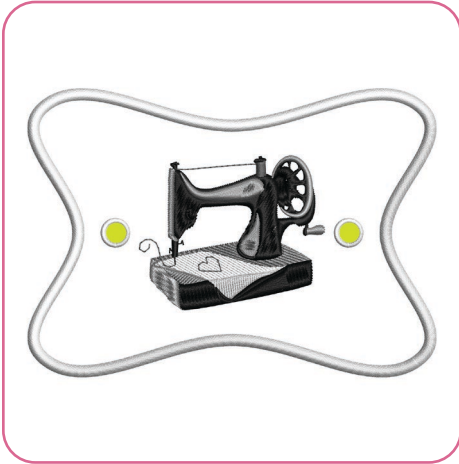


PK80031-02

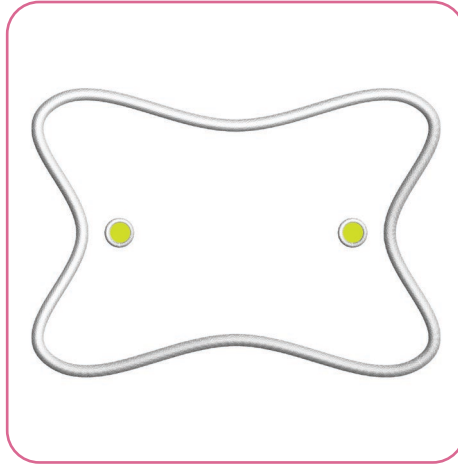


PK80031-03

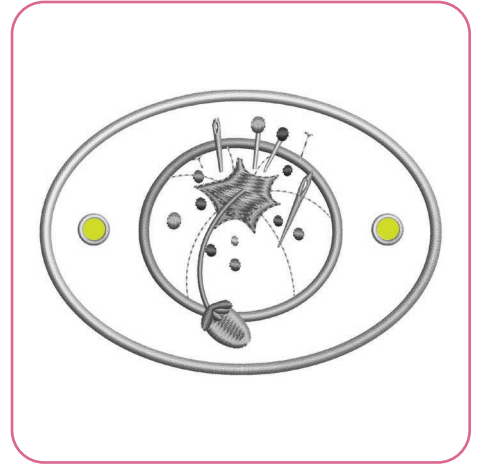


PK80031-04

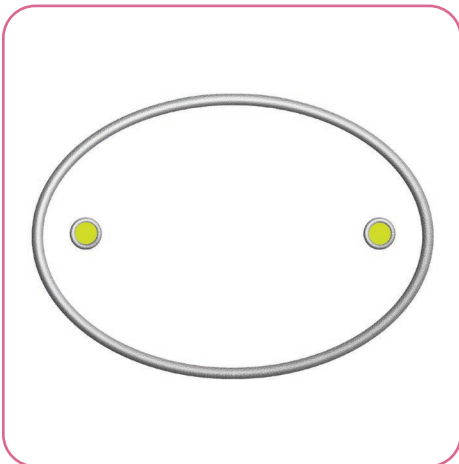

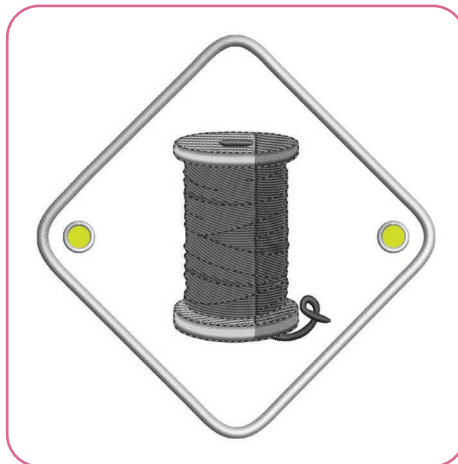

PK80031-05

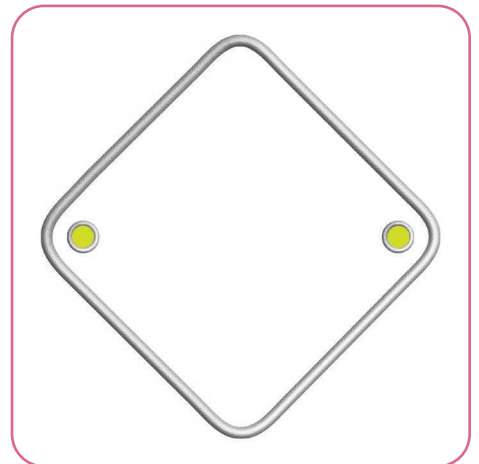


PK80031-06



 = 2 MM

 = 3 MM

 = 4 MM

CRAFT KNIFE




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

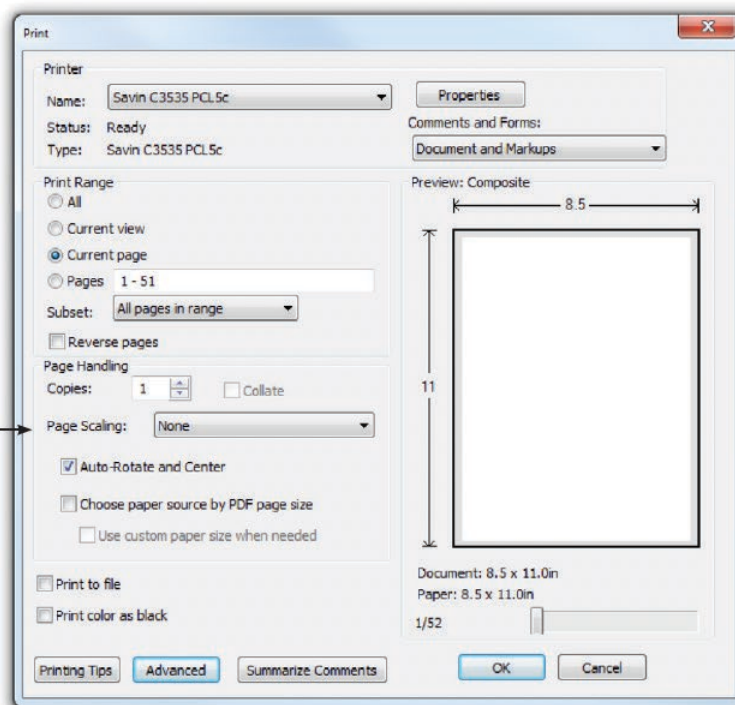

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

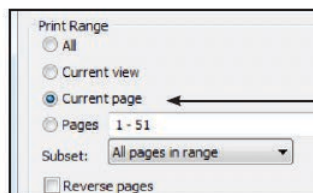


APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

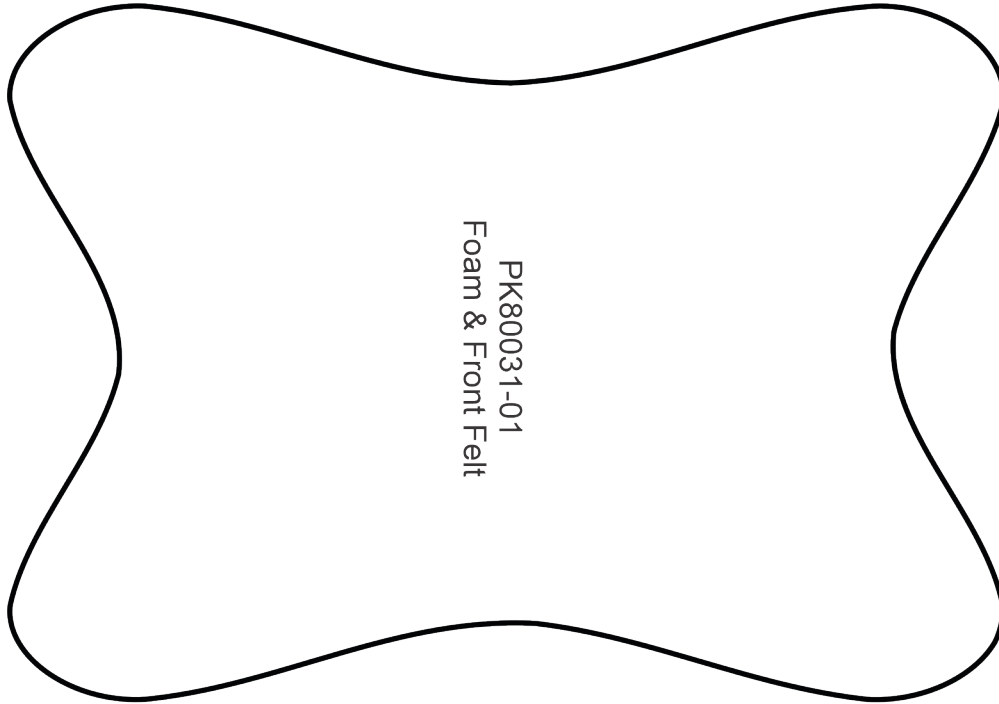

PK80031-01
Foam & Front Felt

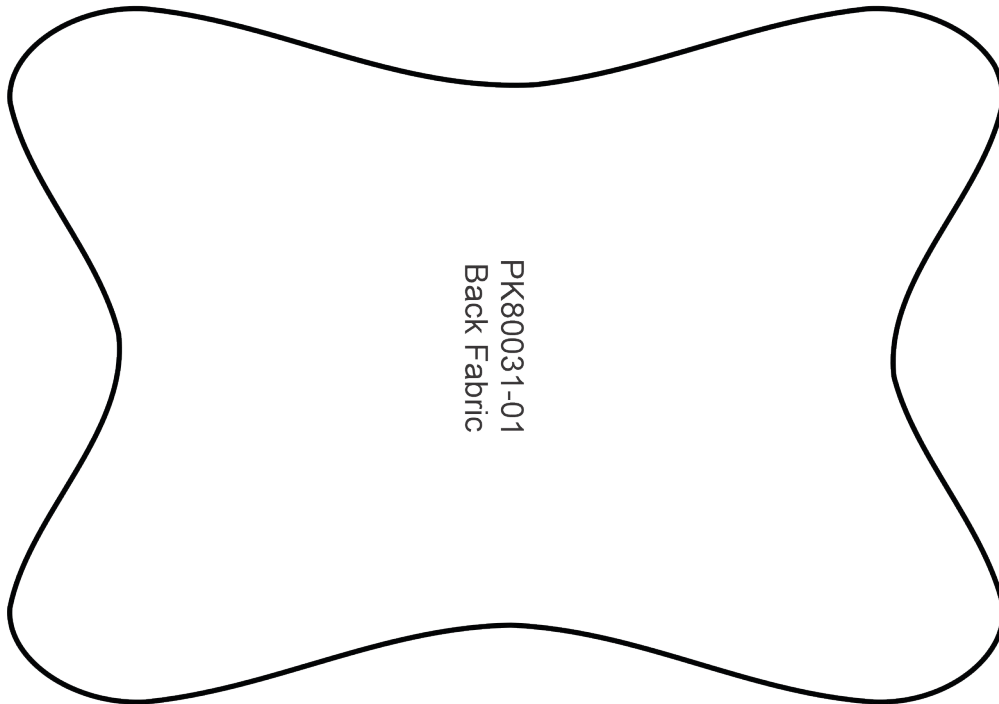


PK80031-01
Back Fabric


APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

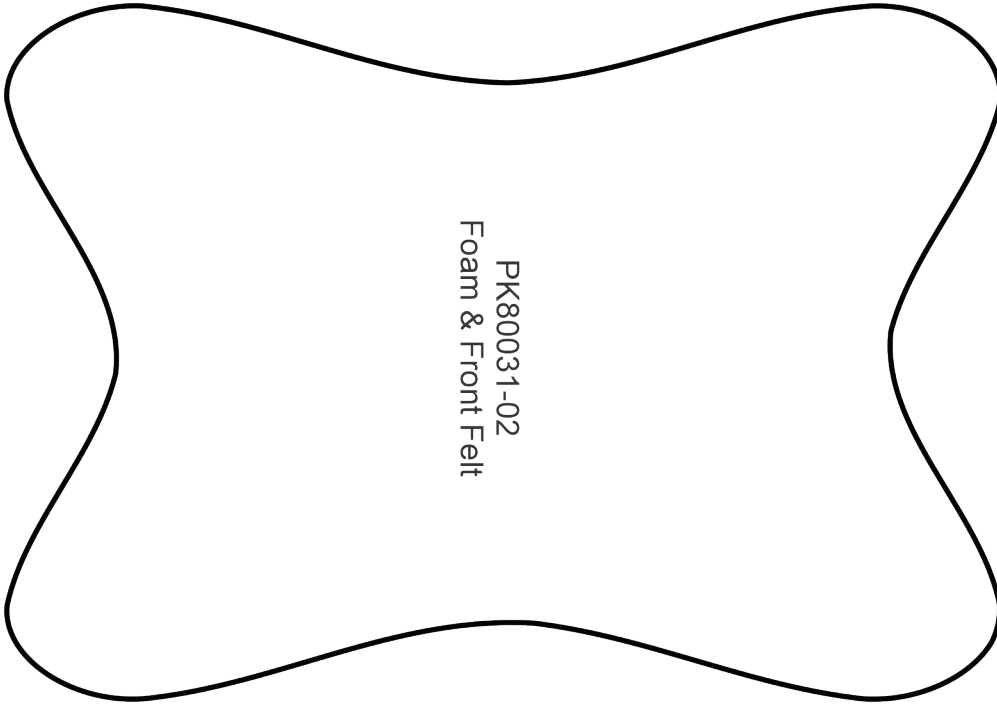

PK80031-02
Foam & Front Felt

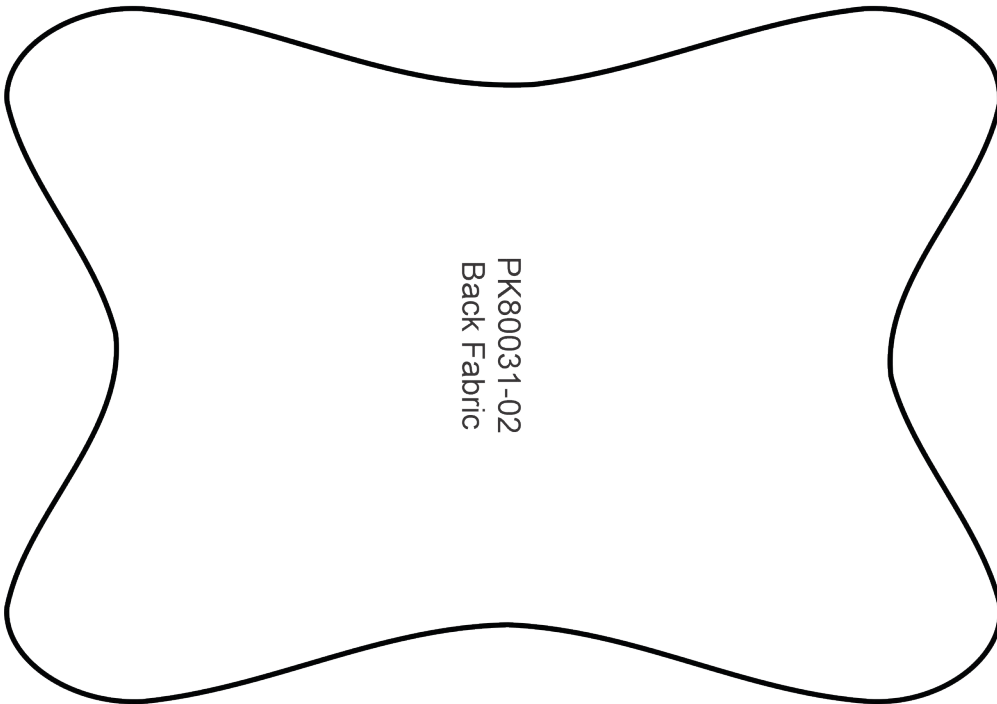

PK80031-02
Back Fabric

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-03
Front Fabric


PK80031-03
Foam & Front Felt

PK80031-03
Back Fabric


APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

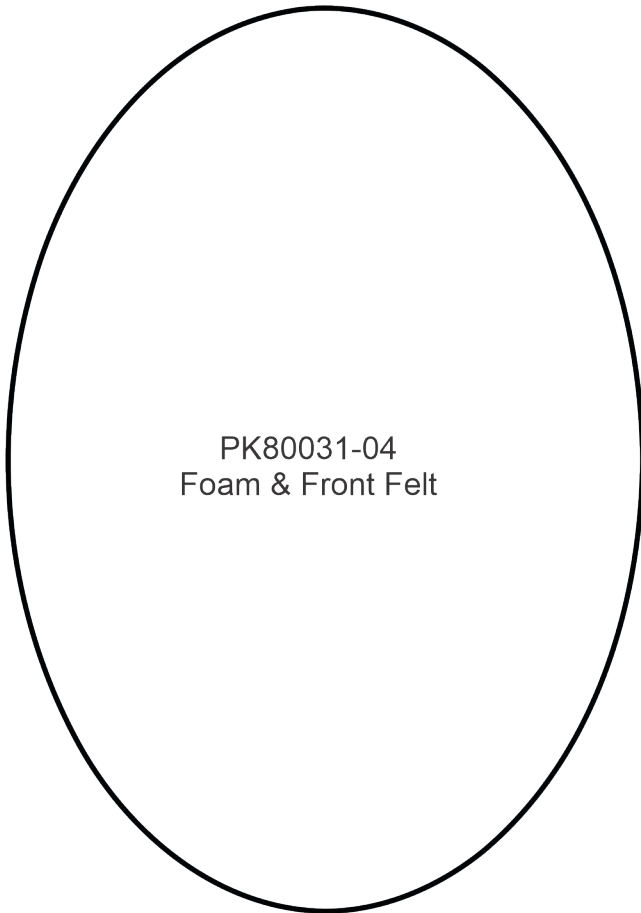

PK80031-04
Foam & Front Felt

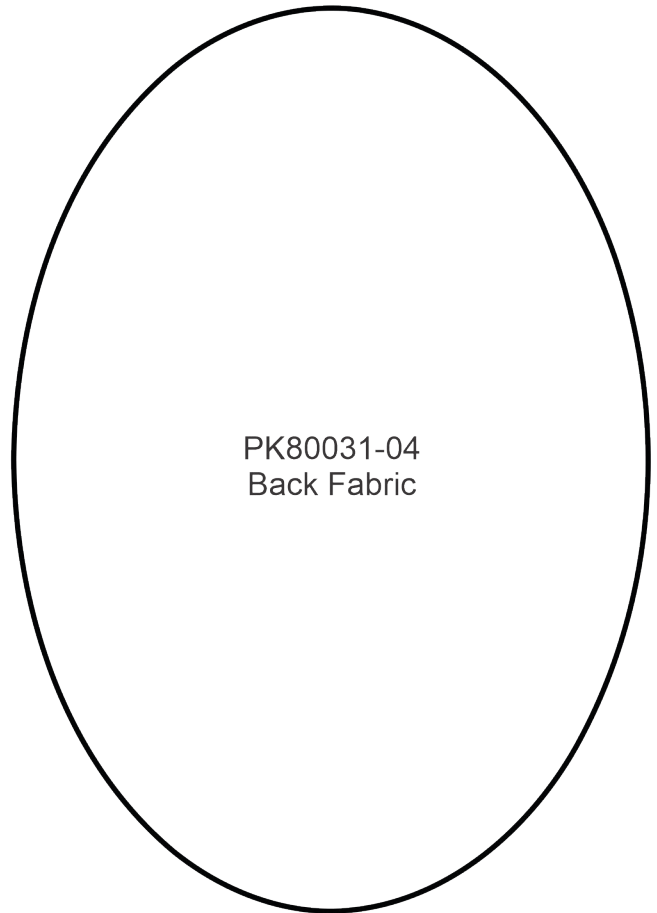

PK80031-04
Back Fabric

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-05
Foam & Front Felt

PK80031-05
Back Fabric

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.


PK80031-06
Foam & Front Felt

PK80031-06
Back Fabric


MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

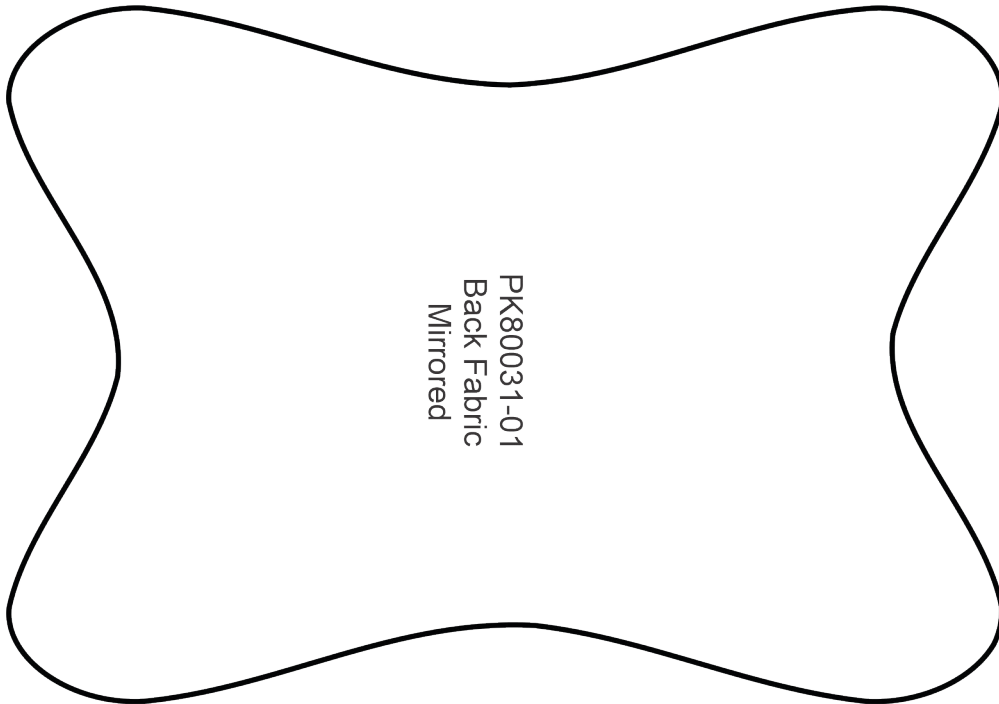

PK80031-01
Back Fabric
Mirrored


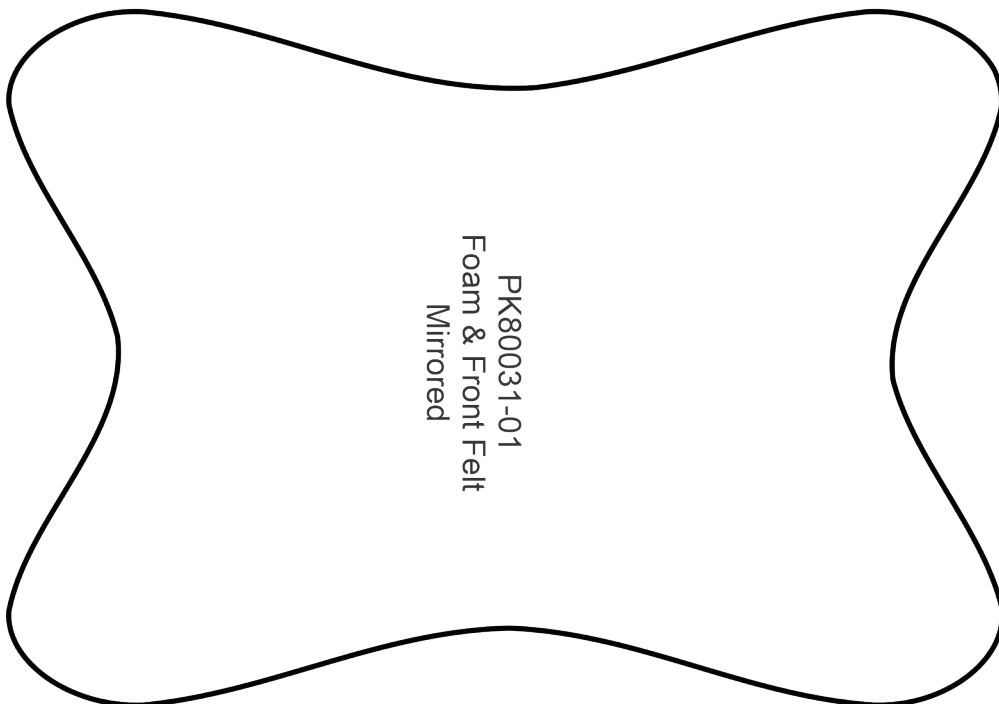


PK80031-01
Foam & Front Felt
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

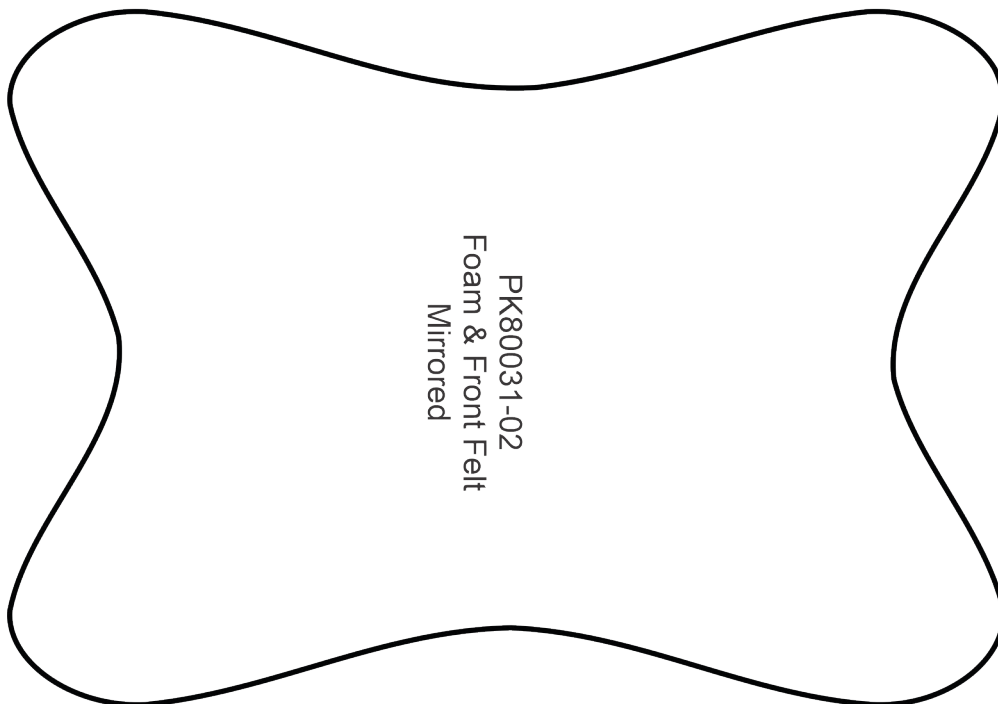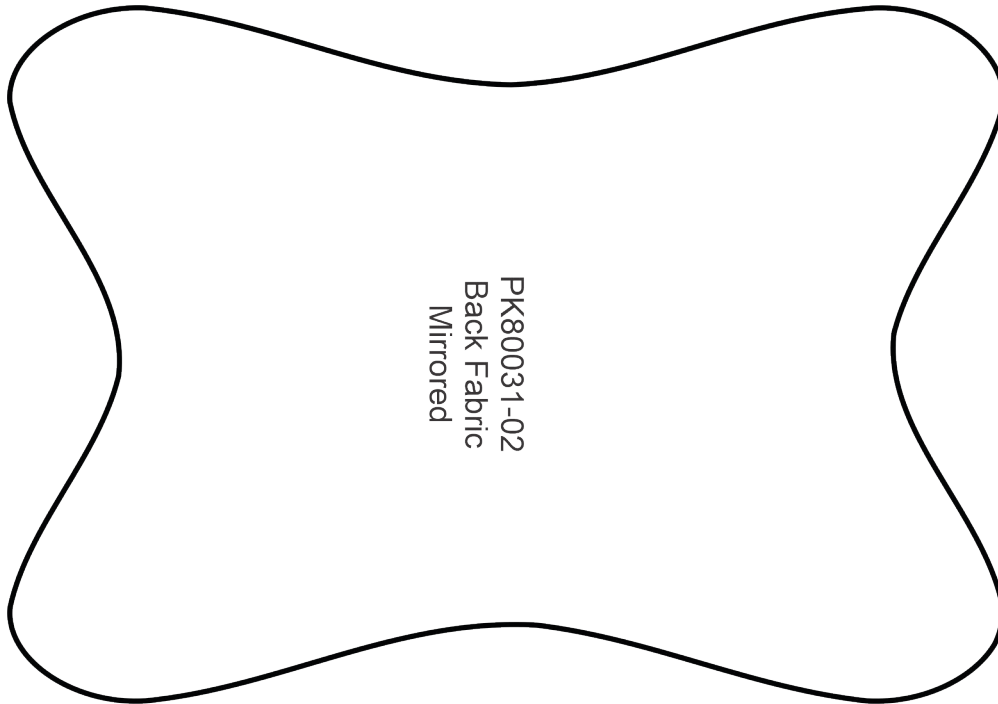

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-03
Front Fabric
Mirrored

PK80031-03
Back Fabric
Mirrored

PK80031-03
Foam & Front Felt
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-04
Back Fabric
Mirrored

PK80031-04
Foam & Front Felt
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-05
Foam & Front Felt
Mirrored

PK80031-05
Back Fabric
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK80031-06
Foam & Front Felt
Mirrored

PK80031-06
Back Fabric
Mirrored