



Love Treat Pouch

#PK10003
1 DESIGN/2 Sizes

MATERIALS



Isacord Thread Colors

0010 Silky White
0112 Leadville
1521 Flamingo
1761 Tea Rose
1921 Blossom
4174 Charcoal

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED



PK10003-01 Love Treat Pouch

	Size Inches:	Size mm:	Stitch Count:
S	7.50 X 4.50 in.	190.5 X 114.3 mm	8647 St.
L	10.00 X 6.00 in.	254.0 X 152.4 mm	11353 St.

1.	Front Felt Placement Stitch	1921
2.	Front Felt Tackdown	1921
3.	Felt Cut Line and Tackdown	1921
4.	Vinyl Cut Line and Tackdown	1921
5.	Rosey Cover Stitch	1921
6.	Gray Detail	0112
7.	Charcoal Detail	4174
8.	White Detail	0010
9.	Light Red Detail	1521
10.	Rosey Linework	1921
11.	Knife Guides	1761
12.	Seam Stitch/Match Fabric	1761

MATERIALS



Stabilizers

- OESD Heavy Weight TearAway

Fabrics/Textiles

Small Pouch

- Felt (2) 6" x 10"
- OESD Clear Vinyl
- 3/8" Ribbon 24 inches

Large Pouch

- Felt (2) 8" x 12"
- OESD Clear Vinyl
- 3/8" Ribbon 24 inches

Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Alligator Clamps
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart

EMBROIDERY



Note:

Some thread colors in instructions have been changed or digitally enhanced for better visibility.


□ Step 1

- Cut the clear vinyl 3" x 4".



□ Step 2


- Hoop one layer of Heavy Weight TearAway.
- Load the selected design into the machine.
- The design in the example is PK10003-01L.
- Thread the machine per the thread chart.
- Place the hoop on the machine.

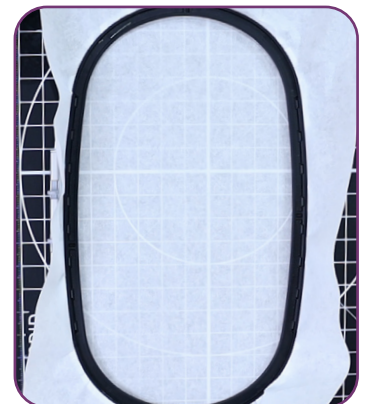

EMBROIDERY

□ Step 3

- Stitch Machine Step 1, Front Felt Placement Stitch.

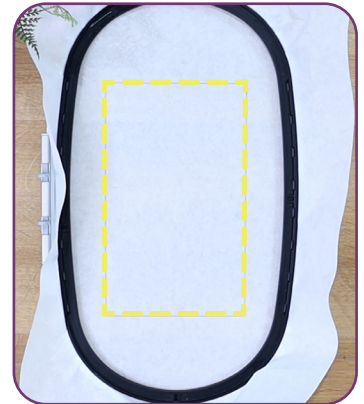


□ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the felt.
- Tape in place to secure.



□ Step 5


- Return the hoop to the machine.
- Stitch Machine Step 2, Tackdown.

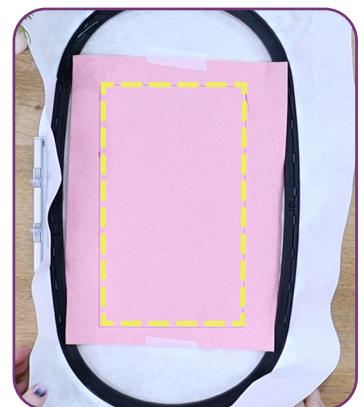

EMBROIDERY

□ Step 6

- Stitch Machine Step 3, Felt Cut Line and Tackdown.
- Remove the hoop from the machine, but NOT the project from the hoop.

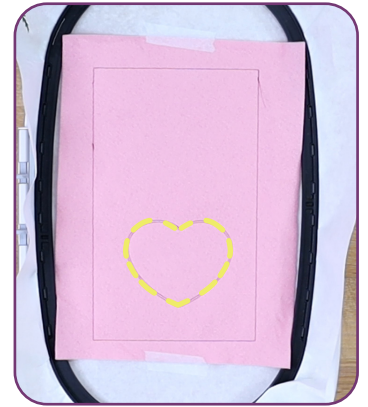

□ Step 7

- Place the hoop on a flat surface.
- Trim the excess fabric as close to the cut line as possible. If the innermost stitches (cut line) are cut, the outer stitches (tackdown) will hold the fabric in place.



□ Step 8

- Completely cover the placement stitch with clear vinyl.
- Tape corners to secure.



EMBROIDERY

Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place on a flat surface.
- Trim the excess clear vinyl as close to the outer stitching as possible.



Step 11

- Return the hoop to the machine and stitch Machine Steps 5-11 per the thread chart.



EMBROIDERY


Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the back felt, over the front of the pouch, completely covering the stitched design.
- Tape in place to secure.



Step 13

- Return the hoop to the machine.
- Stitch Machine Step 12, Seam Stitch/Match Felt.

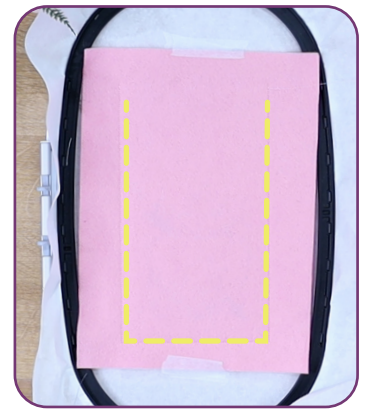

Step 14

- The stitching is complete.
- Remove the project from the hoop and trim approximately 1/4" from the seam stitch.
- Gently tear away the stabilizer.

Tip: Trim all excess thread tails before turning the pouch.



EMBROIDERY

□ Step 15

- Turn the pouch inside out to show the right side of the design.
- Use the large end of the Expert Point and Press Tool to push out the corners and edges.



□ Step 16

- Press right side down on a Perfect Embroidery Press Cloth.
- Place the pouch on a protected surface, right side up.
- Use a craft knife and cut through both layers of the felt in the ribbon guides. Take care not to cut the stitching.



□ Step 17

- Start from the center of the ribbon guides and weave a 3/8" ribbon through the openings around the pouch.

Tip: The Alligator Clamp is helpful when weaving the ribbon in and out of the ribbon guides.



FINISHING TOUCHES



Step 18


- Add candy to the pouch.
- Cinch pouch and tie a jaunty bow.
- Enjoy!



PUNCH TOOL GUIDES



PK10003 L

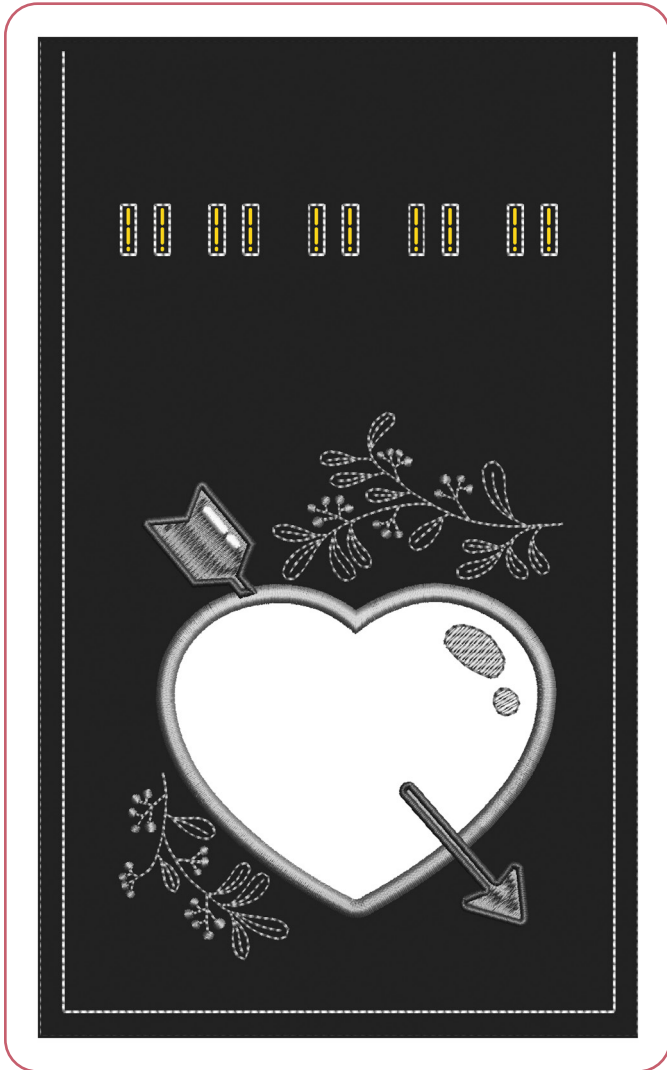

PK10003 S



CRAFT KNIFE

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2023 OESD, LLC. All rights reserved.