

Freestanding Football Bowl



MATERIALS



Isacord Thread Colors

0010 Silky White 0842 Toffee

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fiber Form
- OESD Applique Fuse and Fix
- OESD Top Cover Permanent Topping, White

Fabrics/Textiles

- OESD Favorite Felt Brown 2 packages
- OESD Favorite Felt Green 1 package
- OESD Favorite Felt White 1 package
- OESD Favorite Felt Red or favorite team color 1 package
- · Brown Quilter's Cotton 1 fat quarter
- · Novelty Quilter's Cotton 1 fat quarter

Note: Fabric amounts are estimates and may result in overages.

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Alligator Clamps
- OESD Button Clips

Isacord Thread Colors


Per the thread chart

SUMMARY





Finished project size: Bowl 11" x 5 1/2" x 3" Lid 11" x 6" x 3" Together 11" x 6" x 5"

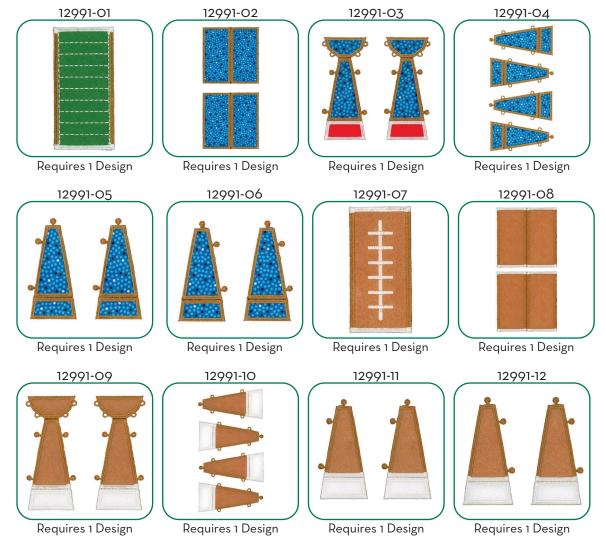



General Instructions

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design 12991-03 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with Isacord 0842, Toffee, thread in the bobbin.

NOTE: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" 1/2" outside the printed applique templates.





Step 2

- Cut the Fiber Form 1/4" 1/2" larger than the applique templates.
- Fuse the trimmed templates to the back of the Fiber Form with the paper side of the printed templates up. Hold the iron on the template for 10–15 seconds for a secure fuse.





Step 3

- Trim the Fiber Form on the outer edges of the black outline.
- · Set aside.





Step 4


- Cut the applique felt and fabric 1/4" 1/2" larger than the templates that are included at the end of the instructions.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique felt and fabrics to provide stiffness to the finished structure.





Step 5


 Using OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

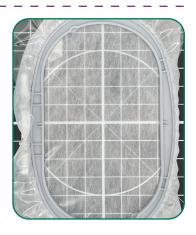



Step 6

- · Load the selected design into the machine.
- Example design is 12991-03.
- · Thread the machine per the thread chart.
- Thread the bobbin with Isacord 0842, Toffee, thread color.
- · Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form Placement Stitch.

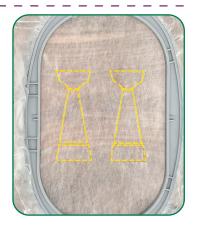

Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.
 - Tip: Applique Fuse and Fix is repositionable.




EMBROIDERY OSD PREMIER COLLECTION




Step 8

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

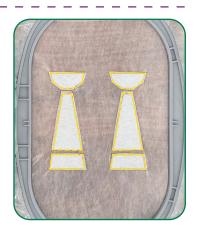

Step 9

Stitch Machine Step 3, Front Fabric/Back Brown Felt Placement Stitch.

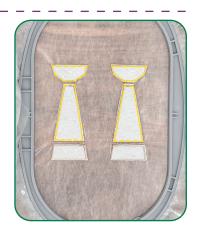

EMBROIDERY OSD PREMIER



Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared novelty applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



Step 11

- Turn the hoop over and place the prepared brown applique felt, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 12

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



EMBROIDERY OF



Step 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place. Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.




Step 14

Turn the hoop over. Trim the excess felt as close to the cut line as possible.



Step 15

- Return the hoop to the machine.
- Stitch Machine Step 5, Endzone Felt/Back Brown Felt Placement Stitch.

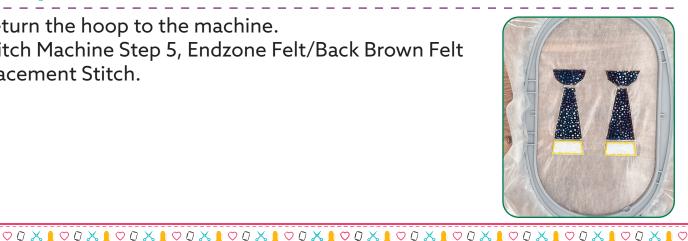

EMBROIDERY OF



Step 16

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared red applique felt.
- · Tape in place.



Step 17

- Turn the hoop over and place the prepared brown applique felt, right side up, completely covering the placement stitch.
- · Carefully tape to secure.



Step 18

- · Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.



EMBROIDERY OF



Step 19

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible.



Step 20

 Turn the hoop over. Trim the excess felt as close to the cut line as possible.



Step 21

- Return the hoop to the machine.
- Thread the bobbin with Isacord 0842, Toffee, thread color.
- Stitch Machine Step 7, Cover Stitch.



EMBROIDERY OSD PREMIER



Step 22

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the end zones with white OESD Top Cover Permanent Topping.
- Tape in place. Note: Top Cover helps prevent the felt showing through the white stitching.



Step 23

- Return the hoop to the machine.
- Stitch Machine Step 8, Cover Stitch.



Step 24

- When the design is complete, tear away the excess Top Cover from the white stitching.
- Remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.






Step 25

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry.
 Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



Step 26

- Line up the Bowl Sides FSA (12991-02) on either side of the Bowl Base FSA (12991-01), brown felt side down.
- Thread the sewing machine with matching thread on the top and bobbin.
- Stitch together, on each long side, using a multi-step zigzag stitch.
- · Back stitch at the beginning and end to secure.
- · Trim thread tails.

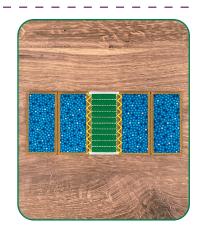

Step 27


- Line up the Bowl Ends 1 FSA (12991-03) with the Bowl Base.
- Stitch together, on the short sides, using a multi-step zigzag stitch as above.






Step 28

 Line up the Bowl Ends 2 FSA (12991-04) with the inner rectangles of the Bowl Sides.

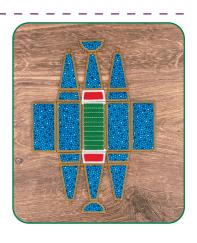


Step 29

• Line up the Bowl Ends 3 FSA (12991-05) with the upper right and lower left outer rectangles of the Bowl Sides. **The buttonettes will face inwards.**

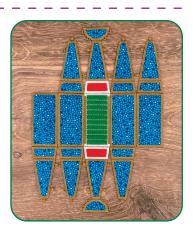

Step 30


- Line up the Bowl Ends 4 FSA (12991-06) with the upper left and lower right outer rectangles of the Bowl Sides.
 The buttonettes will face inwards.
- Stitch together, on each short side, using a multi-step zigzag stitch as above.

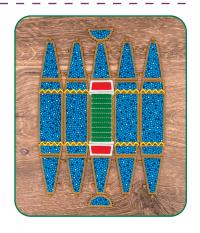



Step 31

Match the eyelets on the Bowl Ends to the buttonettes. Pull each buttonette through the corresponding eyelets with OESD Alligator Clamps. If needed, attach an OESD Button Clip to temporarily hold the buttonettes in place.

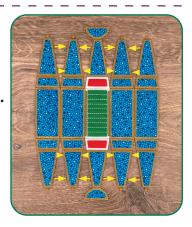

Step 32

Match the eyelets on the ends of the Bowl Ends to the buttonettes. Pull each buttonette through the corresponding eyelets.



Step 33

The Bowl is complete.








Step 34

Repeat assembly for Lid pieces (12991-07 through 12991-12). When sewing the pieces together, match the bobbin thread and top thread to the cover stitch colors.

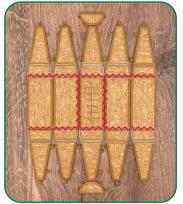





Step 35


The project is complete. Enjoy!






ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

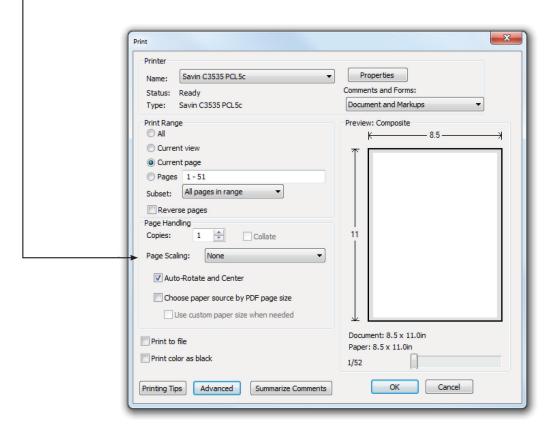

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

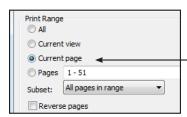

APPLIQUE PATTERNS O SD PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.


12991-01 Fiber Form & Front Felt 12991-01 Back Felt




21

Fiber Form & Fiber Form & Front Fabric Front Fabric 12991-02 12991-02 Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 12991-02 Fiber Form & Fiber Form & Front Fabric Front Fabric 12991-02 Back Felt 12991-02 Back Felt 12991-02 Back Felt 12991-02 Back Felt 12991-02



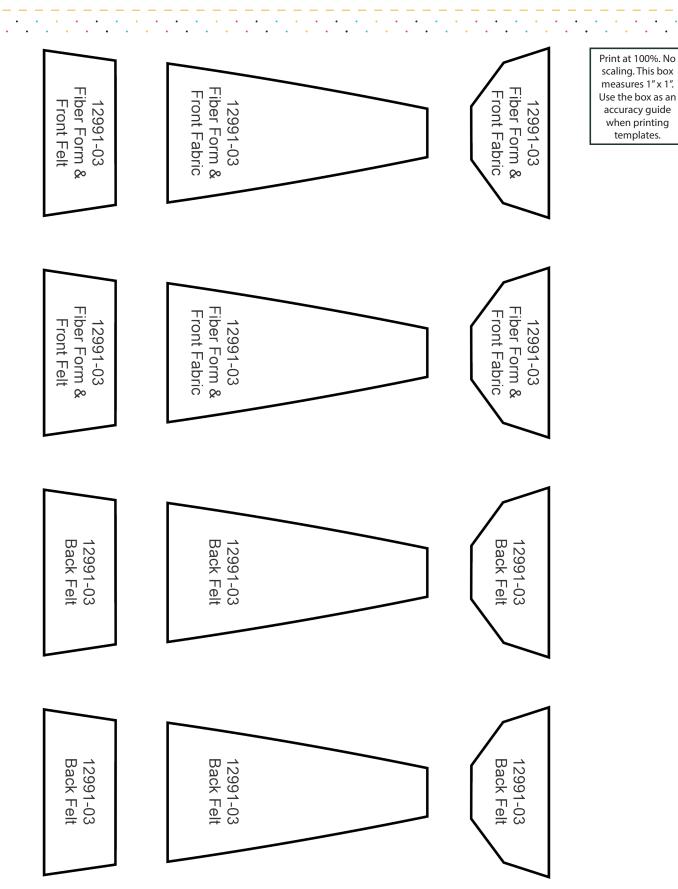



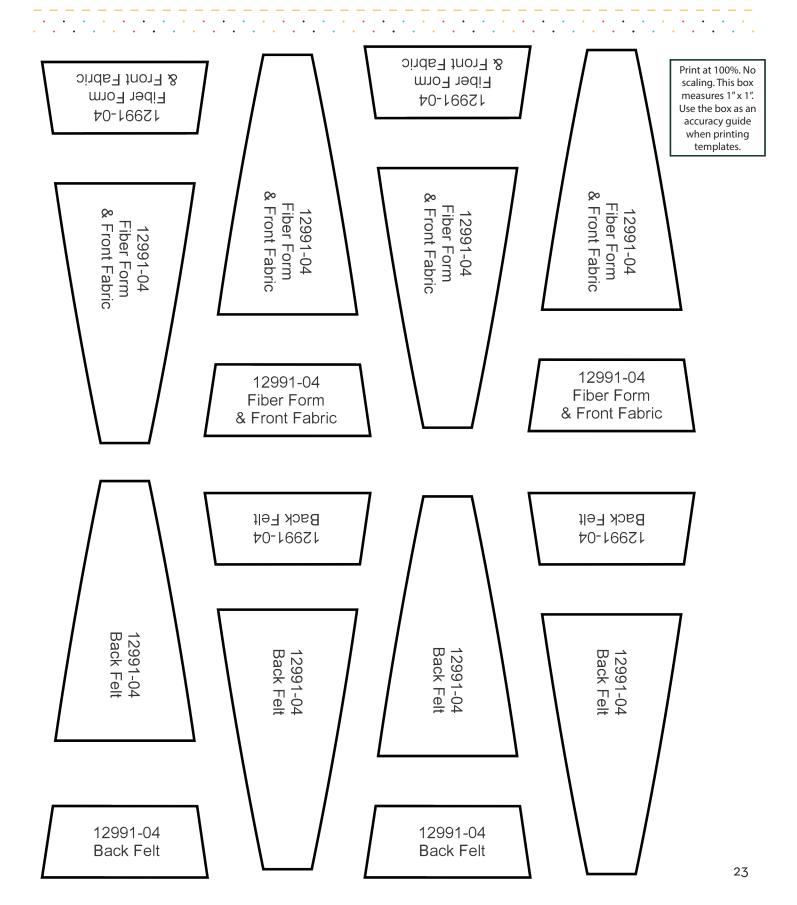

APPLIQUE PATTERNS O SD PREMIER COLLECTION

12991-05

Back Felt




12991-05 12991-05 Fiber Form Fiber Form & Front Fabric & Front Fabric 12991-05 12991-05 Fiber Form Fiber Form & Front Fabric & Front Fabric 12991-05 12991-05 **Back Felt** Back Felt

12991-05

Back Felt



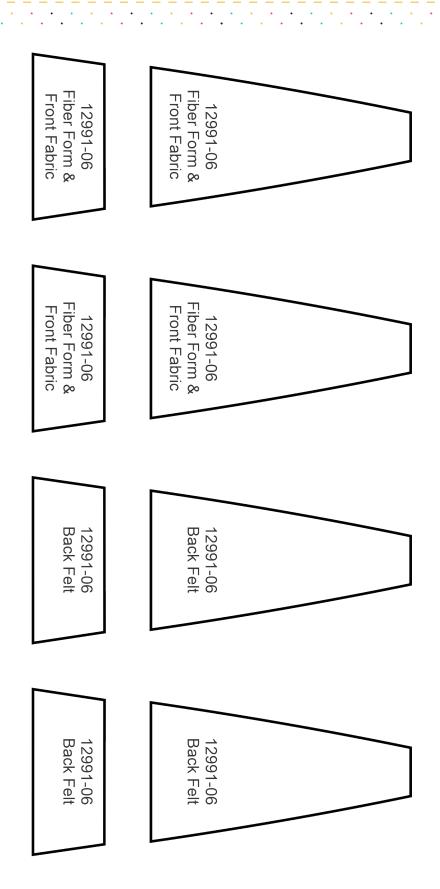



12991-07 Fiber Form & Front Felt

12991-08 Fiber Form & Front Felt

12991-08 Fiber Form & Front Felt

> Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12991-07 Back Fabric


12991-08 Fiber Form & Front Felt

12991-08 Fiber Form & Front Felt


APPLIQUE PATTERNS O SD PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 12991-08 12991-08 Back Fabric Back Fabric 12991-08 12991-08 Back Fabric Back Fabric



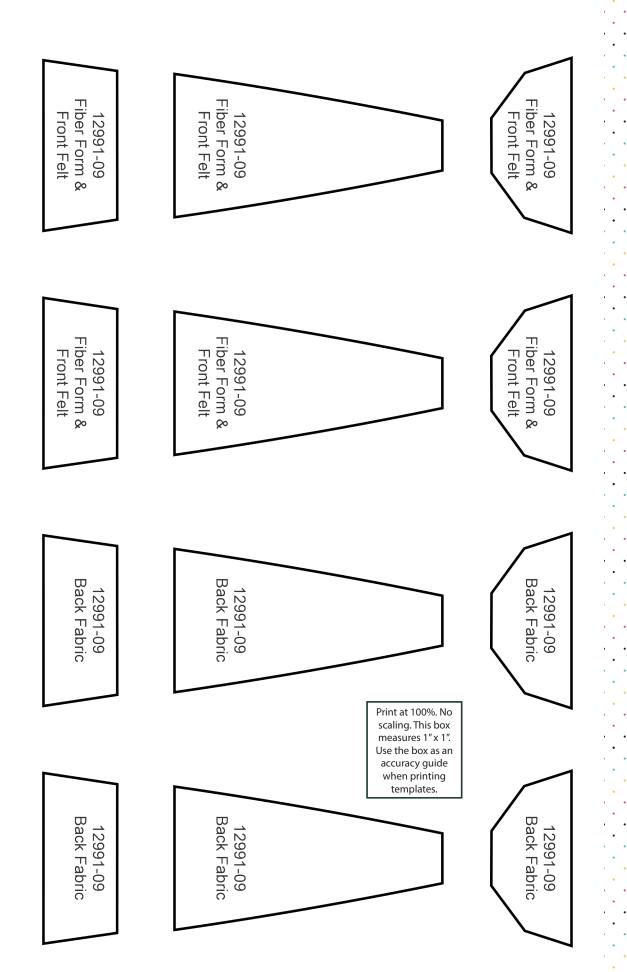



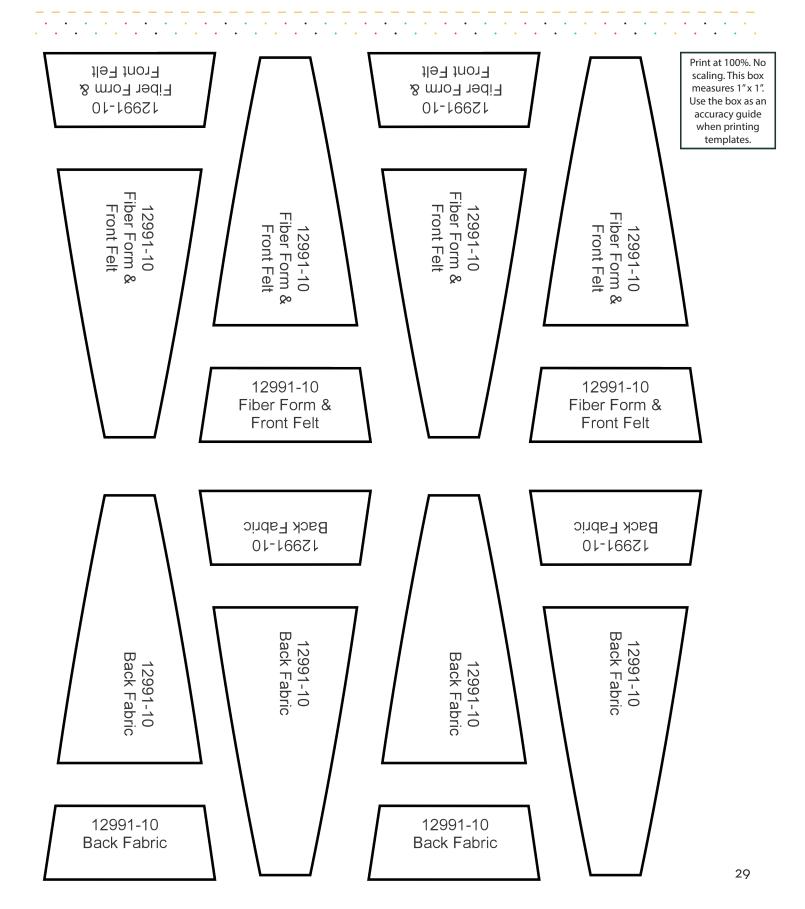

APPLIQUE PATTERNS O SD PREMIER COLLECTION



12991-11 Fiber Form & Front Felt

12991-11 Fiber Form & Front Felt

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12991-11 Fiber Form & Front Felt

12991-11 Fiber Form & Front Felt

12991-11 Back Fabric

12991-11 Back Fabric


12991-11 Back Fabric


12991-11 Back Fabric

APPLIQUE PATTERNS O SD PREMIER COLLECTION




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

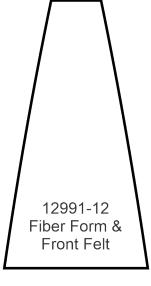


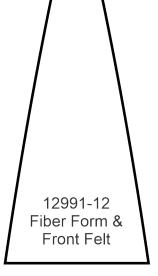

12991-12 Fiber Form & Front Felt



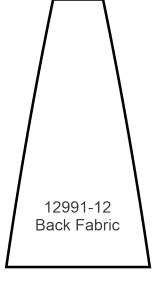

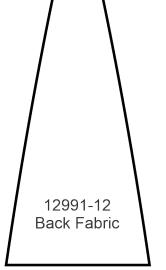

12991-12 Back Fabric

12991-12 Back Fabric



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.


12991-01 Back Felt Mirror 12991-01 Fiber Form & Front Felt Mirror 12991-02 Back Felt Mirror 12991-02 Back Felt Mirror

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.


12991-02 Back Felt Mirror 12991-02 Back Felt Mirror

12991-02 Fiber Form & Front Fabric Mirror 12991-02 Fiber Form & Front Fabric Mirror

12991-02 Fiber Form & Front Fabric Mirror 12991-02 Fiber Form & Front Fabric Mirror

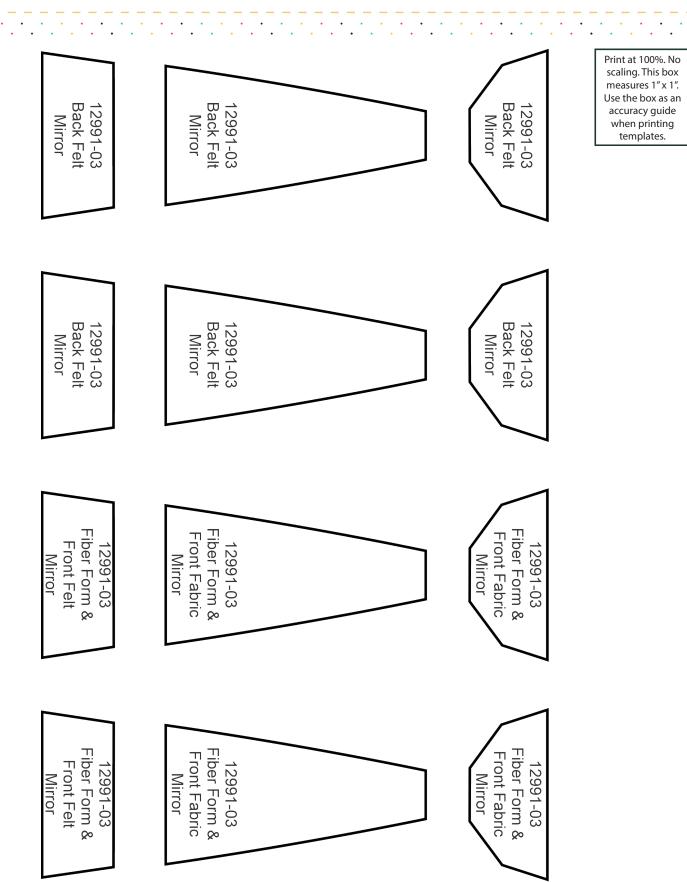

MIRRORED PATTERNS O

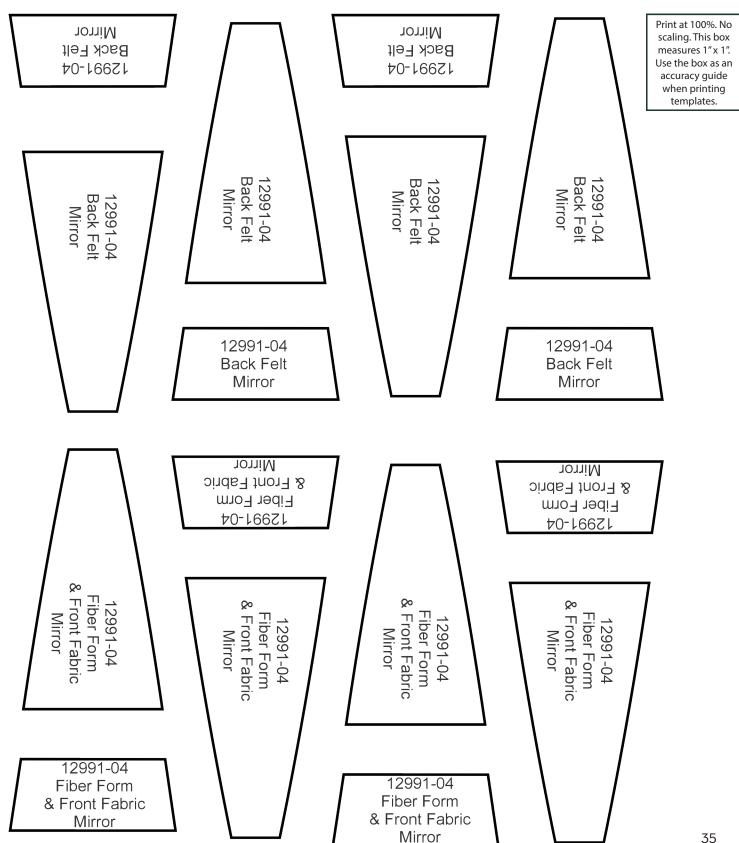

12991-05 12991-05 Fiber Form Fiber Form & Front Fabric & Front Fabric Mirror Mirror 12991-05 12991-05 Fiber Form Fiber Form & Front Fabric & Front Fabric Mirror Mirror 12991-05 12991-05 **Back Felt** Back Felt Mirror Mirror 12991-05 12991-05 Back Felt Back Felt

Mirror

Mirror

12991-06 12991-06 Fiber Form & Fiber Form & Front Fabric Front Fabric Mirror Mirror 12991-06 12991-06 Fiber Form & Fiber Form & Front Fabric Front Fabric Mirror Mirror 12991-06 12991-06 Back Felt **Back Felt** Mirror Mirror 12991-06 12991-06 Back Felt Back Felt Mirror Mirror



12991-08 12991-07 **Back Fabric** Back Fabric Mirror Mirror

12991-07

Fiber Form &

Front Felt Mirror


12991-08 Back Fabric Mirror 12991-08 Fiber Form & Front Felt Mirror Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.


12991-08 Fiber Form & Front Felt Mirror

12991-08 Back Fabric Mirror 12991-08 Fiber Form & Front Felt Mirror 12991-08 Fiber Form & Front Felt Mirror

MIRRORED PATTERNS



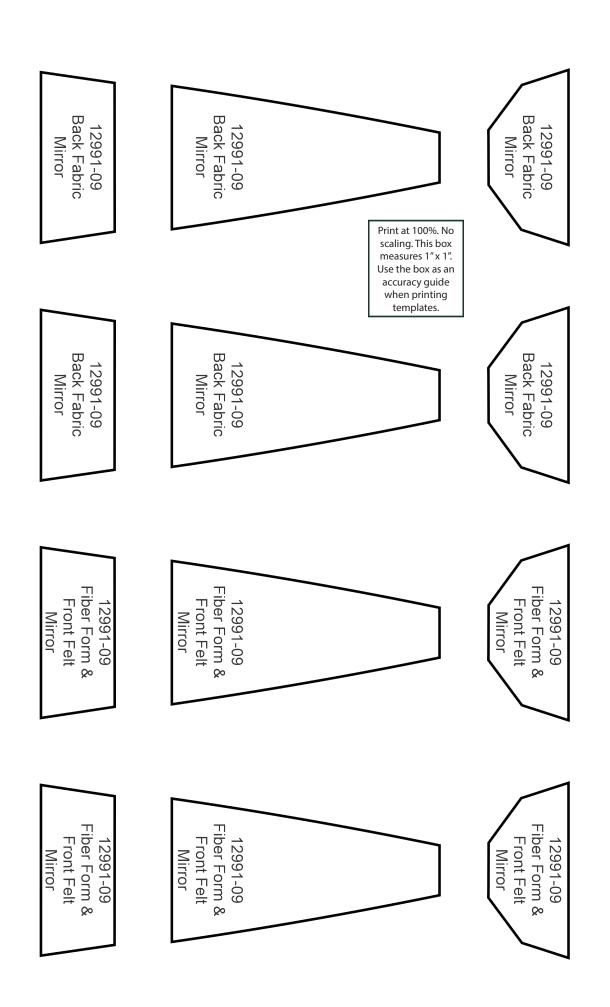

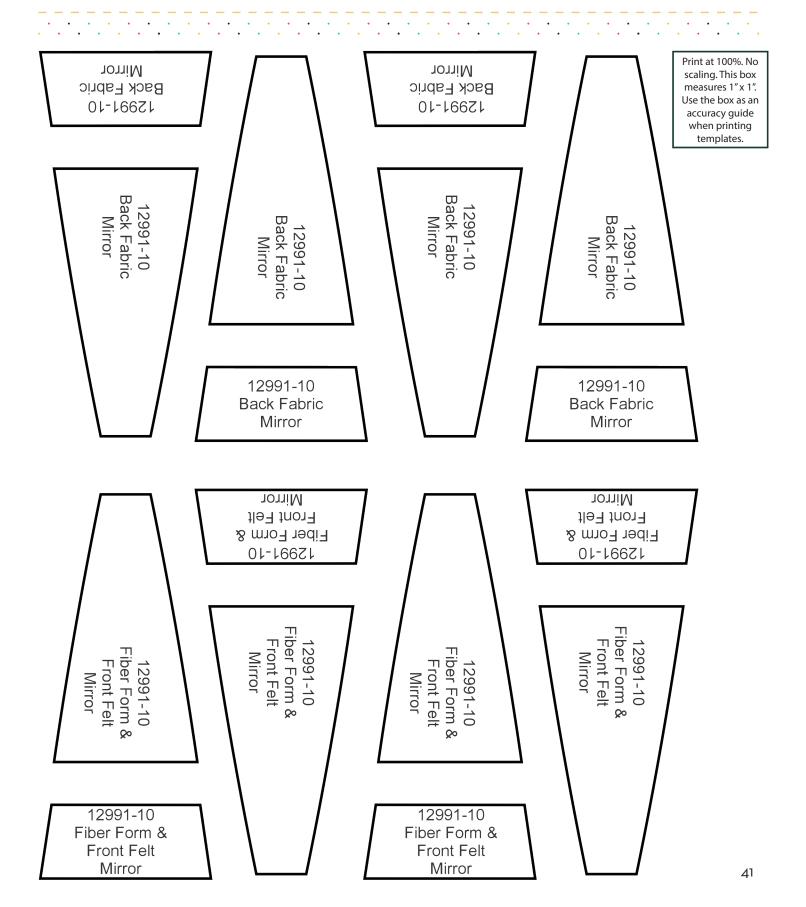

12991-11 12991-11 Fiber Form & Fiber Form & Front Felt Front Felt Mirror Mirror 12991-11 12991-11 Fiber Form & Fiber Form & Front Felt Front Felt Mirror Mirror 12991-11 12991-11 Back Fabric Back Fabric Mirror Mirror 12991-11 12991-11 Back Fabric Back Fabric Mirror Mirror

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12991-12 12991-12 Fiber Form & Fiber Form & Front Felt Front Felt Mirror Mirror 12991-12 12991-12 Fiber Form & Fiber Form & Front Felt Front Felt Mirror Mirror 12991-12 12991-12 Back Fabric Back Fabric Mirror Mirror 12991-12 12991-12 Back Fabric Back Fabric Mirror Mirror

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.