

Freestanding Perpetual Calendar



Collection No. 13028 1 Design/17 Files MATERIALS



Isacord Thread Colors

0010 Silky White

1030 Passion Fruit

2171 Blush

2532 Pretty in Pink

4952 Mystic Ocean

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fiber Form
- OESD Applique Fuse and Fix

Fabrics/Textiles

- Pink Quilter's Cotton
 - 1/2 yard
- Orange Quilter's Cotton
 1/3 yard
- Teal Quilter's Cotton
 1/3 yard
- Dark Pink Quilter's Cotton
 1/3 yard

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- · OESD Perfect Embroidery Press Cloth
- OESD Perfect Scoring Tool

- OESD Perfect Punch
- OESD MiniMat
- OESD Alligator Clamps
- OESD Button Clips
- Embroidery Needles 75/11 Sharp
- 1.5" Binder Rings (2)

Isacord Thread Colors

Per thread chart

SUMMARY





13028-01




Design Size: 6.66 X 5.96 in. Requires 1

13028-02



Design Size: 6.64 X 5.94 in. Requires 1

13028-03

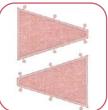

Design Size: 7.93 X 5.30 in. Requires 1

13028-04



Design Size: 6.11 X 4.54 in. Requires 1

13028-05



Design Size: 5.81 X 3.39 in. Requires 1

13028-06



Design Size: 5.81 X 3.39 in. Requires 1

13028-07



Design Size: 5.81 X 3.39 in. Requires 1

13028-08



Design Size: 5.81 X 3.39 in. Requires 1

SUMMARY



13028-09



Design Size: 5.81 X 3.39 in. Requires 1

13028-10



Design Size: 5.81 X 3.39 in. Requires 1

13028-11



Design Size: 5.81 X 3.39 in. Requires 1

13028-12





Design Size: 4.46 X 3.75 in. Requires 1

13028-13





Design Size: 4.46 X 3.75 in. Requires 1

13028-14



Design Size: 4.46 X 3.75 in. Requires 1

13028-15





Design Size: 4.46 \bar{X} 3.75 in. Requires 1

13028-16



November

Design Size: 4.46 X 3.75 in. Requires 1

13028-17





Design Size: 4.46 X 3.75 in. Requires 1

EMBROIDERY- DOUBLE-SIE



General Instructions

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, sample designs that best demonstrate the techniques are shown. Designs 13028-01, 13028-05, and 13028-12 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique techniques shown are pre-cut (Fiber Form) and cut in place (fabric). Pre-cut applique patterns are included at the end of the instructions.

The number cards are embroidered slightly differently than the calendar structure and month cards, even though all designs are double sided applique. The number cards will be stiffened with just StabilStick CutAway to reduce their bulk whereas the calendar structure pieces and month cards will be stiffened with Fiber Form and StabilStick CutAway to insure they keep their shape.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

Embroidery - Number Cards Double Sided Applique

Number Cards 1 FSA	13028-05
Number Cards 2 FSA	13028-06
Number Cards 3 FSA	13028-07
Number Cards 4 FSA	13028-08
Number Cards 5 FSA	13028-09
Number Cards 6 FSA	13028-10
Number Cards 7 FSA	13028-11


EMBROIDERY- NUMBER CARDS DOUBLE-SIDED APPLIQUE



Step 1

- The applique patterns are included at the end of the instructions. Cut the applique fabrics 1/4" - 1/2" larger than the applique patterns.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.



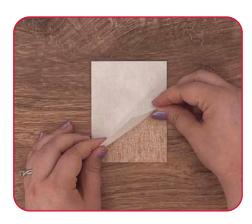

Step 2

 Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.




EMBROIDERY-

NUMBER CARDS DOUBLE-SIDED ADDI IQUE




Step 3

- Load the selected design into the machine.
- Example design is 13028-05.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Front Orange Fabric Placement Stitch.

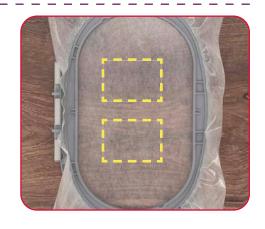


Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared orange applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

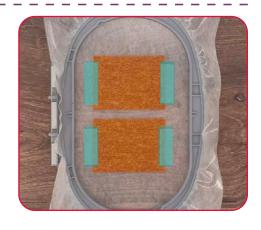

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

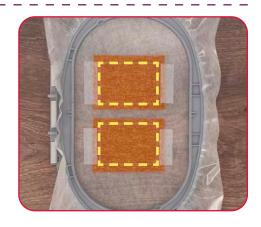

NUMBER CARDS DOUBLE-SIDED **EMBROIDER**




Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert **Embroidery Tape WashAway as a patch.**



Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Number.
- Stitch Machine Step 4, Number Outline.

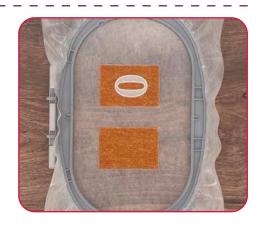

9

EMBROIDERY- NUMBER CARDS DOUBLE-SIDED



Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared orange applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 9

- · Return the hoop to the machine.
- Stitch Machine Step 5, Back Orange Fabric Cut Line and Tackdown.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



EMBROIDERY- NUMBER CARDS DOUBLE-SIDED APPLIQUE



Step 11

- · Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





Embroidery - Calendar Structure Double Sided Applique

Calendar Front Wall FSA 13028-01 Calendar Back Wall FSA 13028-02 Calendar Side Walls FSA 13028-03 Calendar Floor FSA 13028-04

Step 13

- Print the mirrored version of the Fiber Form applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" 1/2" outside the printed applique patterns.



- Cut the Fiber Form 1/4" 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10– 15 seconds for a secure fuse.





- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.



- Cut the prepared applique fabrics 1/4" 1/2" larger than the applique patterns.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.









Step 17

 Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

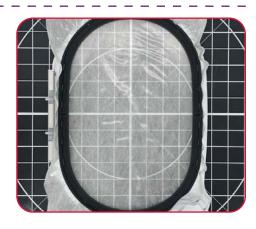

Step 18

- · Load the selected design into the machine.
- Example design is 13028-01.
- · Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Pink Front and Back Fabric Placement Stitch.

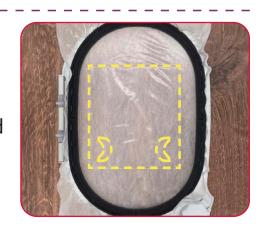





Step 19

- · Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- · Place the Fiber Form within the placement stitching.
- Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.



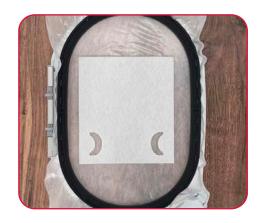

- Completely cover the Fiber Form with the prepared pink applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

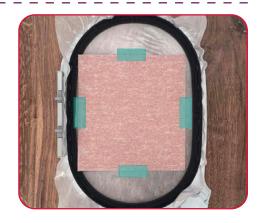




Step 21

- Turn the hoop over and place the prepared pink applique fabric, right side up, completely covering the placement stitch.
- · Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 22

- · Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

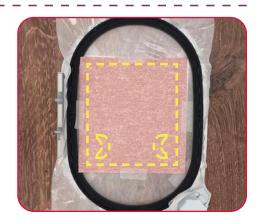

Step 23

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.





Step 24

• Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 25

- · Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





Embroidery - Month Cards Double Sided Applique

Month Cards 1 FSA	13028-12
Month Cards 2 FSA	13028-13
Month Cards 3 FSA	13028-14
Month Cards 4 FSA	13028-15
Month Cards 5 FSA	13028-16
Month Cards 6 FSA	13028-17

- Print the mirrored version of the Fiber Form applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" 1/2" outside the printed applique patterns.





- Cut the Fiber Form 1/4" 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10-15 seconds for a secure fuse.






- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.






- Cut the prepared applique fabrics 1/4" 1/2" larger than the applique patterns.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.

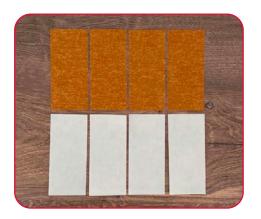




Step 31

 Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

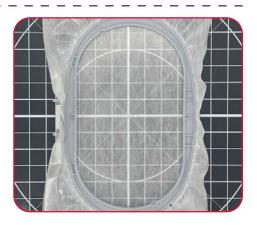



- Load the selected design into the machine.
- Example design is 13028-12.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Front Orange Fabric Placement Stitch.

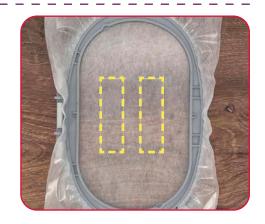


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.






- Completely cover the Fiber Form with the prepared orange applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

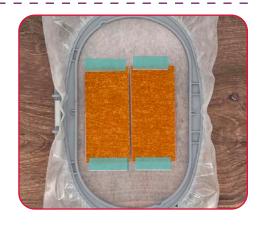


Step 35

- · Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

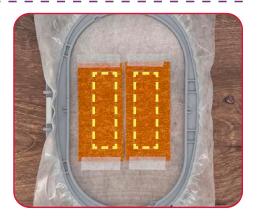

Step 36

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.

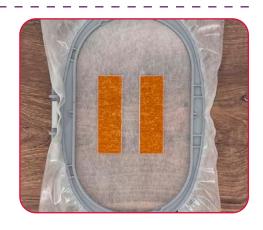

- Return the hoop to the machine.
- Stitch Machine Step 3, Text.



Step 38

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared orange applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



- Return the hoop to the machine.
- Stitch Machine Step 4, Back Orange Fabric Cut Line and Tackdown.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 41

- · Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





Step 43

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



Step 44

- Before assembly, use the OESD MiniMAT and the OESD Perfect Punch with the 3mm and 4mm attachments to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guides on pages 31 and 32.
- Tip: Take care to not cut the satin stitching.






Step 45

- Line up the Calendar Front Wall FSA (13028-01) and Calendar Back Wall FSA (13028-02) to connect at the top edge.
- Thread the sewing machine with matching thread on top and bobbin.
- · Stitch together using a multi-step zigzag stitch.
- Back stitch at the beginning and end to secure.
- Trim thread tails.
- · Set aside.
- Note: The 4mm eyelets are at the top of each design and will be the eyelets closest to the sewn edge.



Step 46

- Match the buttonettes on one Calendar Side Wall FSA (13028-03) to the eyelets of the Calendar Front and Back Walls.
- Use Alligator Clamps to pull each buttonette through the corresponding eyelet.
- · Repeat for other Calendar Side Wall.

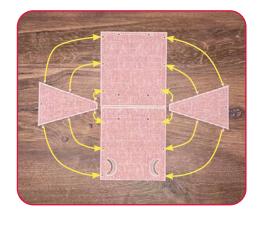






Step 47

- Match the buttonettes on the Calendar Floor FSA (13028-04) to the eyelets of the Calendar Front, Back and Side Walls.
- Pull each buttonette through the corresponding eyelet.

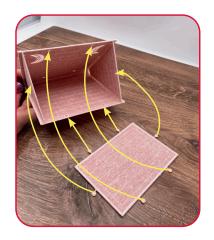



Step 48

Stack the number cards for the tens digits, face up, in the following order: Blank, One, Two, Three.





Step 49

- Stack the number cards for the ones digits, face up, in the following order: Zero, One, Two, Three, Four, Five, Six, Seven, Eight, Nine.
- Note: It is a personal preference whether the Zero number card goes at the beginning or end of the stack.



Step 50

- Thread the 1.5" binder ring through the top left eyelets, from the back to the front. The hinge will be on the back of the stand.
- Thread the stack of tens number cards with the Three number card against the stand back. The back side of the blank card will be what shows on the back of the stand.
- · Close the binder ring.







Step 51


- Thread the other 1.5" binder ring through the top right eyelets, from the back to the front. The hinge will be on the back of the stand.
- Thread the stack of ones number cards with the Nine number card against the stand. The back side of the One card will be what shows on the back of the stand.
- Close the binder ring.





Step 52

Slide the current Month Card (13028-12 through 13028-17) into the front slots.

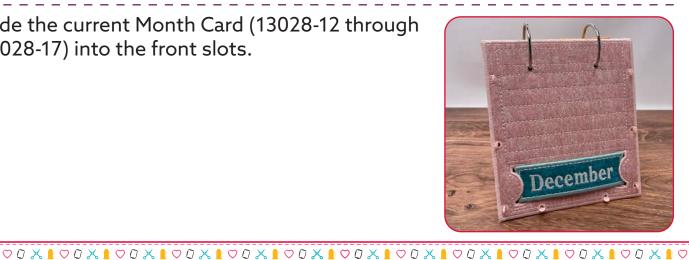



Step 53


- Flip the number cards to show the current date.
- · The calendar is complete. Enjoy!




PUNCH TOOL GUIDES




13028-01

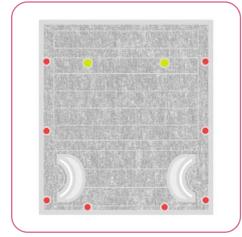


13028-02

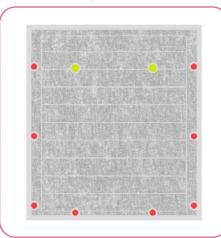


13028-03

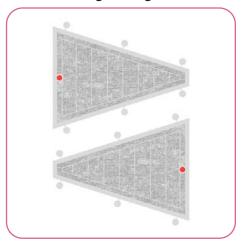


13028-05

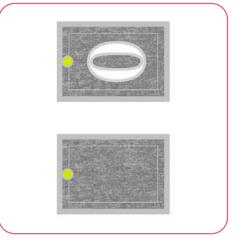

13028-06

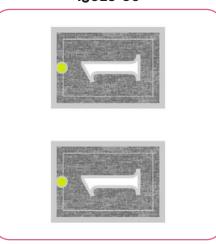

13028-07

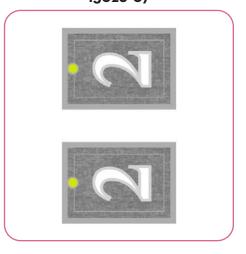






= 4 MM

CRAFT KNIFE


PUNCH TOOL GUIDES




13028-08

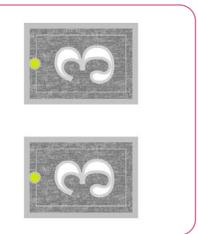


13028-09

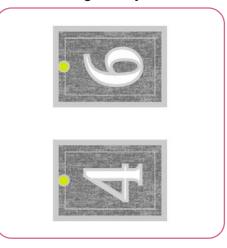

13028-10

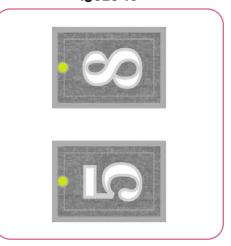


13028-11

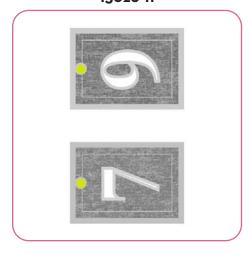




ATTENTION Iment, any page scaling or page fit

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

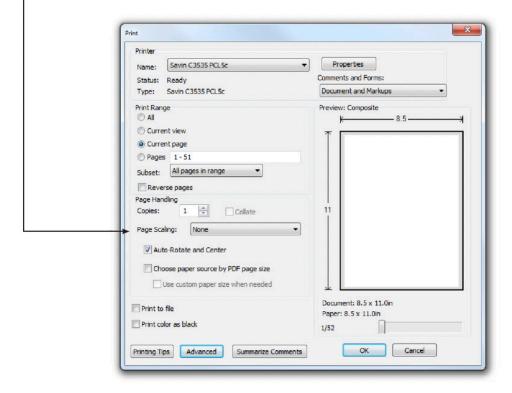


TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

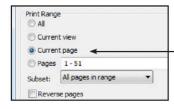

APPLIQUE PATTERNS O SD PREMIER


Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

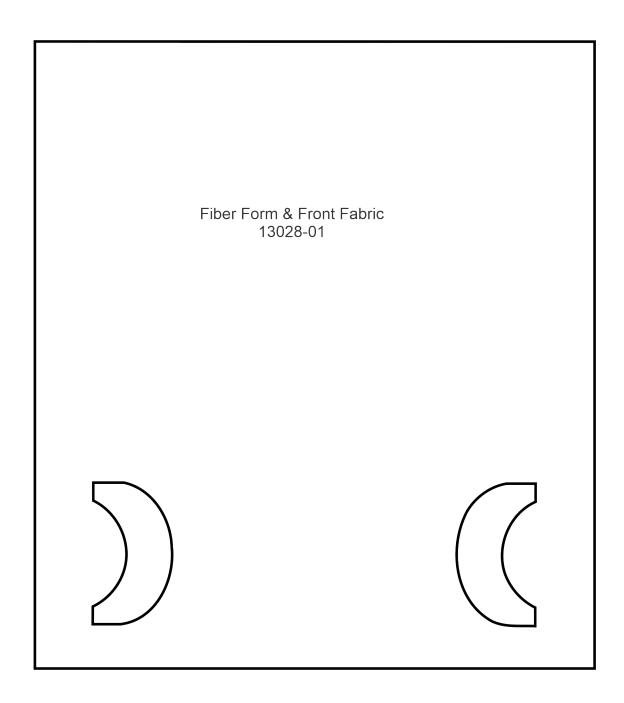

APPLIQUE PATTERNS OSSI



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

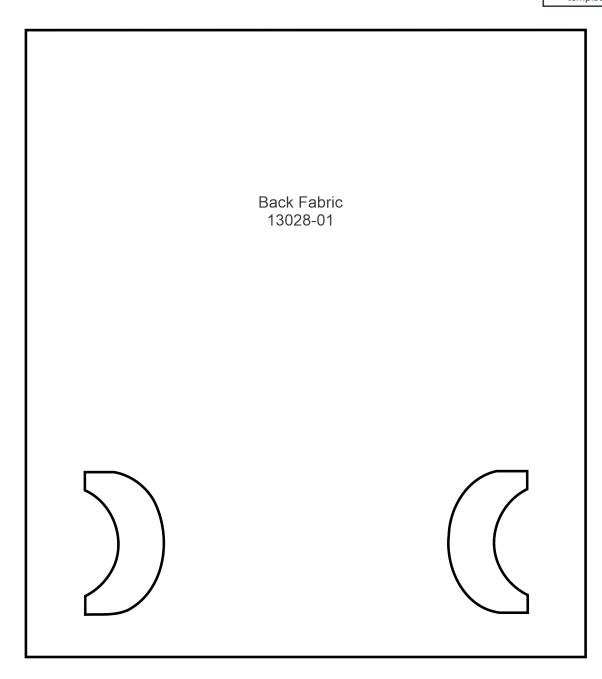

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-02



B	Back Fabric 13028-02

scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. Fiber Form & Front Fabric 13028-03 Fiber Form & Front Fabric 13028-03

Print at 100%. No

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. Back Fabric 13028-03 **Back Fabric** 13028-03

Fiber Form & Front Fabric 13028-04 Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-05 Back Fabric 13028-05

Front Fabric 13028-05

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-06 Back Fabric 13028-06

Front Fabric 13028-06

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-07

Back Fabric 13028-07

Front Fabric 13028-07

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-08

Back Fabric 13028-08

Front Fabric 13028-08

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-09 Back Fabric 13028-09

Front Fabric 13028-09

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-10

Back Fabric 13028-10

Front Fabric 13028-10

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

Front Fabric 13028-11

Back Fabric 13028-11

Front Fabric 13028-11

APPLIQUE PATTERNS O SD PREMIER

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-12

Fiber Form & Front Fabric 13028-12

Back Fabric 13028-12

APPLIQUE PATTERNS O



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-13

Fiber Form & Front Fabric 13028-13

Back Fabric 13028-13

APPLIQUE PATTERNS O SD PREMIER

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-14

Fiber Form & Front Fabric 13028-14

Back Fabric 13028-14

APPLIQUE PATTERNS (



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-15

Fiber Form & Front Fabric 13028-15

Back Fabric 13028-15

APPLIQUE PATTERNS O SD PREMIER

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric
13028-16
13028-16
Back Fabric
13028-16
13028-16

APPLIQUE PATTERNS O




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-17


Fiber Form & Front Fabric 13028-17

Back Fabric 13028-17



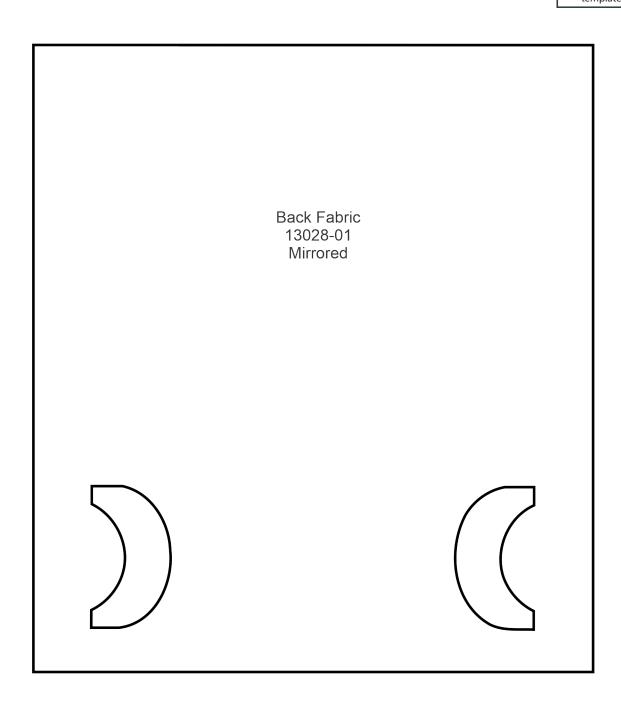



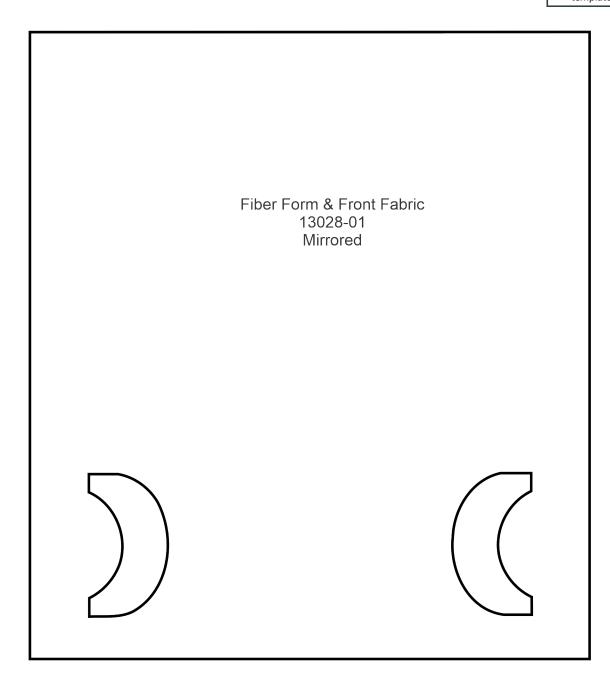

Back Fabric	
13028-02 Mirrored	

Fiber Form & Front Fabric 13028-02 Mirrored

MIRRORED PATTERNS O SD PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. **Back Fabric** 13028-03 Mirrored Back Fabric 13028-03 Mirrored

MIRRORED PATTERNS O SD PREMIER COLLECTION

Fiber Form & Front Fabric 13028-03 Mirrored Print at 100%. No scaling. This box measures 1"x 1".
Use the box as an accuracy guide when printing templates.

Fiber Form & Front Fabric 13028-03 Mirrored Back Fabric 13028-04 Mirrored Fiber Form & Front Fabric

13028-04 Mirrored



Back Fabric 13028-05 Mirrored Front Fabric 13028-05 Mirrored

Back Fabric 13028-05 Mirrored Front Fabric 13028-05 Mirrored



Back Fabric 13028-06 Mirrored Front Fabric 13028-06 Mirrored

Back Fabric 13028-06 Mirrored Front Fabric 13028-06 Mirrored



Back Fabric 13028-07 Mirrored Front Fabric 13028-07 Mirrored

Back Fabric 13028-07 Mirrored Front Fabric 13028-07 Mirrored



Back Fabric 13028-08 Mirrored Front Fabric 13028-08 Mirrored

Back Fabric 13028-08 Mirrored Front Fabric 13028-08 Mirrored



Back Fabric 13028-09 Mirrored Front Fabric 13028-09 Mirrored

Back Fabric 13028-09 Mirrored Front Fabric 13028-09 Mirrored



Back Fabric 13028-10 Mirrored Front Fabric 13028-10 Mirrored

Back Fabric 13028-10 Mirrored Front Fabric 13028-10 Mirrored



Back Fabric 13028-11 Mirrored Front Fabric 13028-11 Mirrored

Back Fabric 13028-11 Mirrored Front Fabric 13028-11 Mirrored



Back Fabric 13028-12 Mirrored Back Fabric 13028-12

Mirrored

Fiber Form & Front Fabric 13028-12

Mirrored

Fiber Form & Front Fabric 13028-12 Mirrored



Back Fabric 13028-13

Mirrored

Back Fabric 13028-13

Mirrored

Fiber Form & Front Fabric 13028-13

Mirrored

Fiber Form & Front Fabric 13028-13 Mirrored



Back Fabric 13028-14 Mirrored Back Fabric 13028-14

Mirrored

Fiber Form & Front Fabric 13028-14

T3028-14 Mirrored Fiber Form & Front Fabric 13028-14 Mirrored



Back Fabric 13028-15 Mirrored Back Fabric 13028-15

Mirrored

Fiber Form & Front Fabric 13028-15

Mirrored

Fiber Form & Front Fabric 13028-15 Mirrored



Back Fabric 13028-16 Mirrored Back Fabric 13028-16 Mirrored Fiber Form & Front Fabric 13028-16 Mirrored

Fiber Form & Front Fabric 13028-16 Mirrored



Back Fabric 13028-17 Mirrored Back Fabric 13028-17 Mirrored Fiber Form & Front Fabric 13028-17

Mirrored

Fiber Form & Front Fabric 13028-17 Mirrored