Freestanding Christmas Tree Farm



Collection No. 13037
1 Design/19 Files

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

MATERIALS

Isacord Thread Colors

0015 White **(Requires 3 Spools)**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

MATERIALS

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD SoftWeb
- OESD Fiber Form
- OESD Applique Fuse and Fix

Fabrics/Textiles

- White Quilter's Cotton

  1/2 yard
- Cream Quilter's Cotton

  1/2 yard

Alternate Color Way

- Red Quilter's Cotton

  1/2 yard
- Green Quilter's Cotton

  1/2 yard

Note: Fabric amounts are estimates and may result in overages. Prewash red fabric to reduce the possibility of the dye running after the project is embroidered.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

MATERIALS

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Scoring Tool
- OESD Perfect Punch Tool
- OESD MiniMAT
- OESD Alligator Clamps
- OESD Button Clips
- OESD Pixie Lights (Original Warm White or Multi-Colored)
- Craft Knife
- (4) 3/16″ x 5″ Dowel Rods
- Embroidery Needle Sharp 75/11 (FSA)
- Embroidery Needle Ballpoint 80/12 (FSL)

Thread Colors

- Per thread chart
- 3 spools of Isacord 0015 White
- Alternate Color Way

  Isacord 0670 Cream

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

SUMMARY




Completed Size:

Tree Farm: 5 1/2″ L x 5″ W x 7″ H


Tree Yard: 6 1/2″ L x 7″ W x 5″ H

13037-01

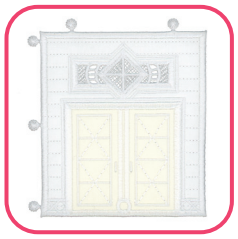


Design Size:
4.41 X 4.04 in.
Requires 1

13037-02

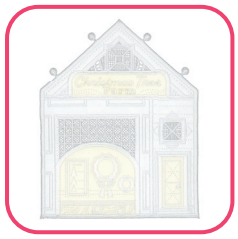


Design Size:
6.37 X 5.07 in.
Requires 1

13037-03

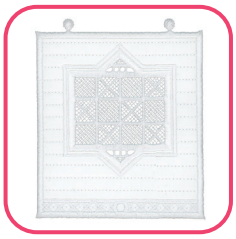


Design Size:
4.42 X 3.74 in.
Requires 1

13037-04

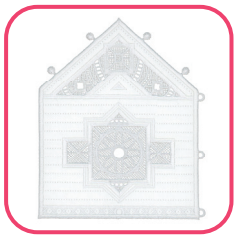


Design Size:
6.36 X 5.25 in.
Requires 1

13037-05

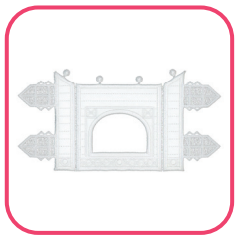


Design Size:
7.30 X 3.71 in.
Requires 1

13037-06

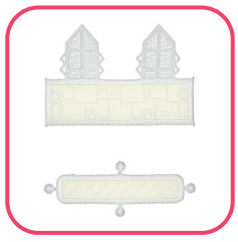

Design Size:
4.64 X 3.73 in.
Requires 1

13037-07

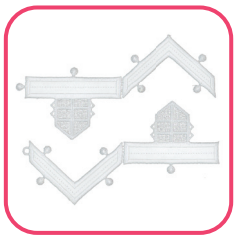


Design Size:
6.26 X 5.36 in.
Requires 1

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

SUMMARY


13037-08

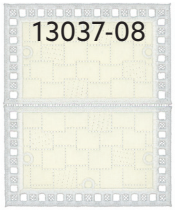

Design Size:
4.99 X 4.11 in.
Requires 1
OR (13037-09)


OR

13037-09

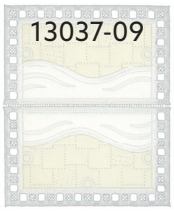

Design Size:
4.99 X 4.11 in.
Requires 1
OR (13037-08)

13037-10

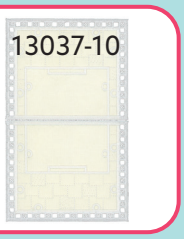

Design Size:
7.94 X 4.88 in.
Requires 1
OR (13037-11)


OR

13037-11



Design Size:
7.94 X 4.88 in.
Requires 1
OR (13037-10)

13037-12

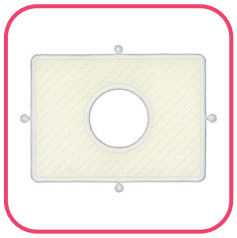


Design Size:
5.67 X 4.34 in.
Requires 1

13037-13




Design Size:
5.80 X 4.56 in.
Requires 1

13037-14

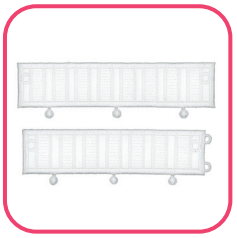

Design Size:
5.48 X 3.49 in.
Requires 1

13037-15

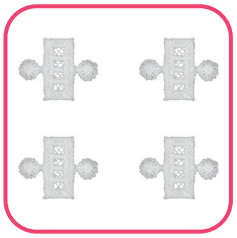

Design Size:
1.88 X 2.38 in.
Requires 1

13037-16




Design Size:
6.90 X 6.29 in.
Requires 1

13037-17



Design Size:
7.02 X 5.51 in.
Stitch as many as desired. Shown is 2 of each.

13037-18

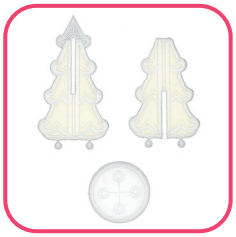

Design Size:
6.57 X 5.17 in.
Stitch as many as desired. Shown is 2 of each.

13037-19



Design Size:
5.90 X 5.31 in.
Stitch as many as desired. Shown is 2 of each.

Choices include roof designs with or without snow.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

SUMMARY

Alternate Color Way



Completed Size:

Tree Farm: 5 1/2″ L x 5″ W x 7″ H

Tree Yard: 6 1/2″ L x 7″ W x 5″ H

To make the alternate color way, make the following changes:

White Quilter's Cotton	→	Red Quilter's Cotton
Cream Quilter's Cotton	→	Green Quilter's Cotton
Isacord 0015 White	→	Isacord 0670 Cream

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

GENERAL INSTRUCTIONS

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, sample designs that best demonstrate the techniques are shown. Designs 13037-02 and 13037-17 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique techniques shown are pre-cut (Fiber Form) and cut in place (fabric). Pre-cut applique patterns are included at the end of the instructions.

All designs are stitched with matching thread, top and bottom.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.


Embroidery - Single Sided Applique

Tree Farm Barn Door Side Wall FSA 13037-01
Tree Farm Front Wall FSA 13037-02
Tree Farm Window Side Wall FSA 13037-03
Tree Farm Back Wall FSA 13037-04
Tree Farm Cashier Walls FSA 13037-05
Tree Farm Cashier Roof & Floor FSA 13037-06
Tree Farm Upper Walls FSA 13037-07
Tree Farm Upper Roof FSA 13037-08
Tree Farm Upper Roof With Snow FSA 13037-09
Tree Farm Roof FSA 13037-10
Tree Farm Roof With Snow FSA 13037-11
Tree Farm Foundation FSA 13037-12
Tree Yard Snow FSA 13037-16

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 1


- Print the mirrored version of the applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" – 1/2" outside the printed applique patterns.

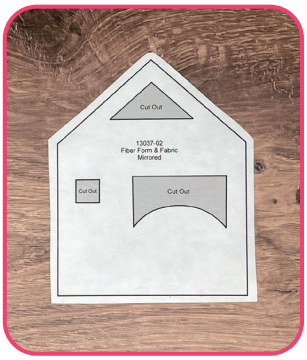

Step 2

- Cut the Fiber Form 1/4" – 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10–15 seconds for a secure fuse.



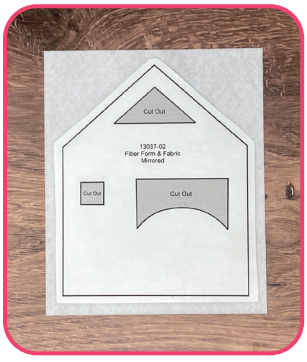

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.


Step 3

- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.



Step 4

- Cut the applique fabrics 1/4″ – 1/2″ larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all applique fabrics to provide body to the fabric.

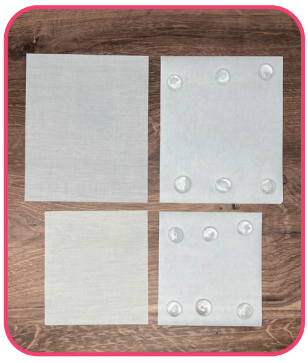




It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.


Step 5

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

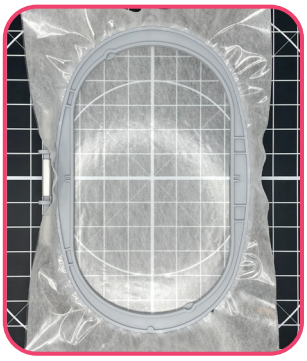

Step 6

- Load the selected design into the machine.
- Example design is 13037-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/White Fabric Placement Stitch.

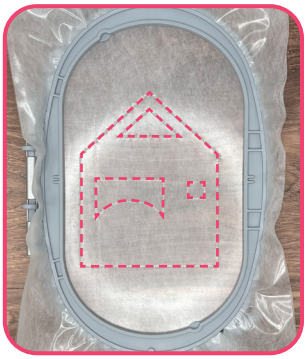

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.


Tip: Applique Fuse and Fix is repositionable.






Step 8

- Remove the paper backing off the SoftWeb on the white applique fabric.
- Completely cover the Fiber Form with the prepared white applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

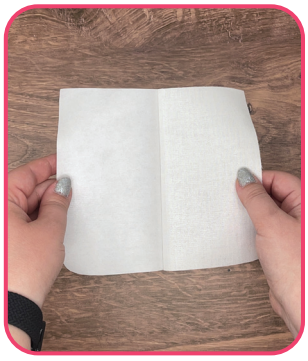


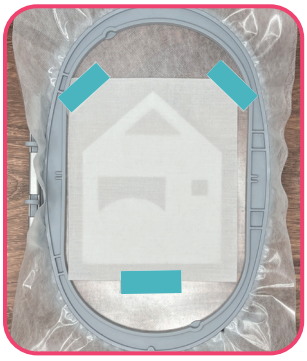

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 9

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

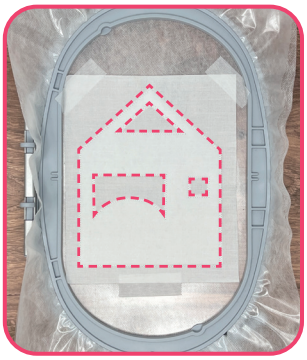

Step 10


- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



Step 11


- Return the hoop to the machine.
- Stitch Machine Step 3, Cream Fabric Placement Stitch.

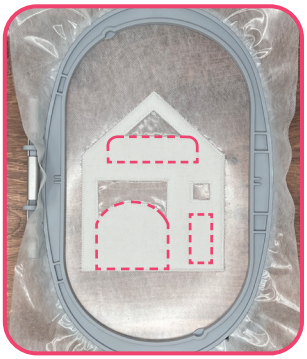

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.


Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the cream applique fabric.
- Completely cover the placement stitch with the prepared cream applique fabric.
- Tape in place to secure.

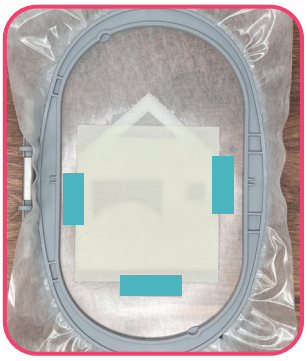

Step 13

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

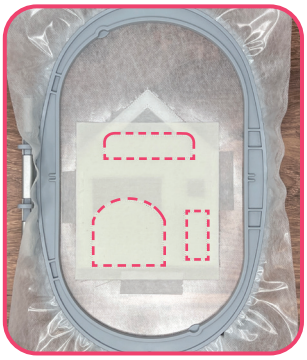

Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 15

- Return the hoop to the machine.
- Stitch Machine Step 5, Cover Stitch and Detail **with matching bobbin thread.**



Step 16

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" – 1/2" outside the design.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Embroidery - Double Sided Applique

Tree Yard Fence 1 FSA 13037-13
Tree Yard Fence 2 FSA 13037-14
Tree For Sale 1 FSA 13037-17
Tree For Sale 2 FSA 13037-18
Tree For Sale 3 FSA 13037-19

Step 17

- Print the mirrored version of the applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" – 1/2" outside the printed applique patterns.



Step 18

- Cut the Fiber Form 1/4" – 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10–15 seconds for a secure fuse.





It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.


Step 19

- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.



Step 20

- Cut the prepared applique fabrics 1/4″ – 1/2″ larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all applique fabrics to provide body to the fabric.

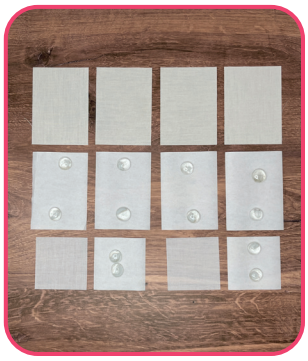




It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 21

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

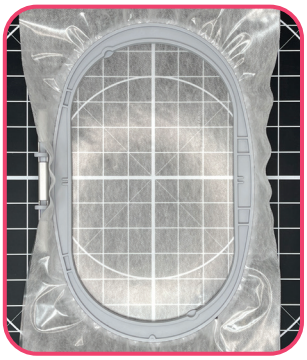

Step 22

- Load the selected design into the machine.
- Example design is 13037-17.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Front and Back Cream Fabric Placement Stitch.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 23

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.

Tip: Applique Fuse and Fix is repositionable.





Step 24

- Remove the paper backing off the SoftWeb on the cream applique fabric.
- Completely cover the Fiber Form with the prepared cream applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.





It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 25

- Turn the hoop over and place the prepared cream applique fabric right side up, completely covering the placement stitch.
- Carefully tape to secure.

Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 26

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



Step 27

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 28

- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 29

- Return the hoop to the machine.
- Repeat Steps 22 - 28 for Machine Steps 3 – 6. The trees are cream fabric and the base is white fabric.





Step 30

- Return the hoop to the machine.
- Stitch Machine Step 7, Cover Stitch and Detail **with matching bobbin thread.**



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 31

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" – 1/2" outside the design.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

GENERAL FREESTANDING LACE GUIDE

Design

- Tree Yard Fence Braces FSL 13037-15

Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

Notion/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool

Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

Instructions

Step 1 - Hoop
For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid.

For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

Step 2 - Embroider
Stitch the design per the thread chart with matching thread in the bobbin at each color change.

When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

Step 3 - Rinse
Rinse remaining stabilizer out in warm running water.

For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky.

For softer lace, rinse until all traces of the stabilizer is removed.

Step 4 - Dry
Lay right side down flat on a non-stick surface, such as a cookie rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl.

Let the pieces dry completely before proceeding with any assembly.

Step 5 - Press
Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

Step 6 – Assemble Structure
Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.

Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.

Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets.

Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

Helpful Tips

Limp Lace
If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

Eyelets Too Small
If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

Button Clips
During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether.
Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process.
Remove the Button Clips when the assembly is complete.

Alternative Construction Option
In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside.
Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette.
Pull the buttonette to the wrong side of the lace.
Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be place on the completed buttonette(s) to prevent them from pulling out of the eyelet.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY

Step 32

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.




Note: Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.

Step 33

- Before assembly, use the OESD MiniMAT and the OESD Perfect Punch Tool with the 3mm and 4mm attachments to create the eyelets indicated in the diagrams.
- Use the OESD MiniMAT and a craft knife to cut through all the layers of the tab entries.
- Reference the Punch Tool Guide on pages 36-37.

Tip: Take care to not cut the satin stitching.



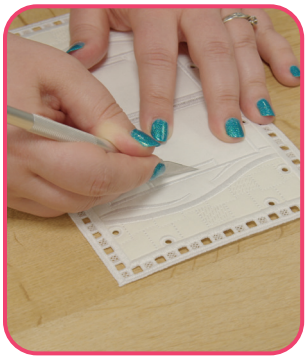


It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY


Step 34

- Line up the Tree Farm Barn Door Side Wall FSA (13037-01), Tree Farm Front Wall FSA (13037-02), Tree Farm Window Side Wall FSA (13037-03), and Tree Farm Back Wall FSA (13037-04) to connect.
- Thread the sewing machine with matching thread on top and bobbin.
- Stitch together using a multi-step zigzag stitch.
- Back stitch at the beginning and end to secure.
- Trim thread tails.
- Set aside.

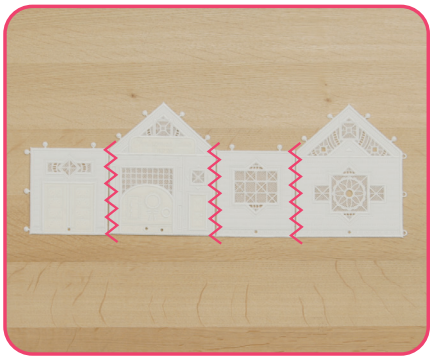

Step 35

- Line up the Tree Farm Upper Walls FSA (13037-07) to connect.
- Stitch together with a multi-step zigzag stitch.
- Set aside

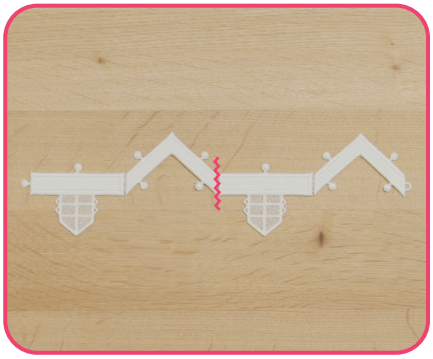


It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY


Step 36


- Line up the Tree Yard Fence 1 FSA (13037-13) and Tree Yard Fence 2 FSA (13037-14) to connect. The gate piece will be in the second position from the left.
- Stitch together with a multi-step zigzag stitch.
- Set aside.

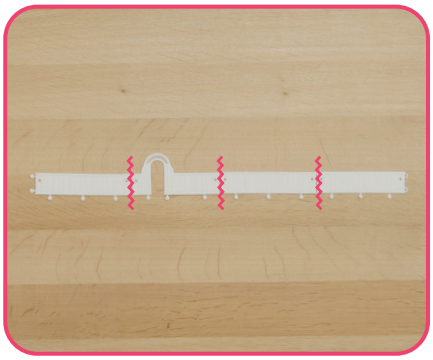

Step 37

- Match the buttonettes on top of the Tree Farm Cashier Walls FSA (13037-05) to the eyelets on the roof piece of the Tree Farm Cashier Roof & Floor FSA (13037-06).
- Pull the buttonettes through the corresponding eyelets using Alligator Clamps.

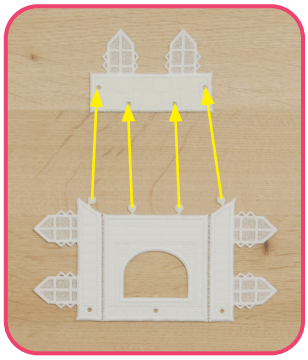

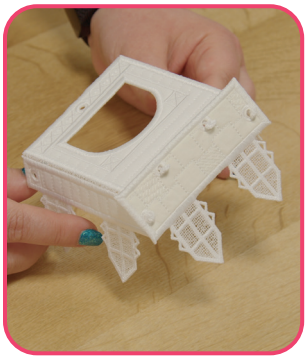



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY

Step 38

- Match the buttonettes on the Tree Farm Cashier Floor to the eyelets on the bottom of the Tree Farm Cashier Walls.
- Pull the buttonettes through the corresponding eyelets.

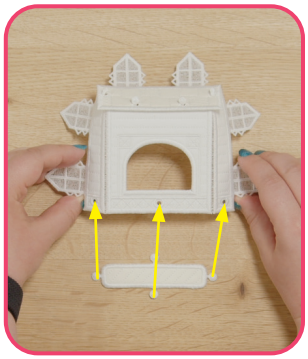


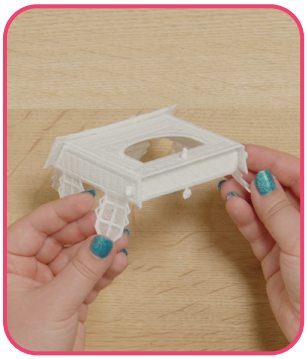


Step 39

- Insert the locking tabs of the Tree Farm Cashier Walls into the tab entries of the Tree Farm Front Wall.
- Match the buttonette on the Tree Farm Cashier Floor to the eyelet on the bottom of the Tree Farm Front Wall.
- Pull the buttonette through the corresponding eyelet.

Tip: The Tree Farm Cashier Floor will be right side up.

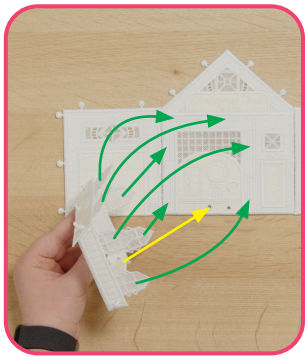


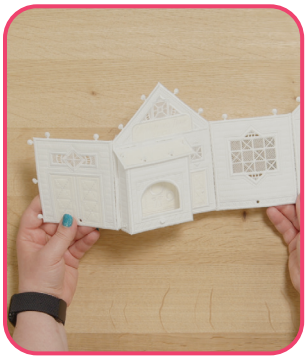


It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 40

- Match the side buttonette of the Upper Walls to the corresponding eyelet to create a square.
- Pull the buttonette through the corresponding eyelet.

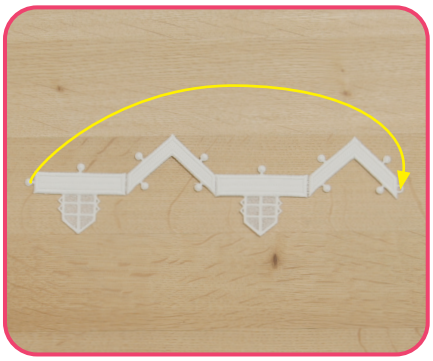


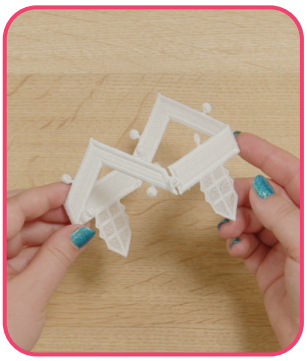


Step 41

- Match the top buttonettes on the Upper Walls to the corresponding eyelets on the Tree Farm Upper Roof FSA (13037-08).
- Pull the buttonettes through the corresponding eyelets.

Note: Tree Farm Upper Roof With Snow FSA (13037-09) can be used instead of Tree Farm Upper Roof FSA (13037-08).

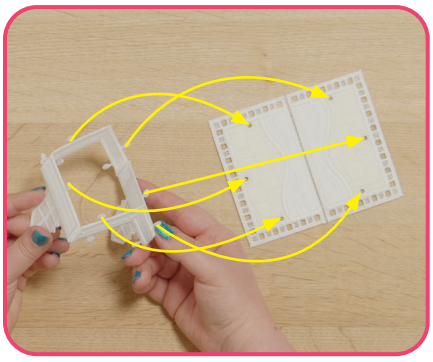

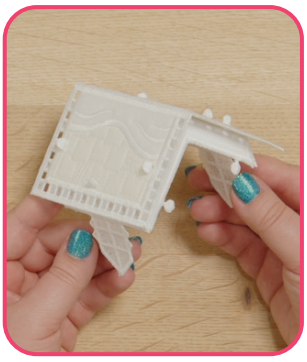



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 42

- Match the bottom buttonettes on the Upper Walls to the eyelets of the Tree Farm Roof FSA (13037-10).
- Pull the buttonettes through the corresponding eyelets.
- Insert the locking tabs of the Upper Walls into the tab entries of Tree Farm Roof FSA.


Note: Tree Farm Roof With Snow FSA (13037-11) can be used instead of Tree Farm Roof FSA (13037-10).

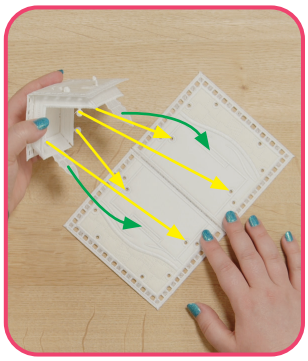


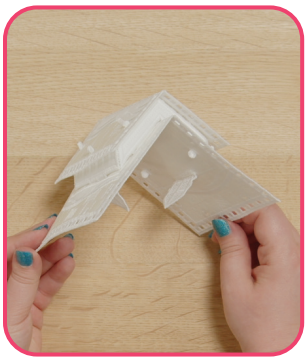

Step 43

- Match the buttonettes on the Tree Farm Barn Door Side to the corresponding eyelets on the Tree Farm Back Wall.
- Pull the buttonettes through the corresponding eyelets.

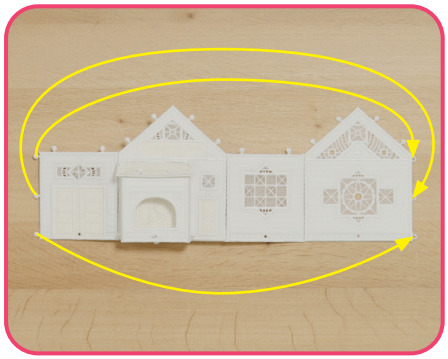


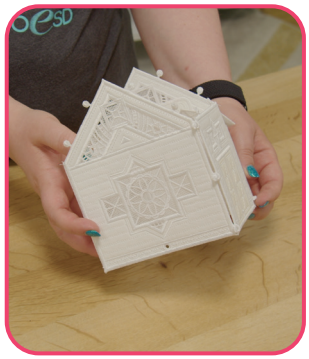

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.



Step 44

- Match the buttonettes of the Tree Farm Front, Sides, and Back Walls to the corresponding eyelets on the Tree Farm Roof.
- Pull the buttonettes through the corresponding eyelets.

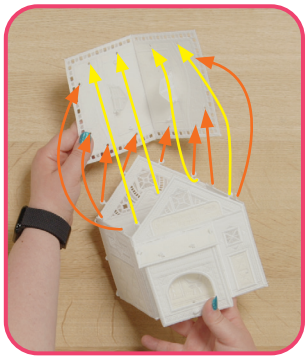


Step 45


- Match the buttonettes of the Tree Farm Foundation FSA (13037-12) to the corresponding eyelets on the bottom of the Tree Farm Front, Sides, and Back Walls.
- Pull the buttonettes through the corresponding eyelets.

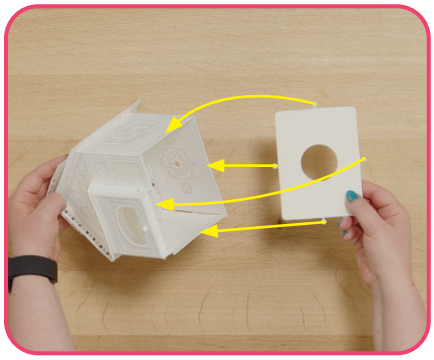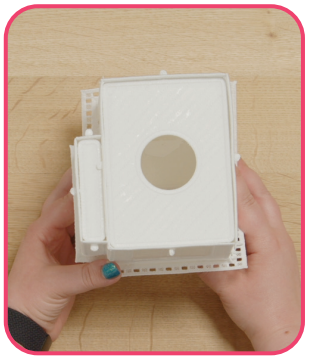



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 46


- Match the buttonettes on the side of the Tree Yard Fence to the corresponding eyelets.
- Pull the buttonettes through the corresponding eyelets.

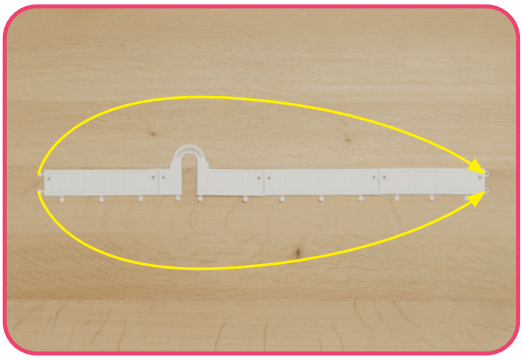


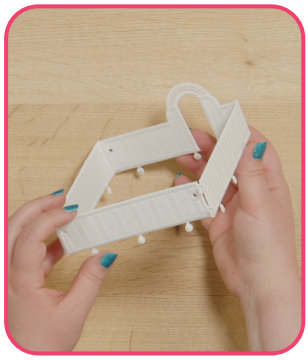

Step 47

- On the inside of all four Tree Yard Fence corners, match the buttonettes of the Tree Yard Fence Braces FSL (13037-15) to the corresponding Tree Yard Fence eyelets.
- Pull the buttonettes through the corresponding eyelets.

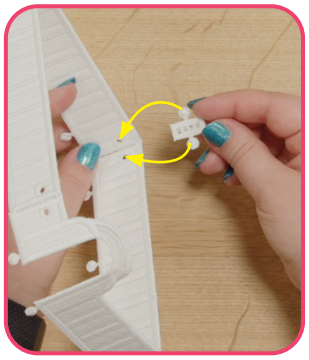

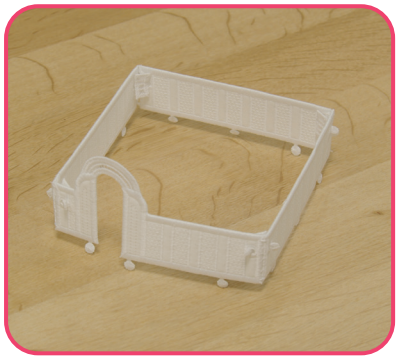



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 48

- Match the buttonettes on the bottom of the Tree Yard Fence to the corresponding eyelets on the Tree Yard Snow FSA (13037-16).
- Pull the buttonettes through the corresponding eyelets.


Tip: The edge of the snow where the middle eyelet is not centered is where the gate of the fence attaches.

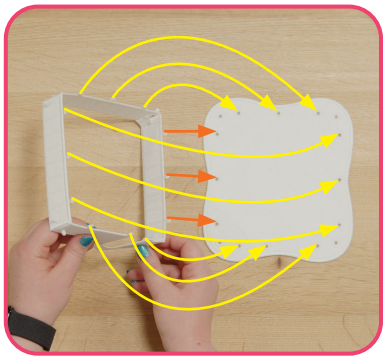


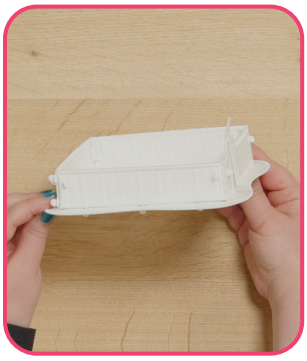

Step 49

- Slide the open Tree For Sale 1 FSA (13037-17) piece through the opening on the closed Tree For Sale 1 as shown.

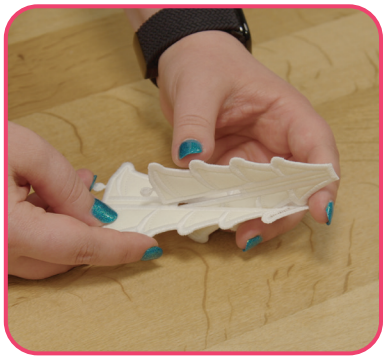

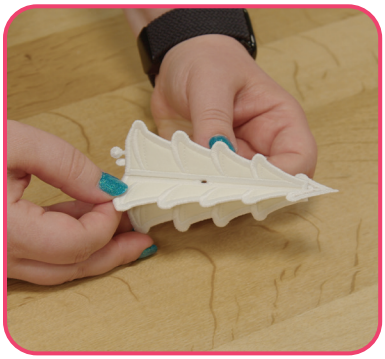



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY

Step 50

- Match the buttonettes on the Trees For Sale 1 to the corresponding eyelets.
- Pull the buttonettes through the corresponding eyelets.

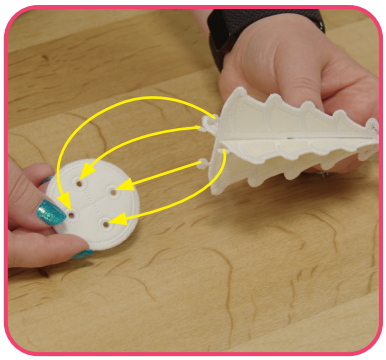

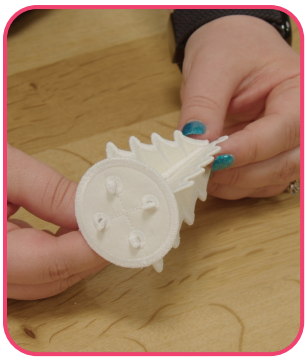

Step 51


- Repeat Steps 49 and 50 for all Trees for Sale files (13037-17 through 13037-19).




It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

Step 52


- In the four corners of the Tree Yard Fence, insert a 3/16″ dowel rod between the fence and the fence brace. The dowel rod will fit in the corner eyelet to give additional stability.

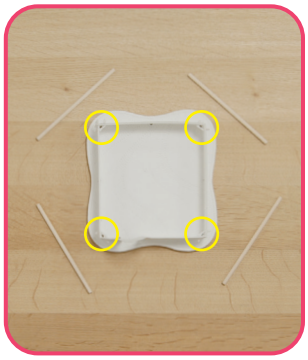

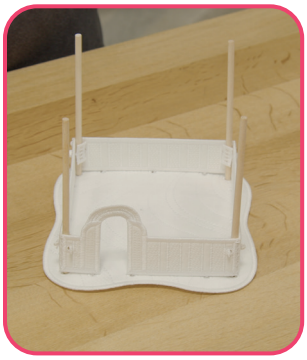

Step 53

- Wrap Pixie Lights around the dowel rods to create string light appearance.

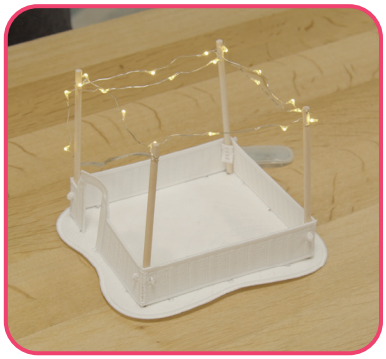

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

ASSEMBLY

Step 54


- Place the Trees for Sale inside the fence.
- The project is complete. Enjoy!



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

PUNCH TOOL GUIDE


13037-01

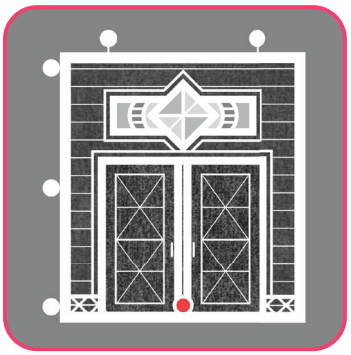

13037-02




13037-03

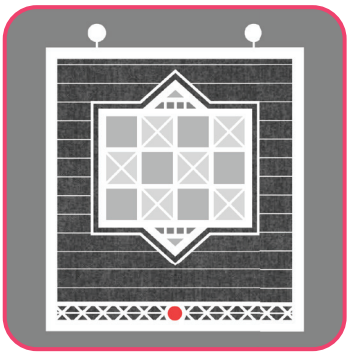


13037-04




13037-05

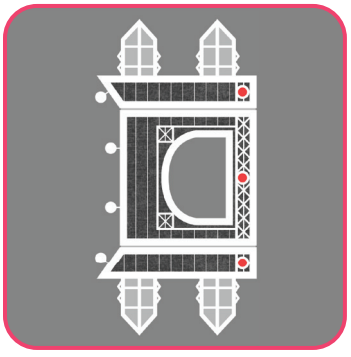


13037-06

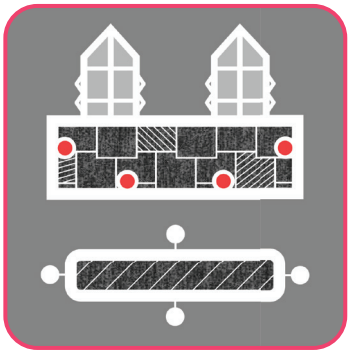

13037-08

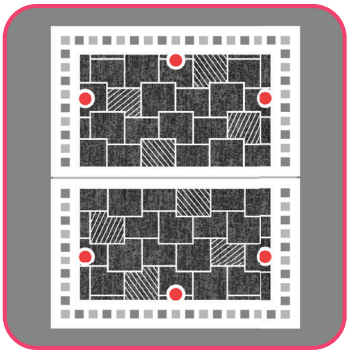

13037-09

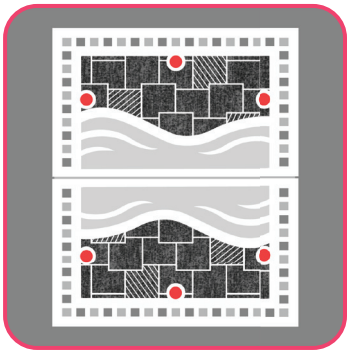

= 2 MM

= 3 MM


= 4 MM

CRAFT KNIFE


It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

PUNCH TOOL GUIDE

13037-10

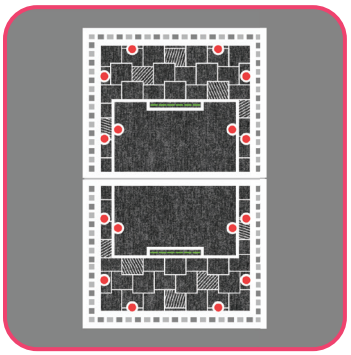


13037-11

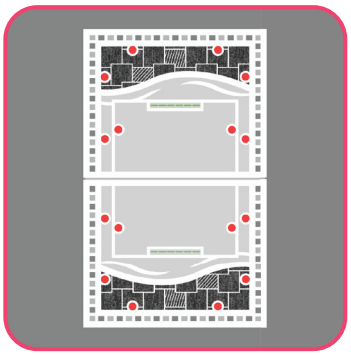


13037-13



13037-14

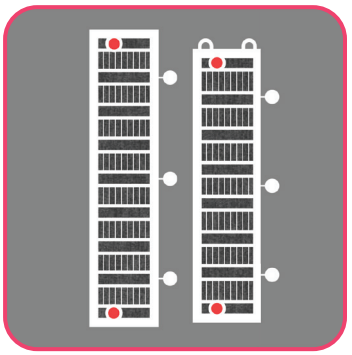

13037-16

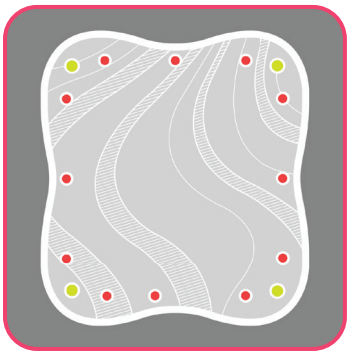

13037-17



13037-18



13037-19



= 2 MM

= 3 MM

= 4 MM


CRAFT KNIFE

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

PRINTING INSTRUCTIONS


ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

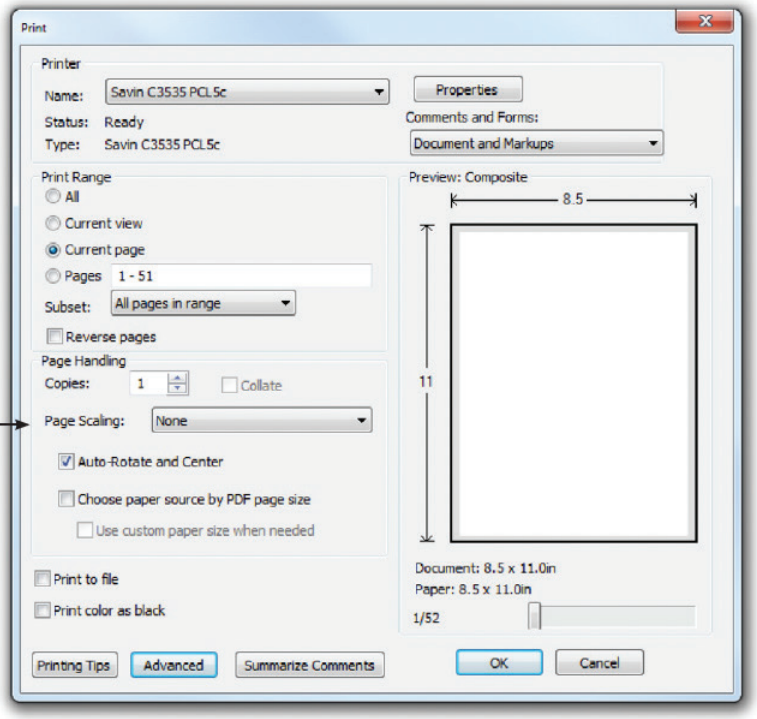

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

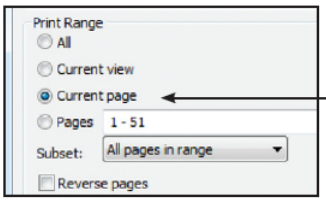


It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2026 OESD, LLC. All rights reserved.

APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

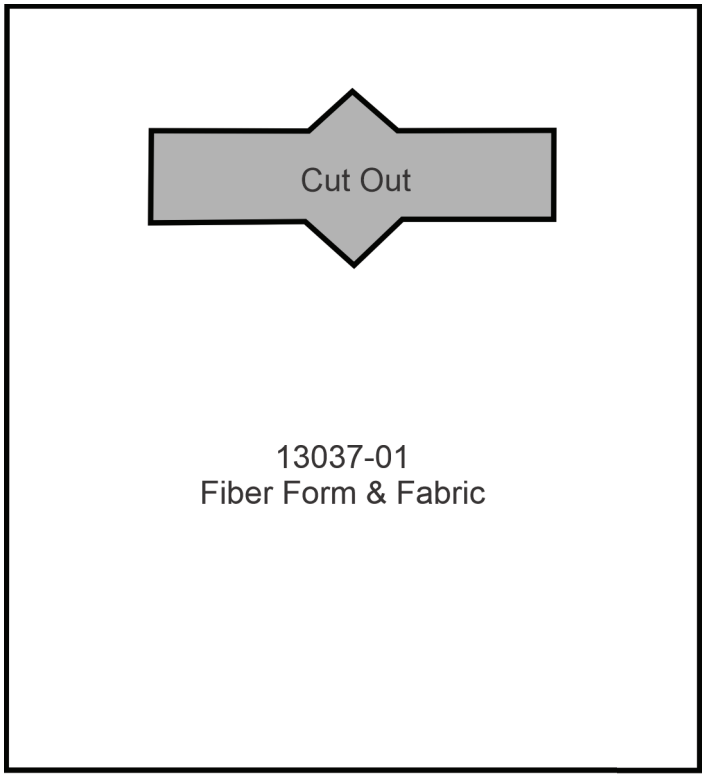

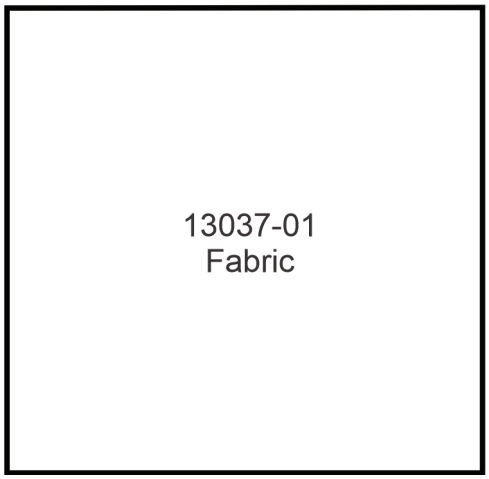

APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

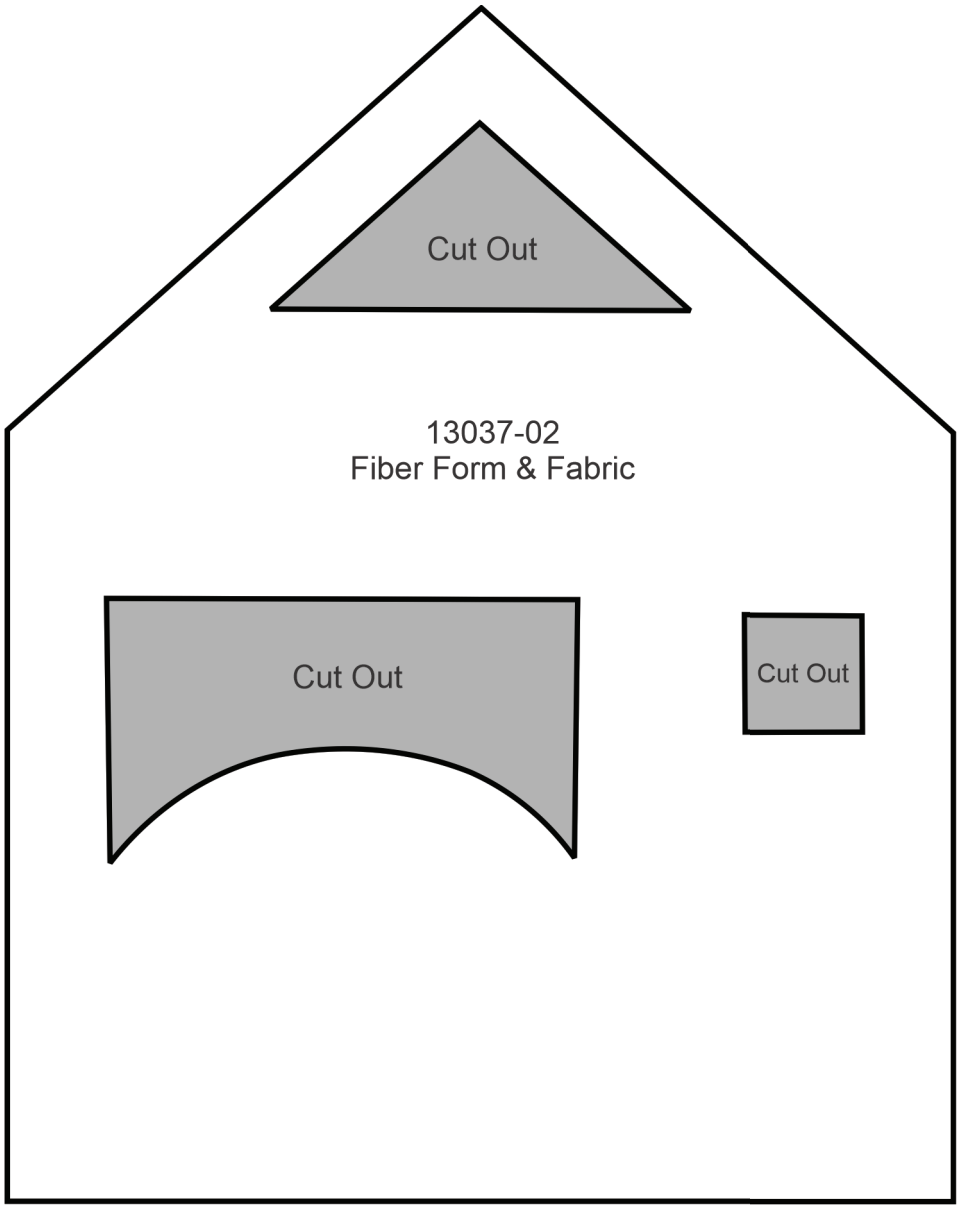


APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.



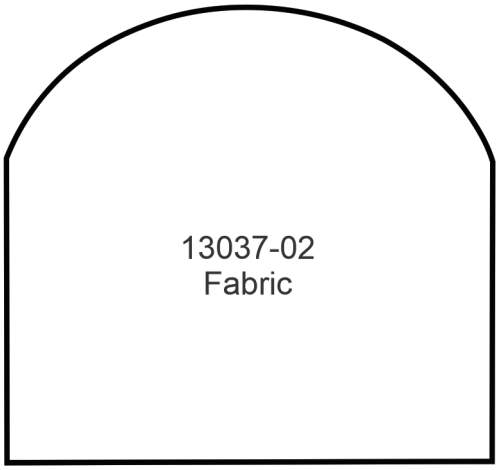




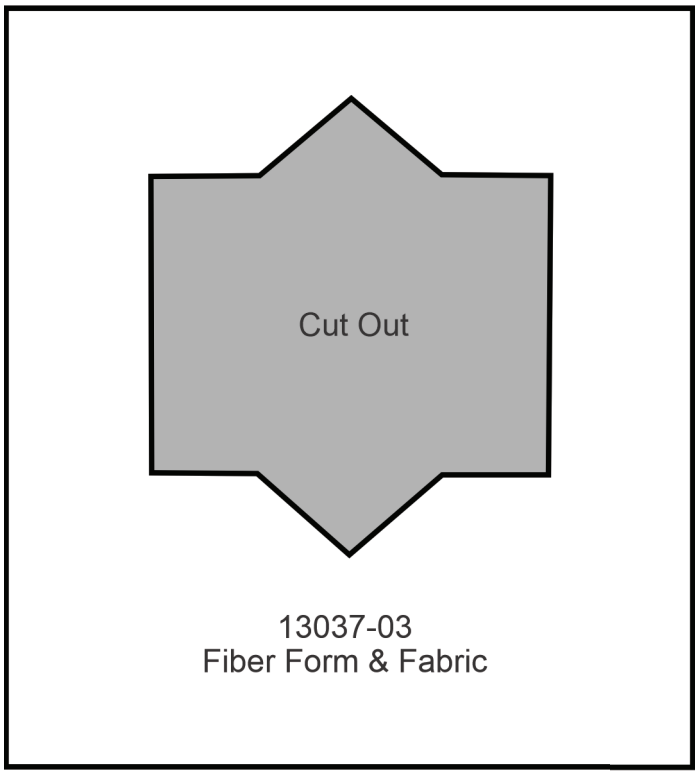


APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

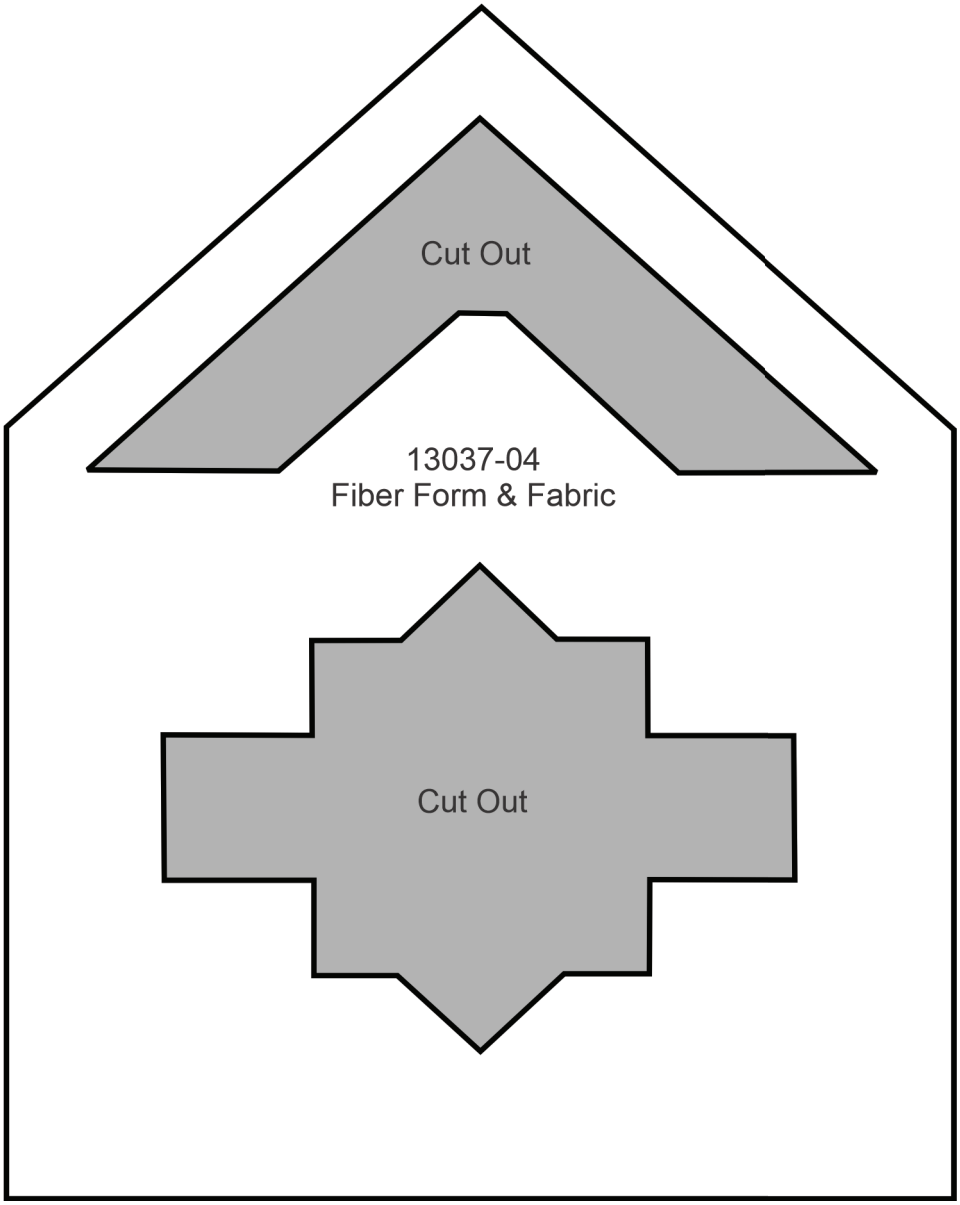

APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

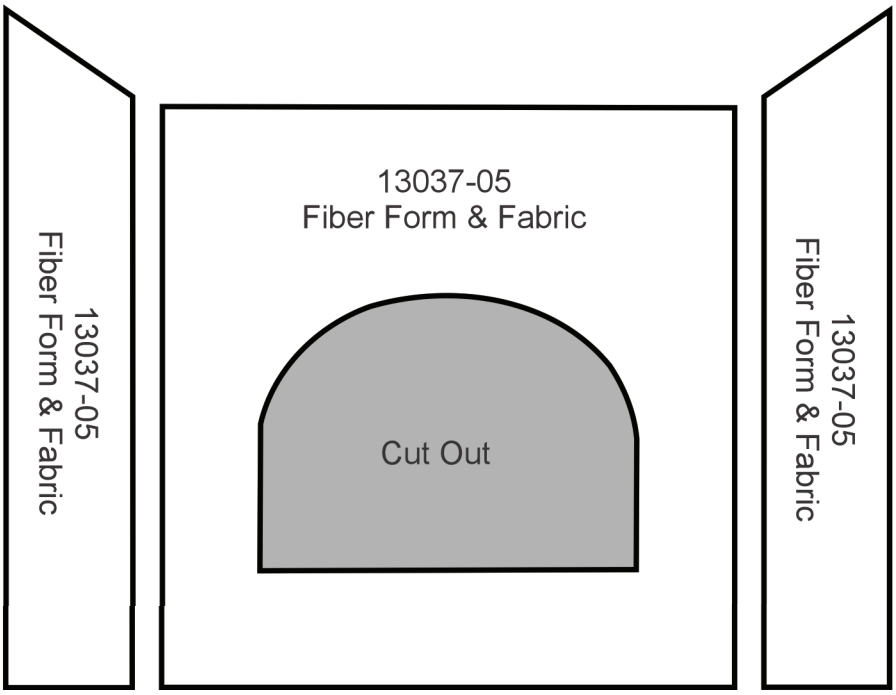


13037-06
Fiber Form & Fabric

13037-06
Fiber Form & Fabric


APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

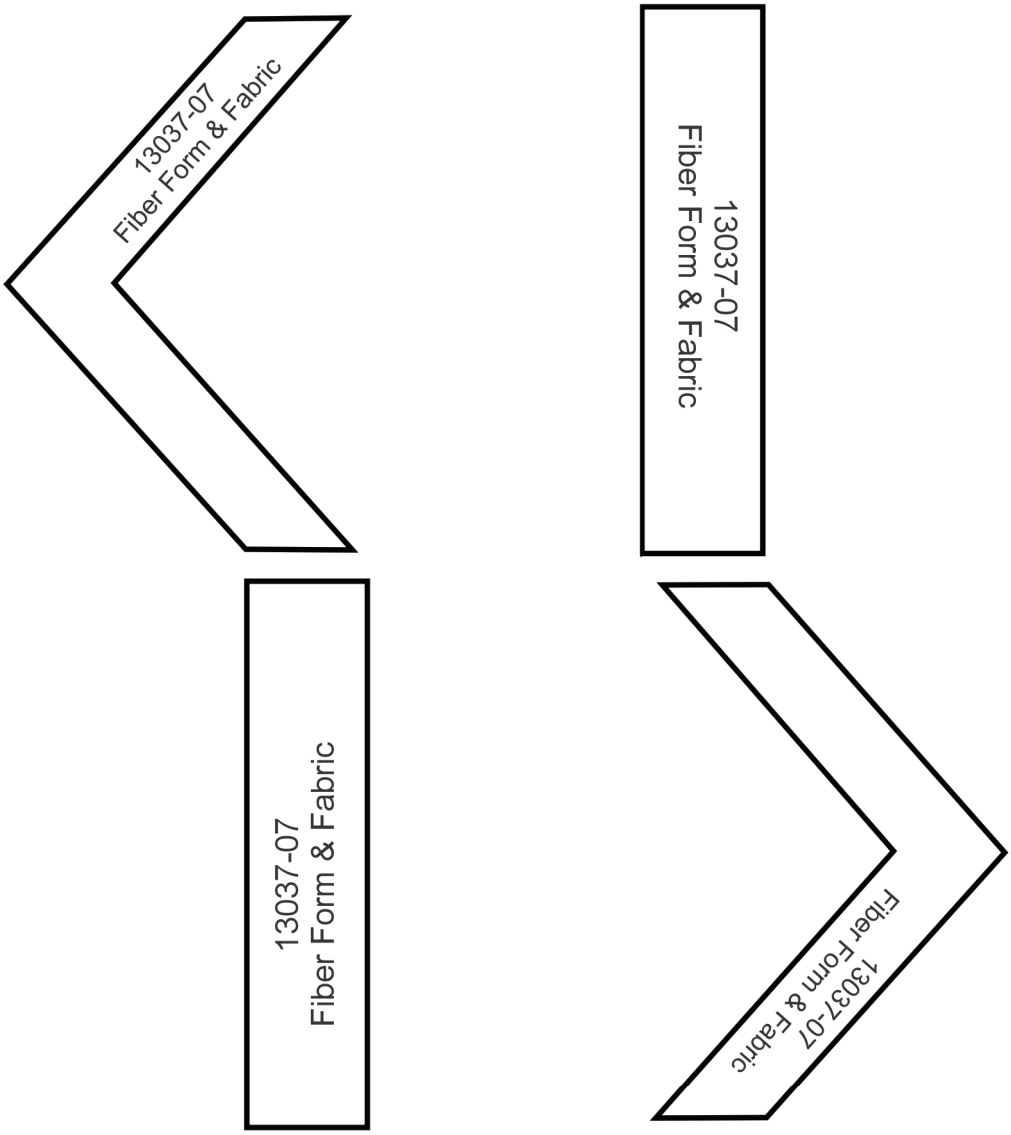

APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

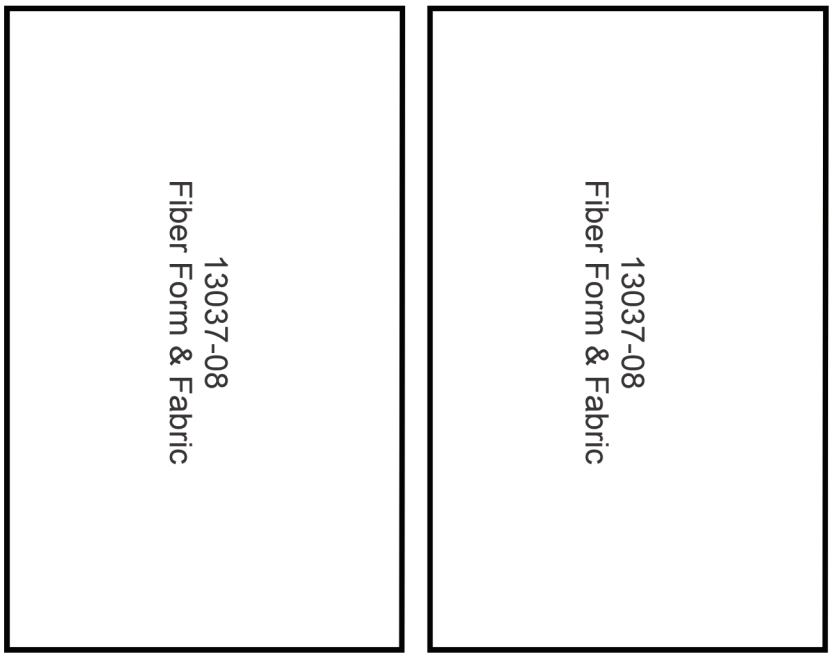


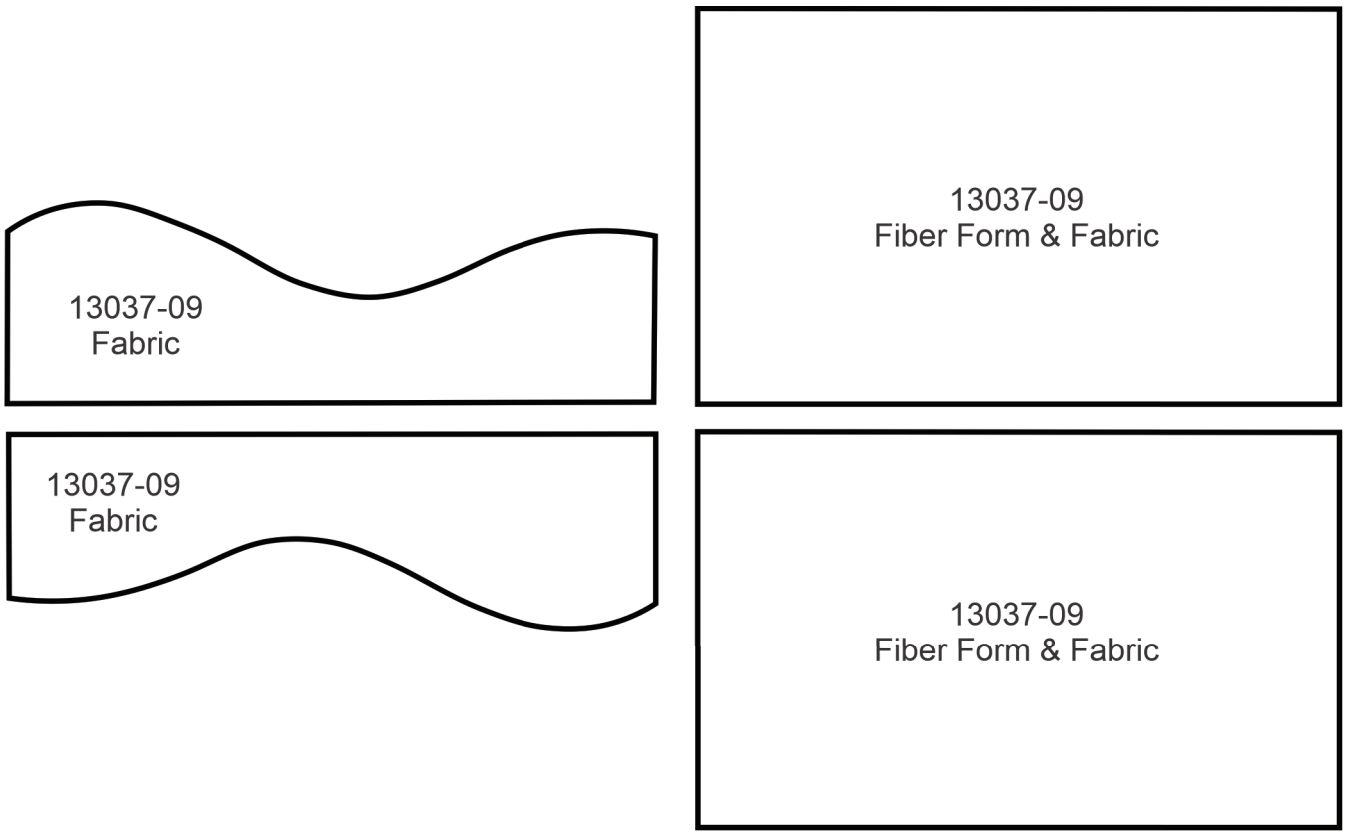

APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

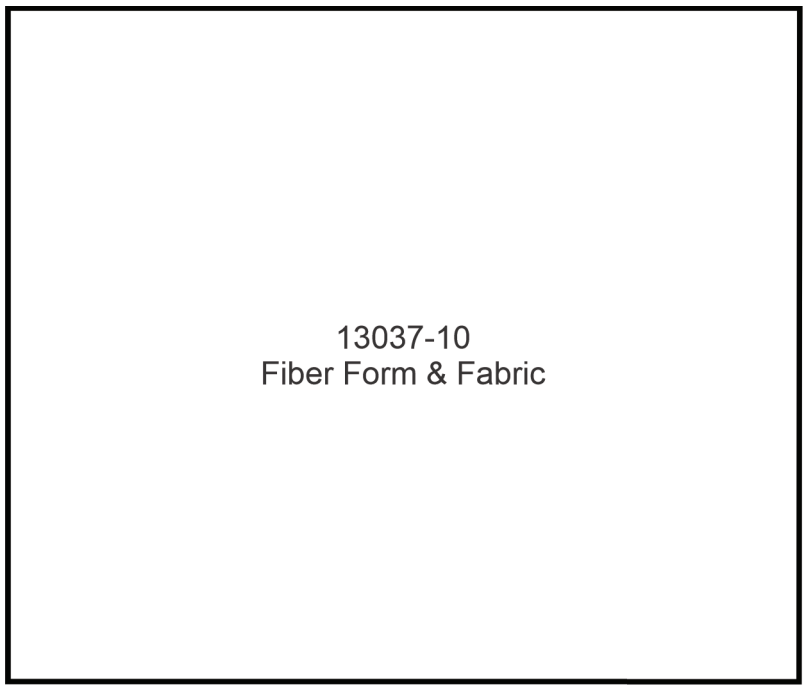

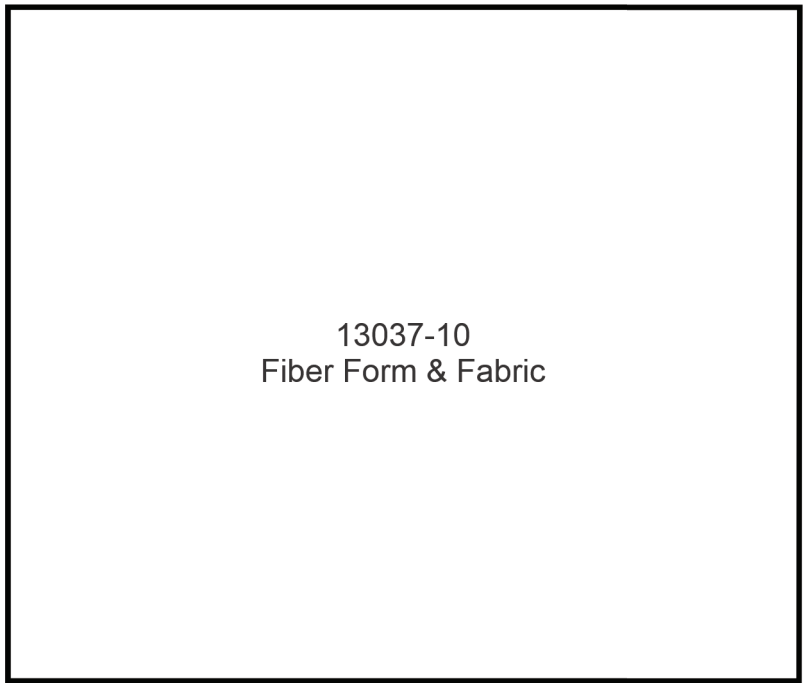


APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

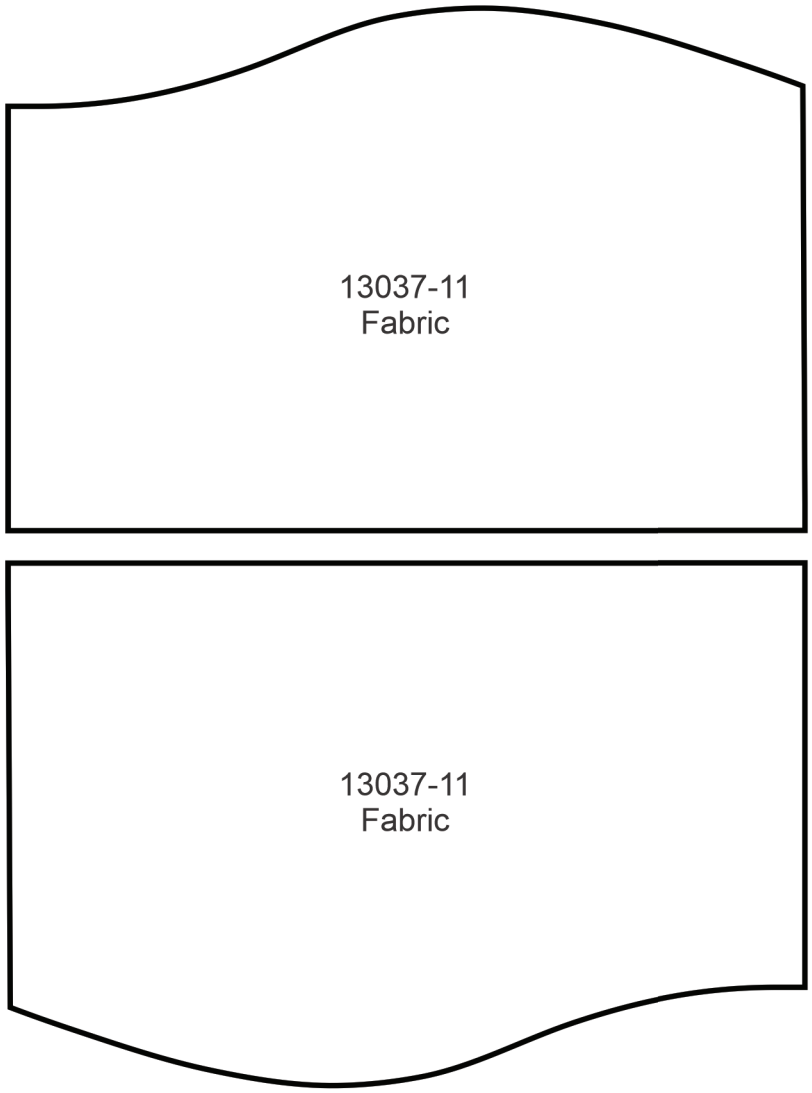

APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

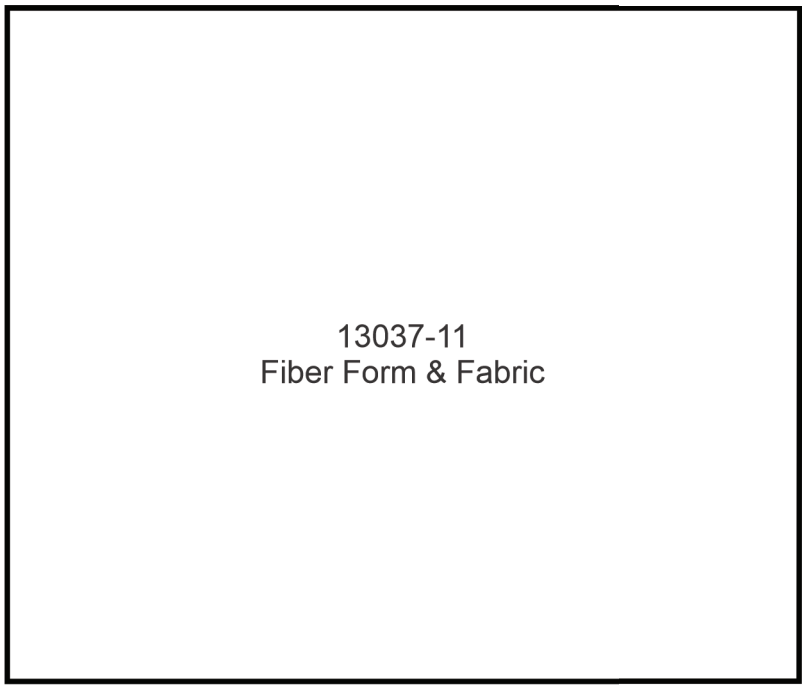

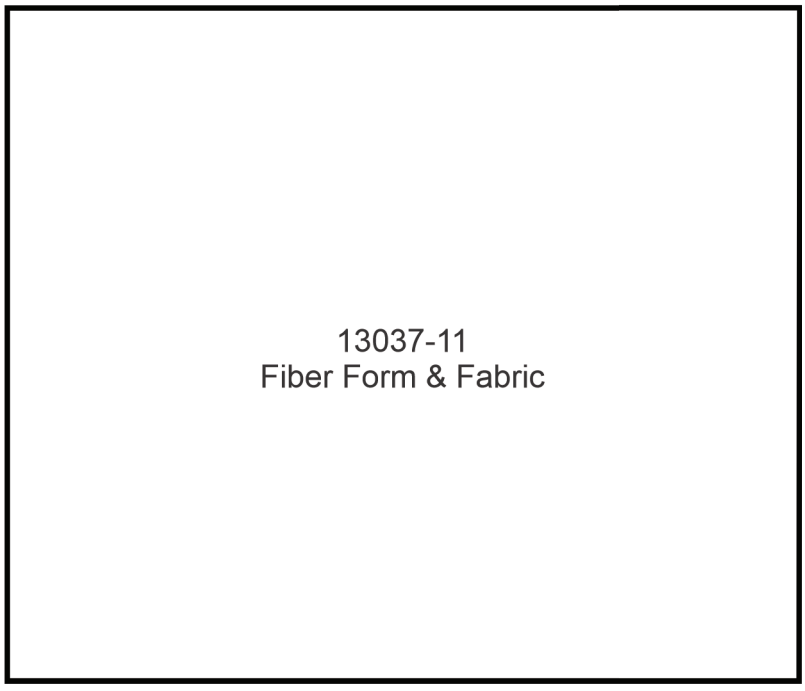


APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

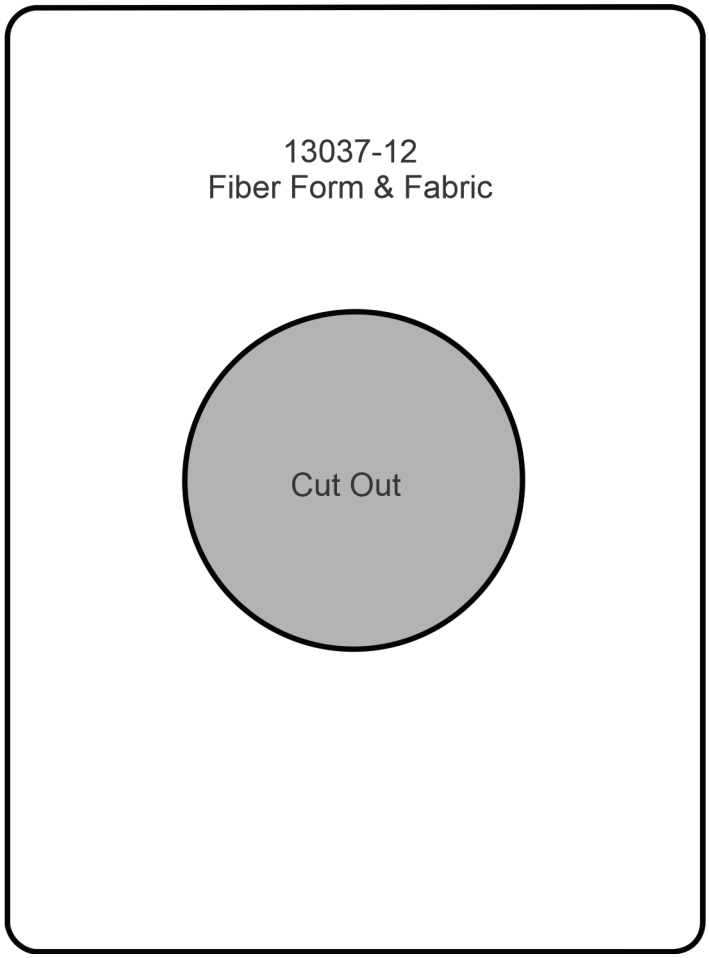


APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

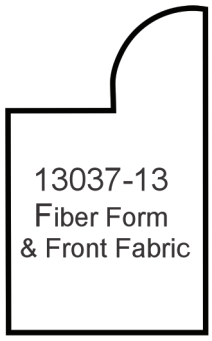


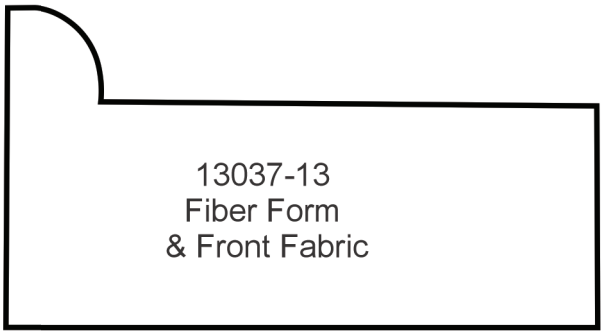



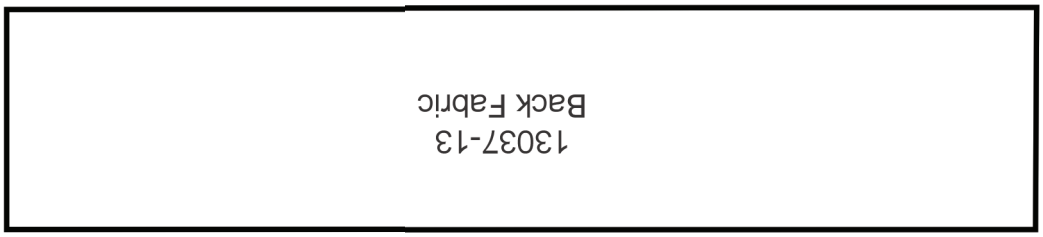



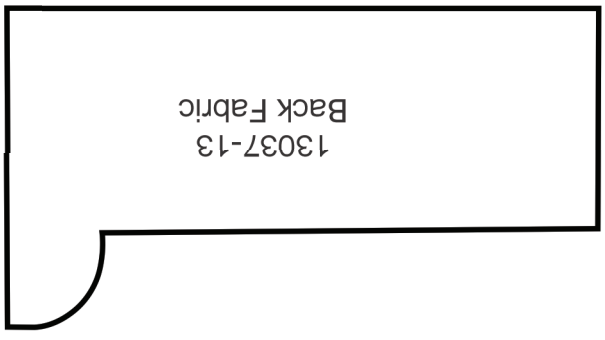

APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

13037-14
Fiber Form
& Front Fabric


13037-14
Fiber Form
& Front Fabric

13037-14
Back Fabric

13037-14
Back Fabric


APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

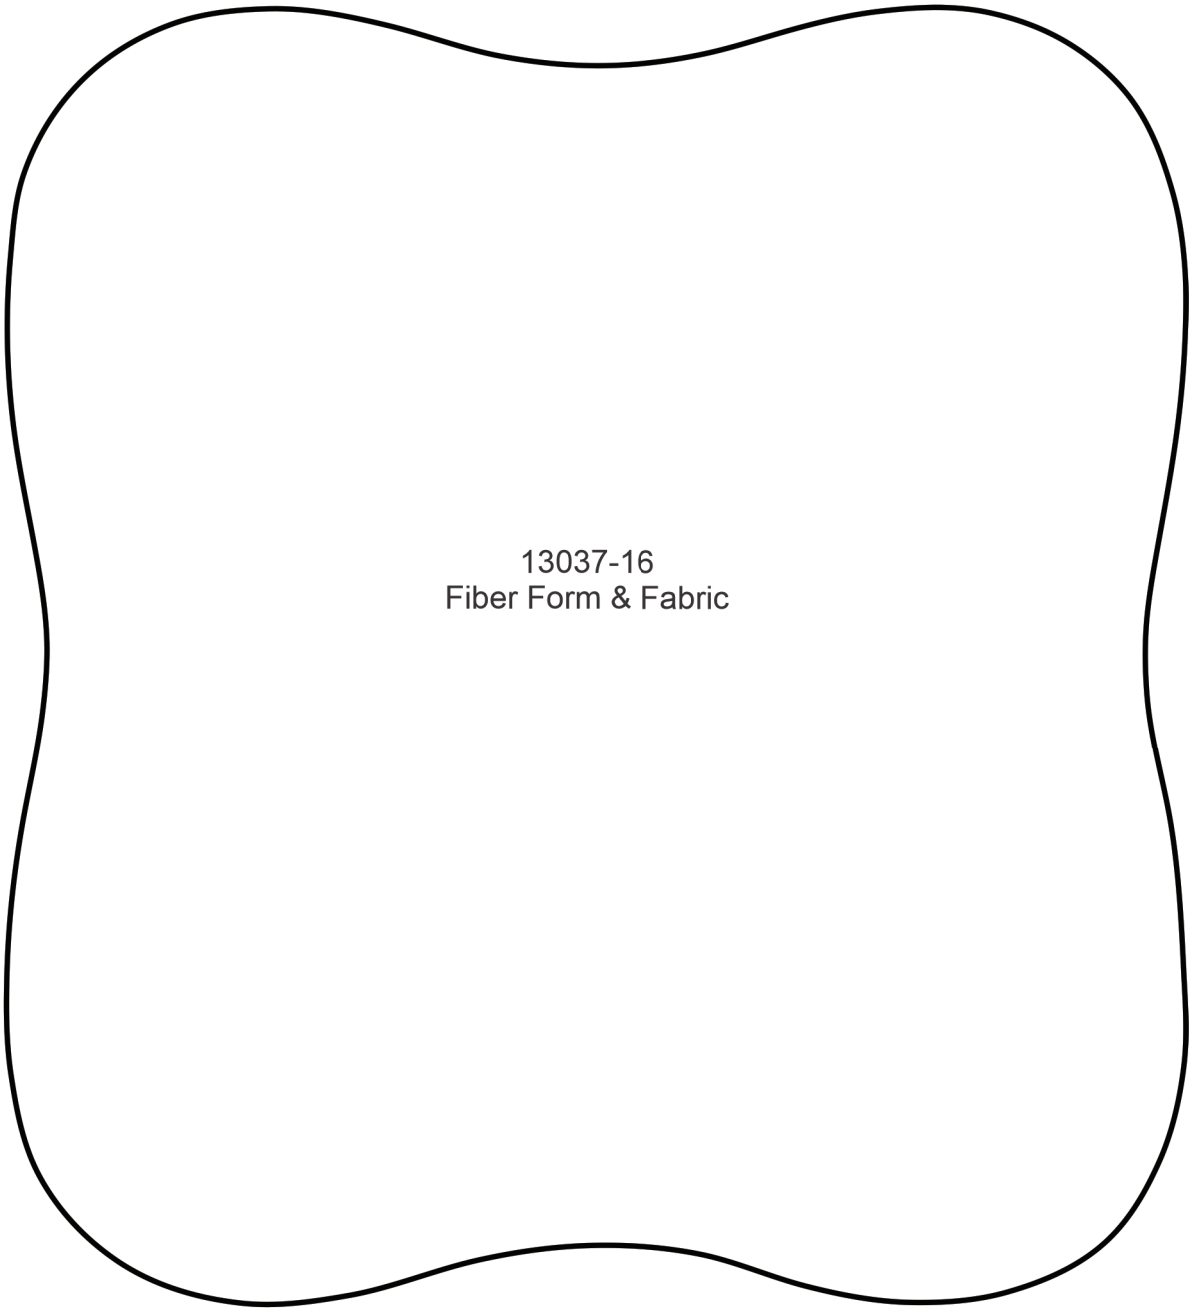


APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

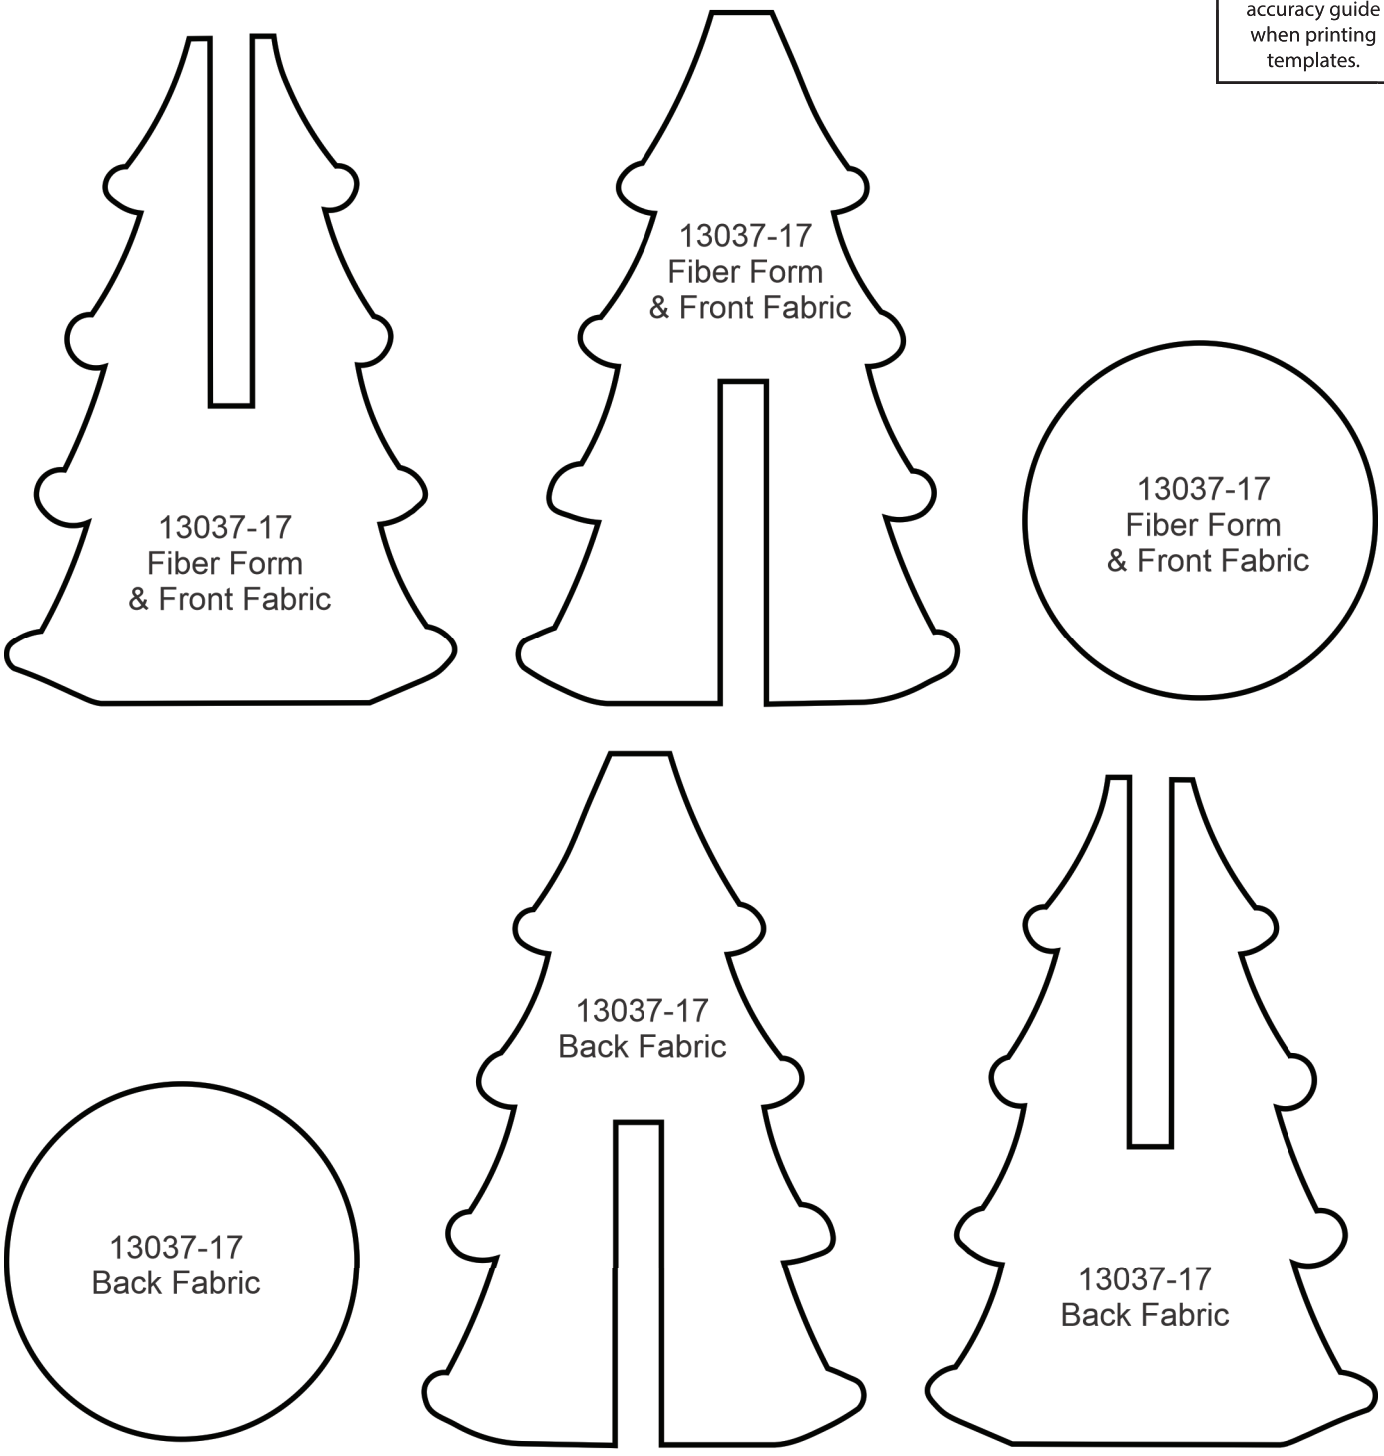


APPLIQUE PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

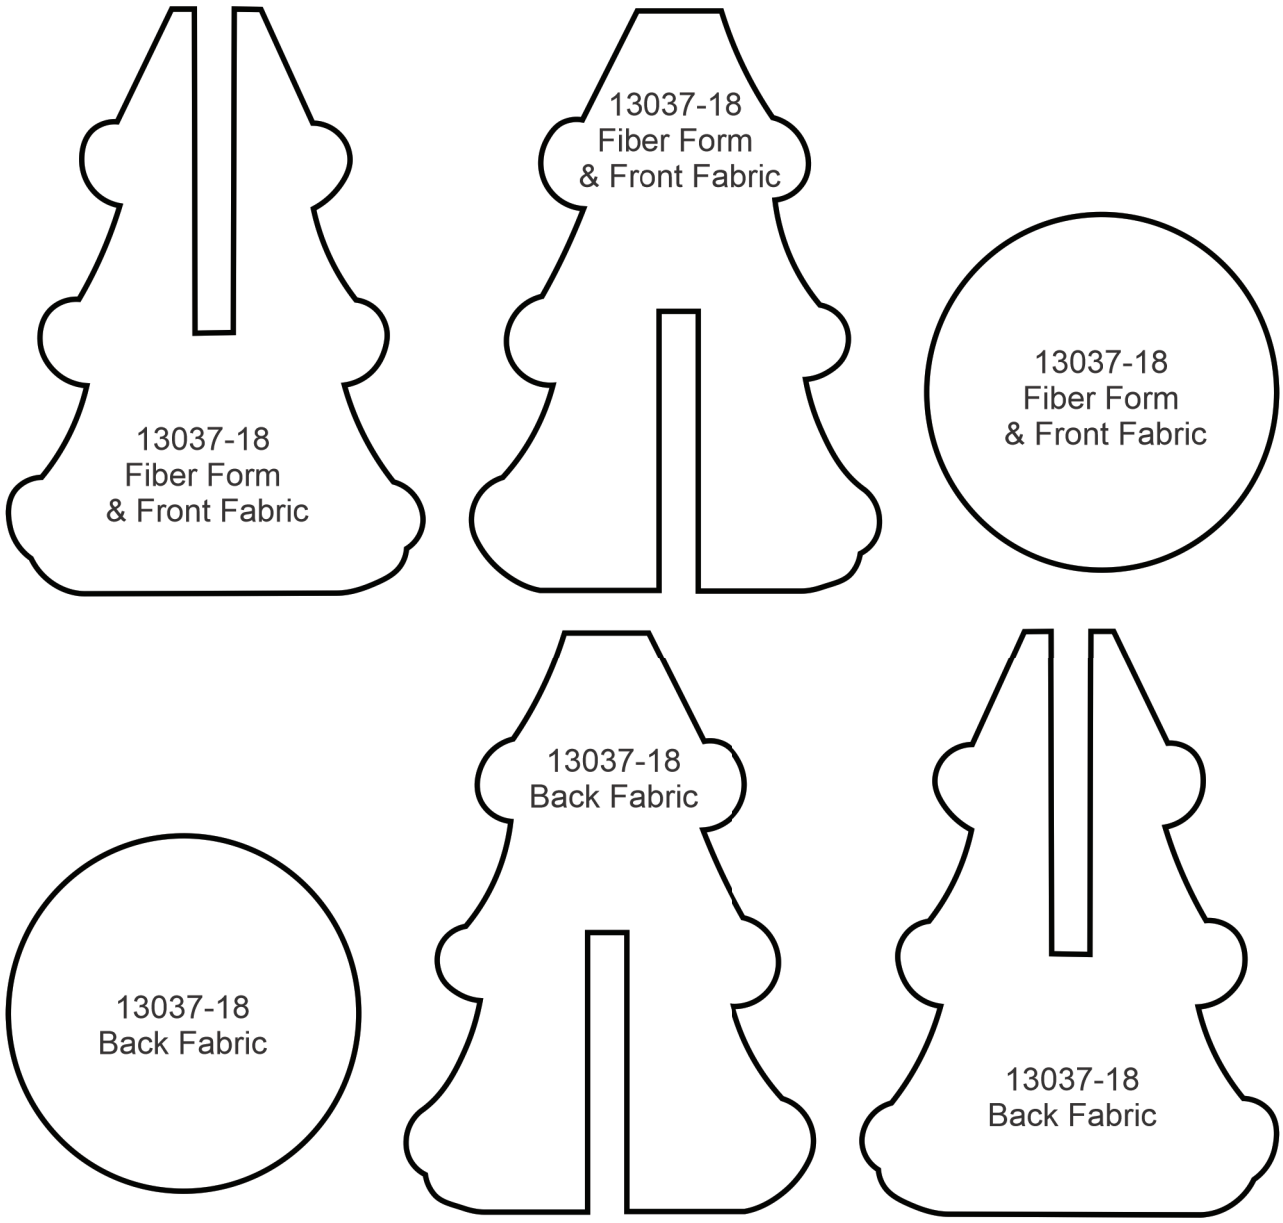



APPLIQUE PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

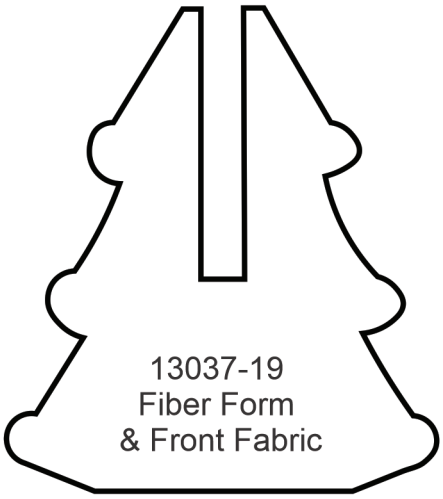


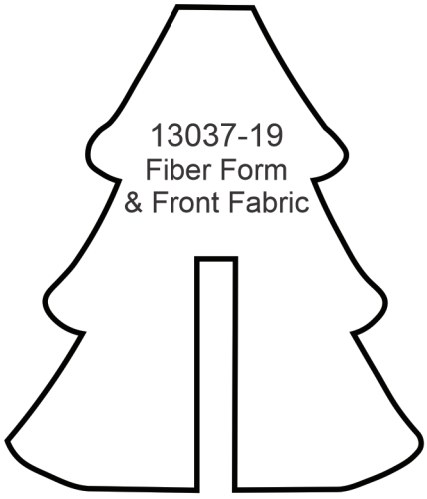

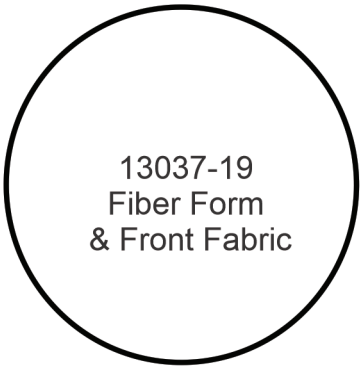

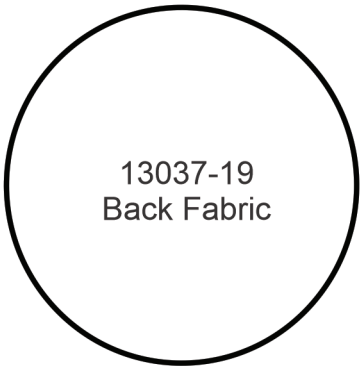




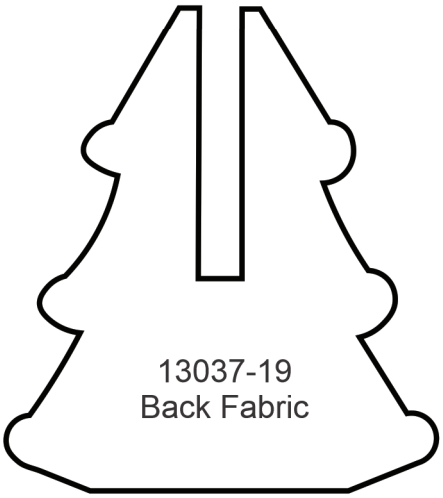

MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

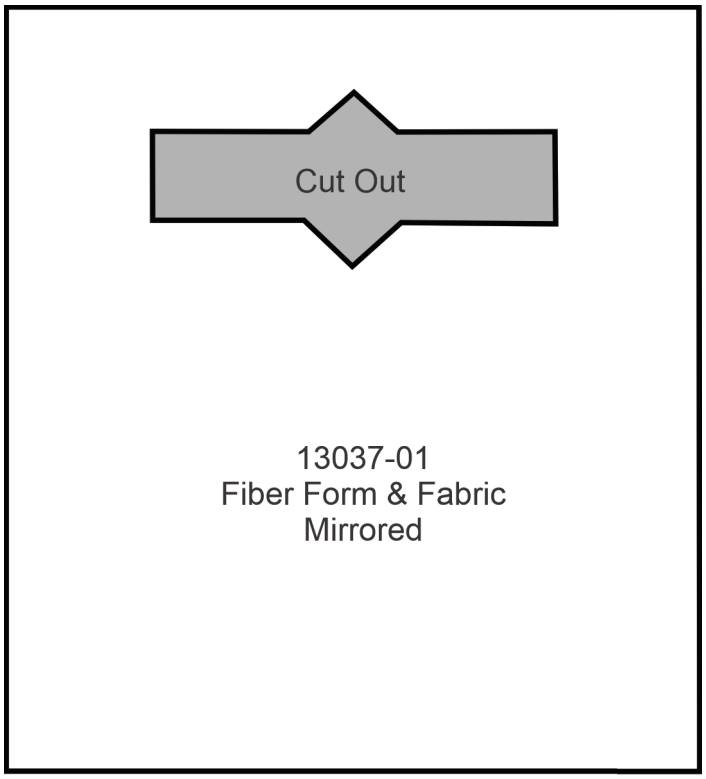



MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

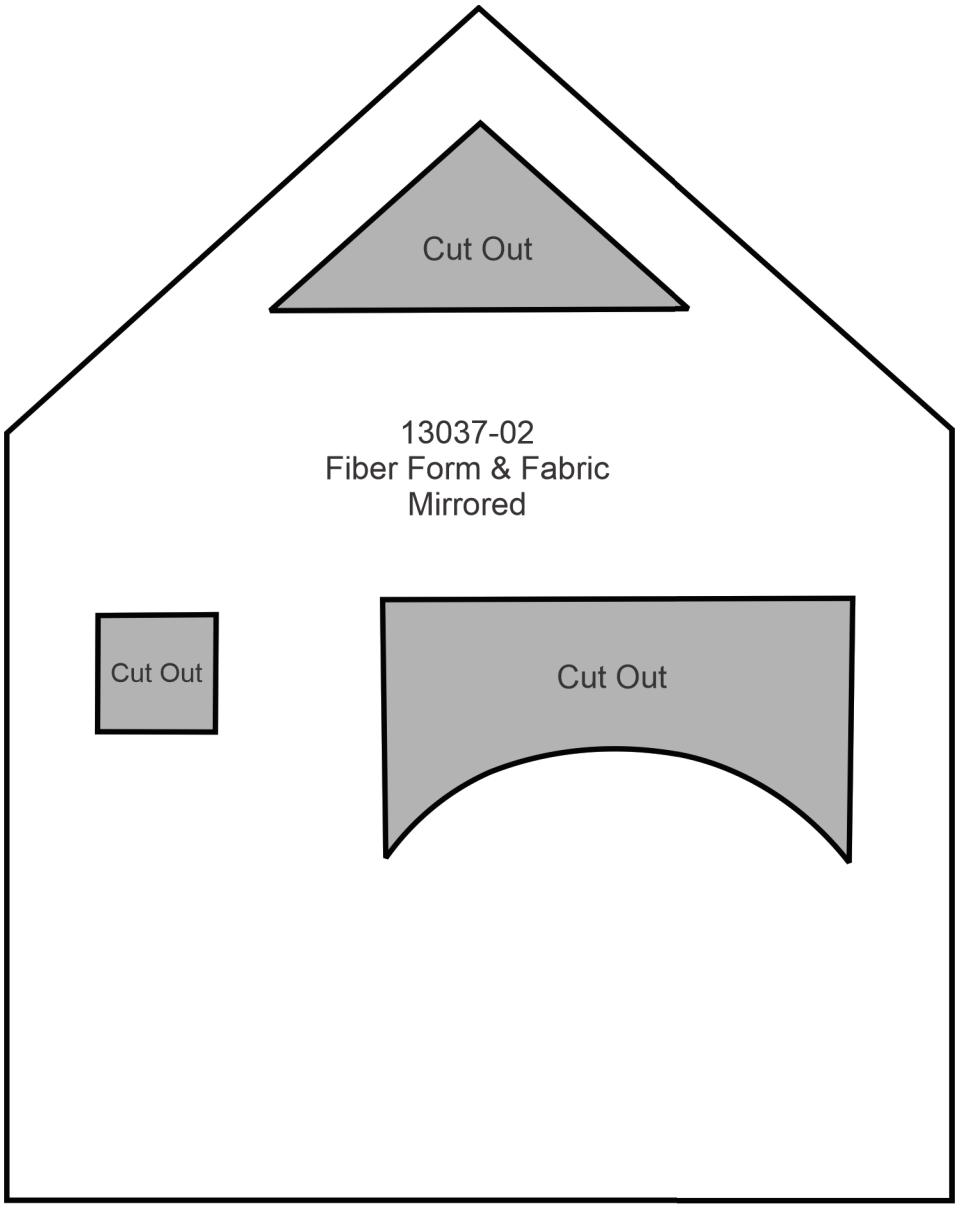



MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.






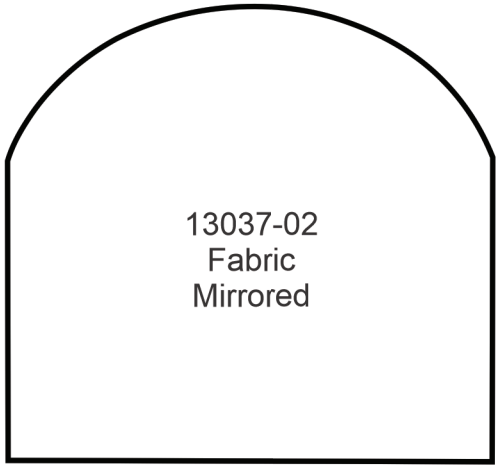

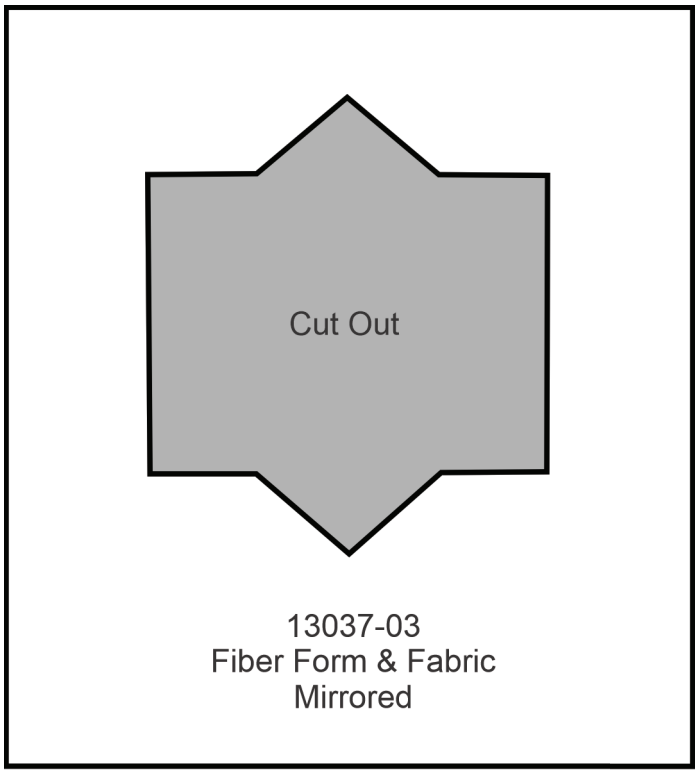


MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

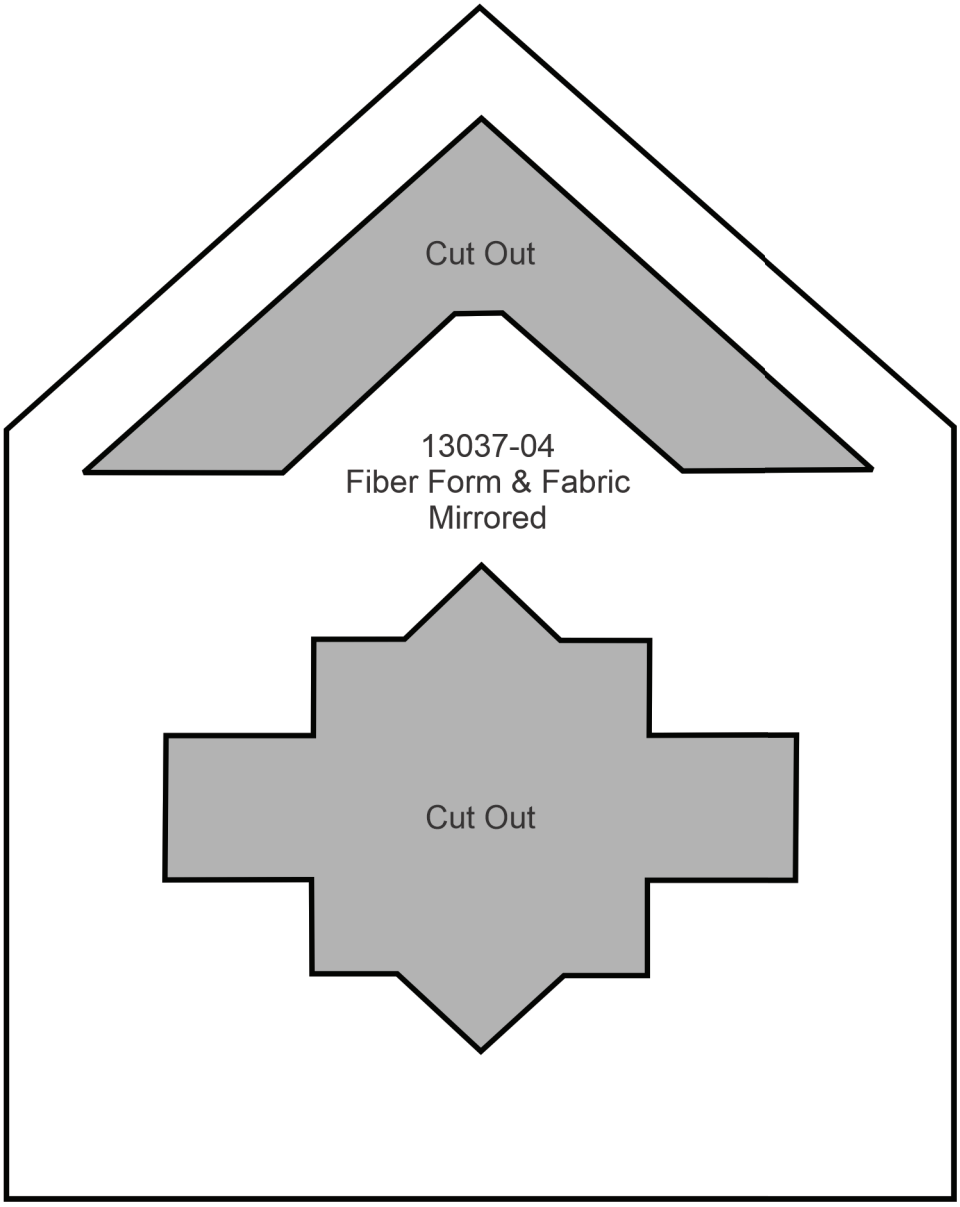

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

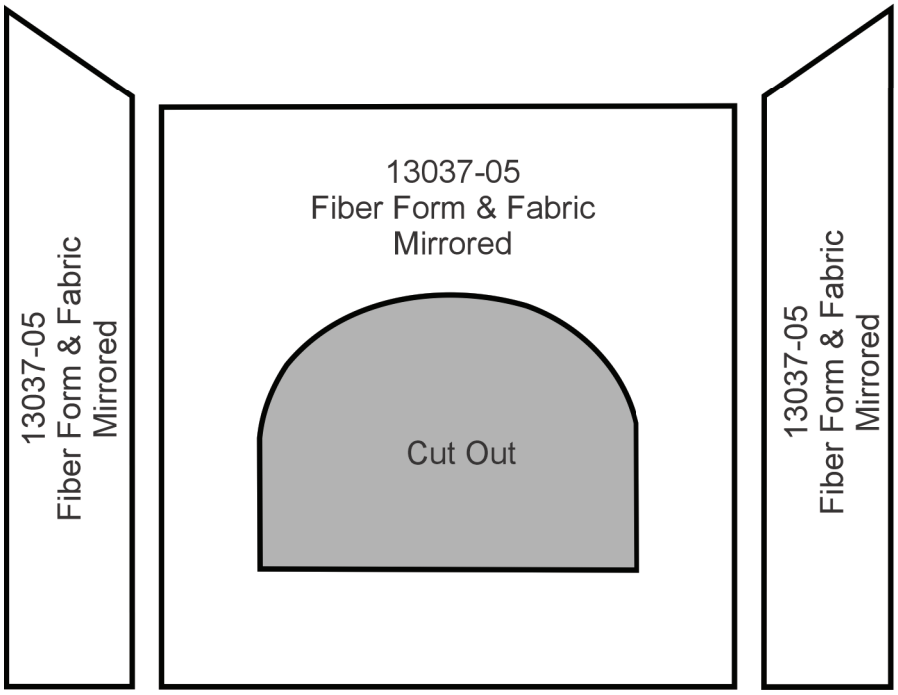


13037-06
Fiber Form & Fabric
Mirrored

13037-06
Fiber Form & Fabric
Mirrored

MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

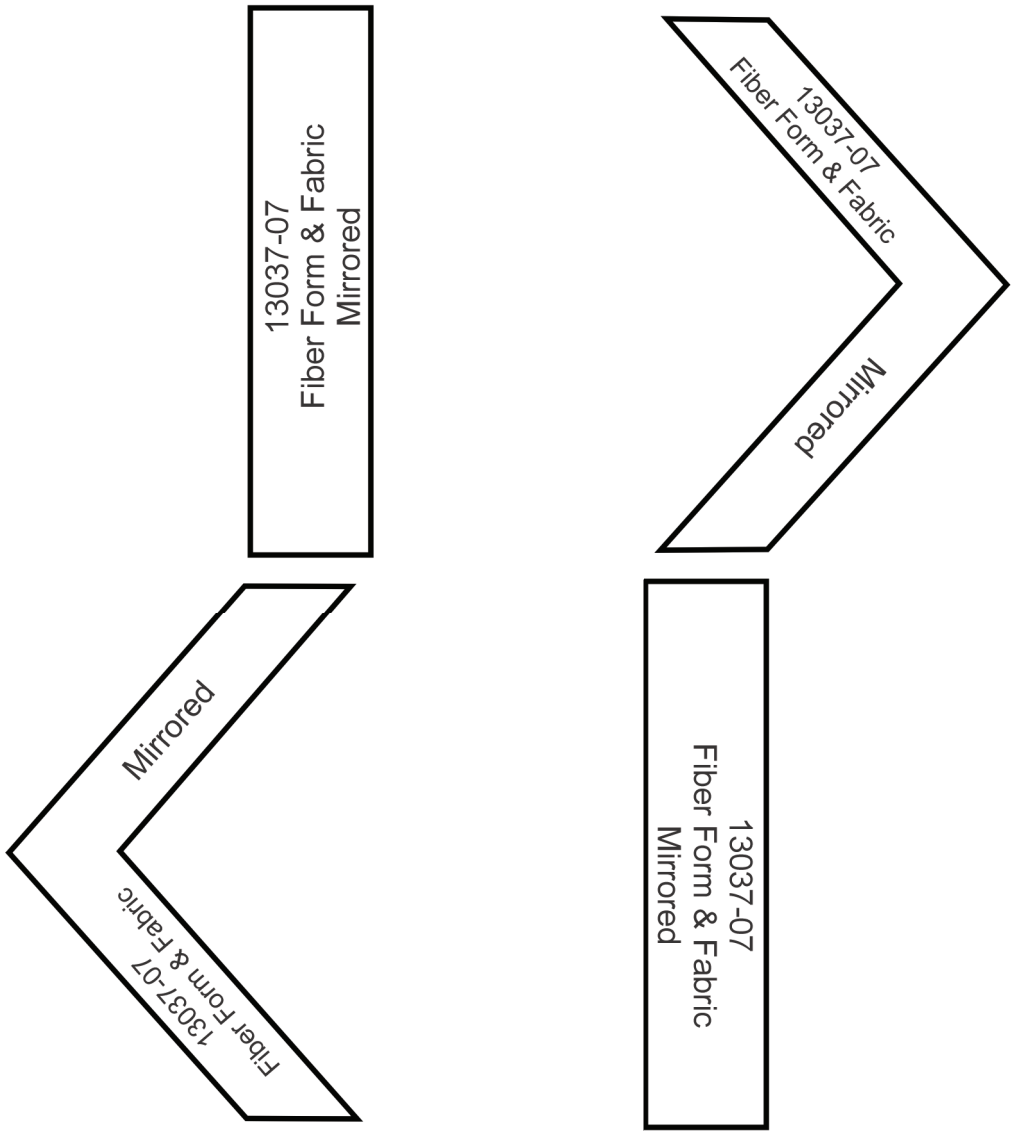

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.



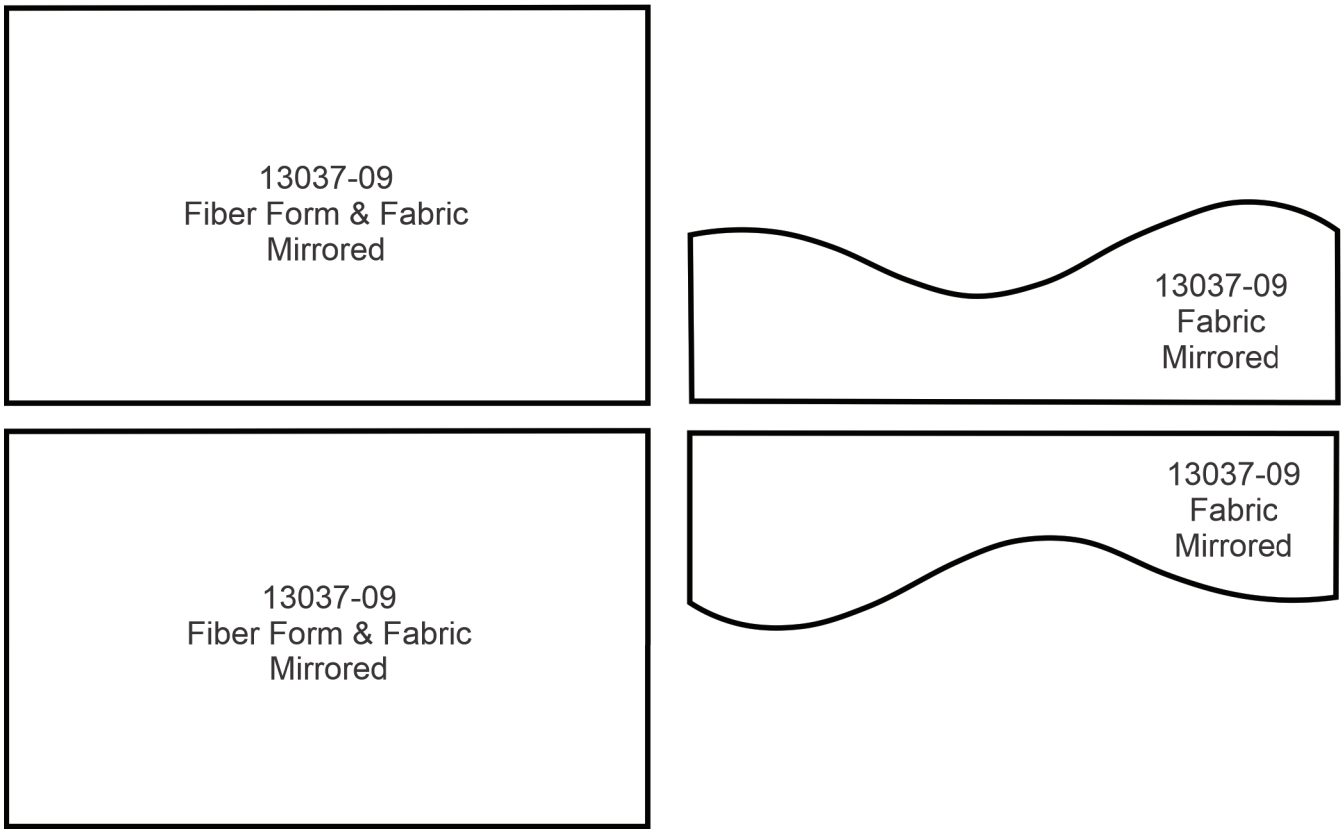

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

13037-10
Fiber Form & Fabric
Mirrored

13037-10
Fiber Form & Fabric
Mirrored

MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.


13037-11
Fiber Form & Fabric
Mirrored

13037-11
Fiber Form & Fabric
Mirrored

MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

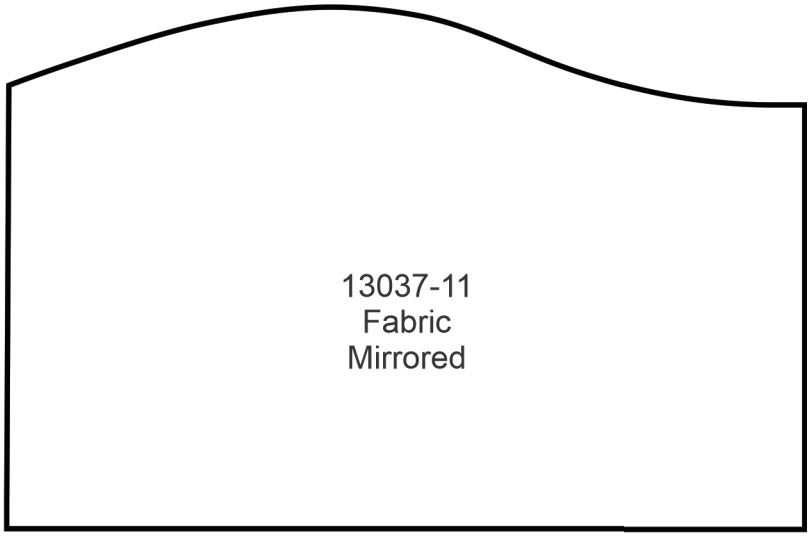

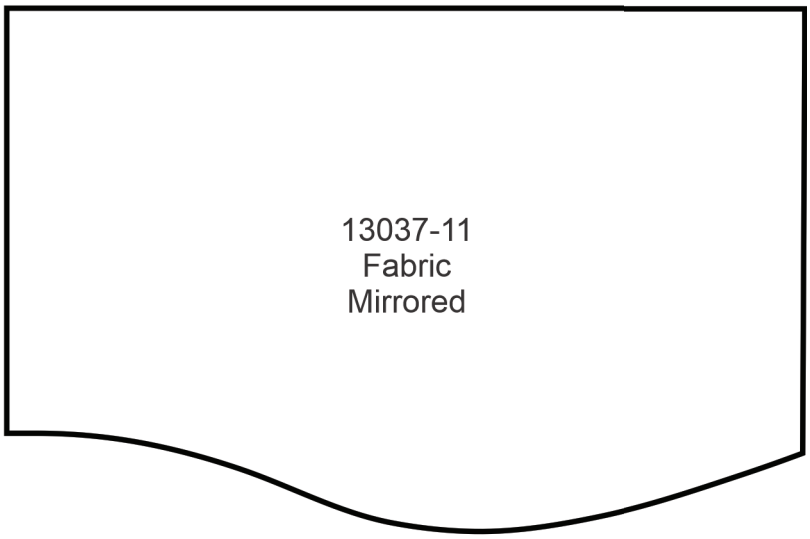

MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

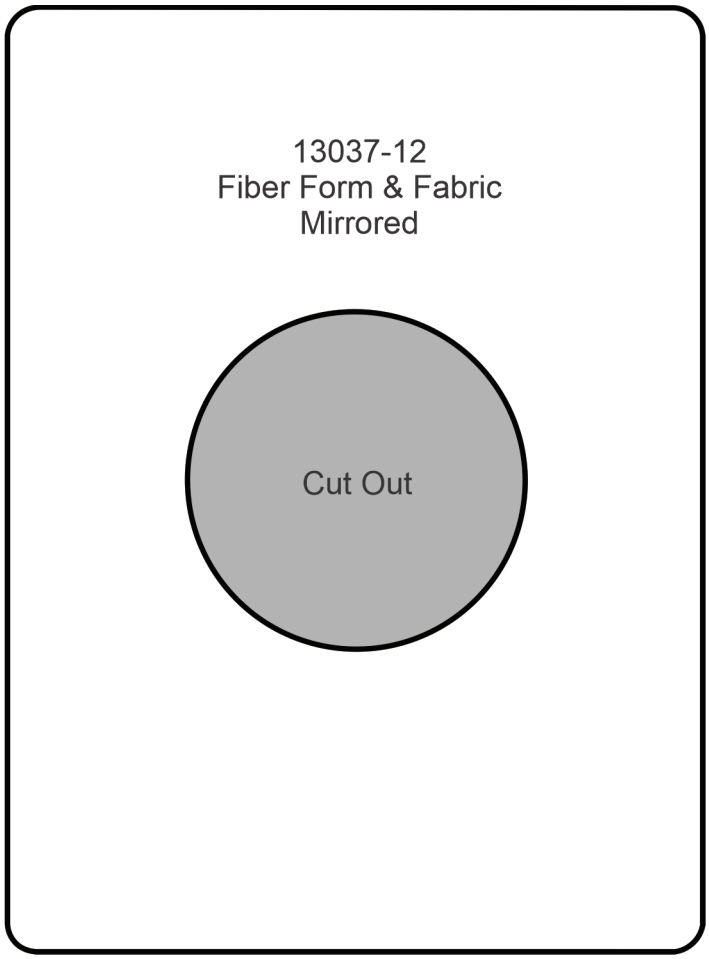


MIRRORED PATTERNS


Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.




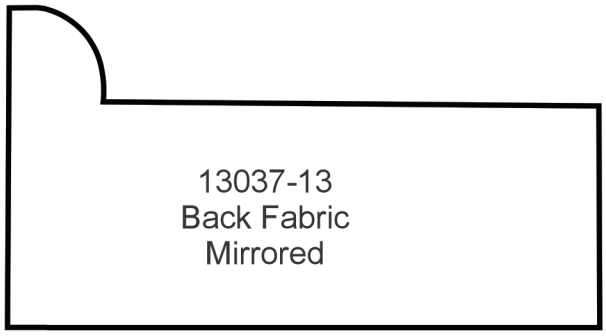



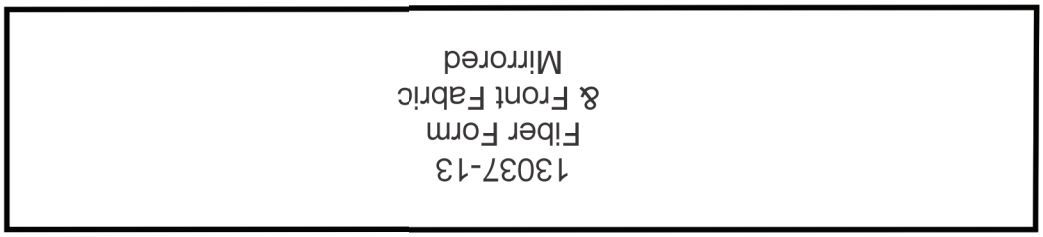

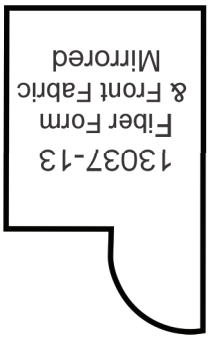

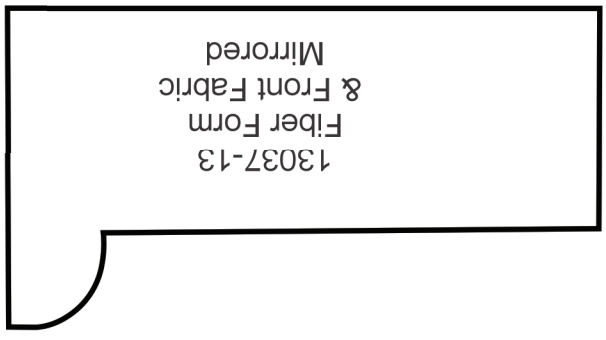

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

13037-14
Back Fabric
Mirrored


13037-14
Back Fabric
Mirrored

13037-14
Fiber Form
& Front Fabric
Mirrored

13037-14
Fiber Form
& Front Fabric
Mirrored


MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

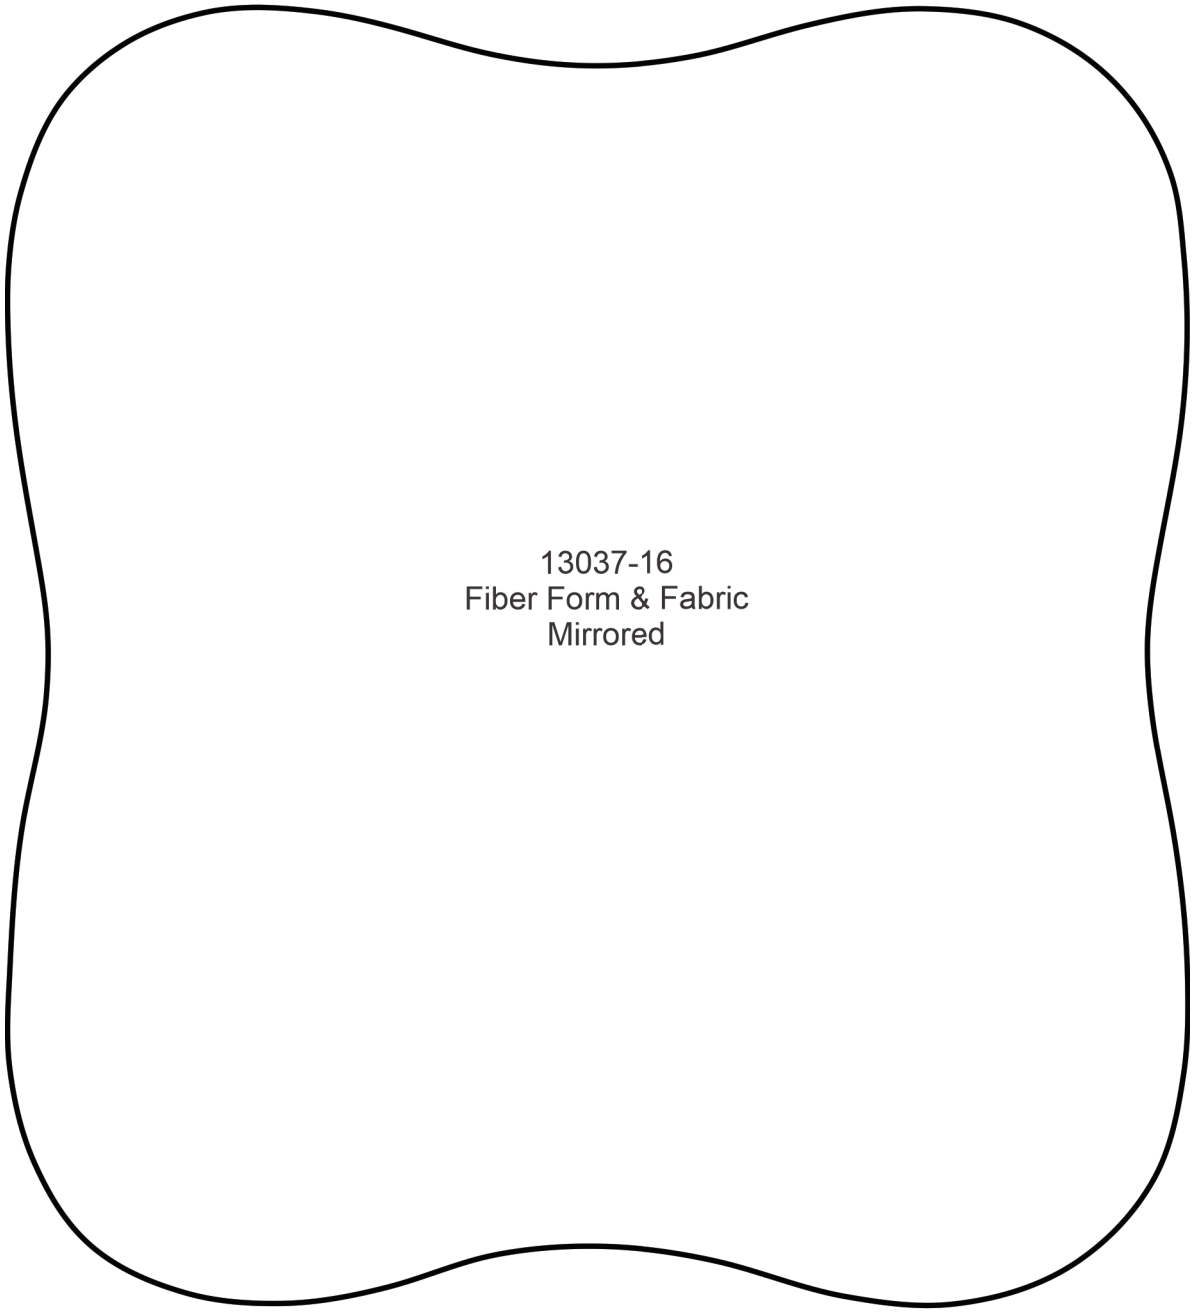


MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

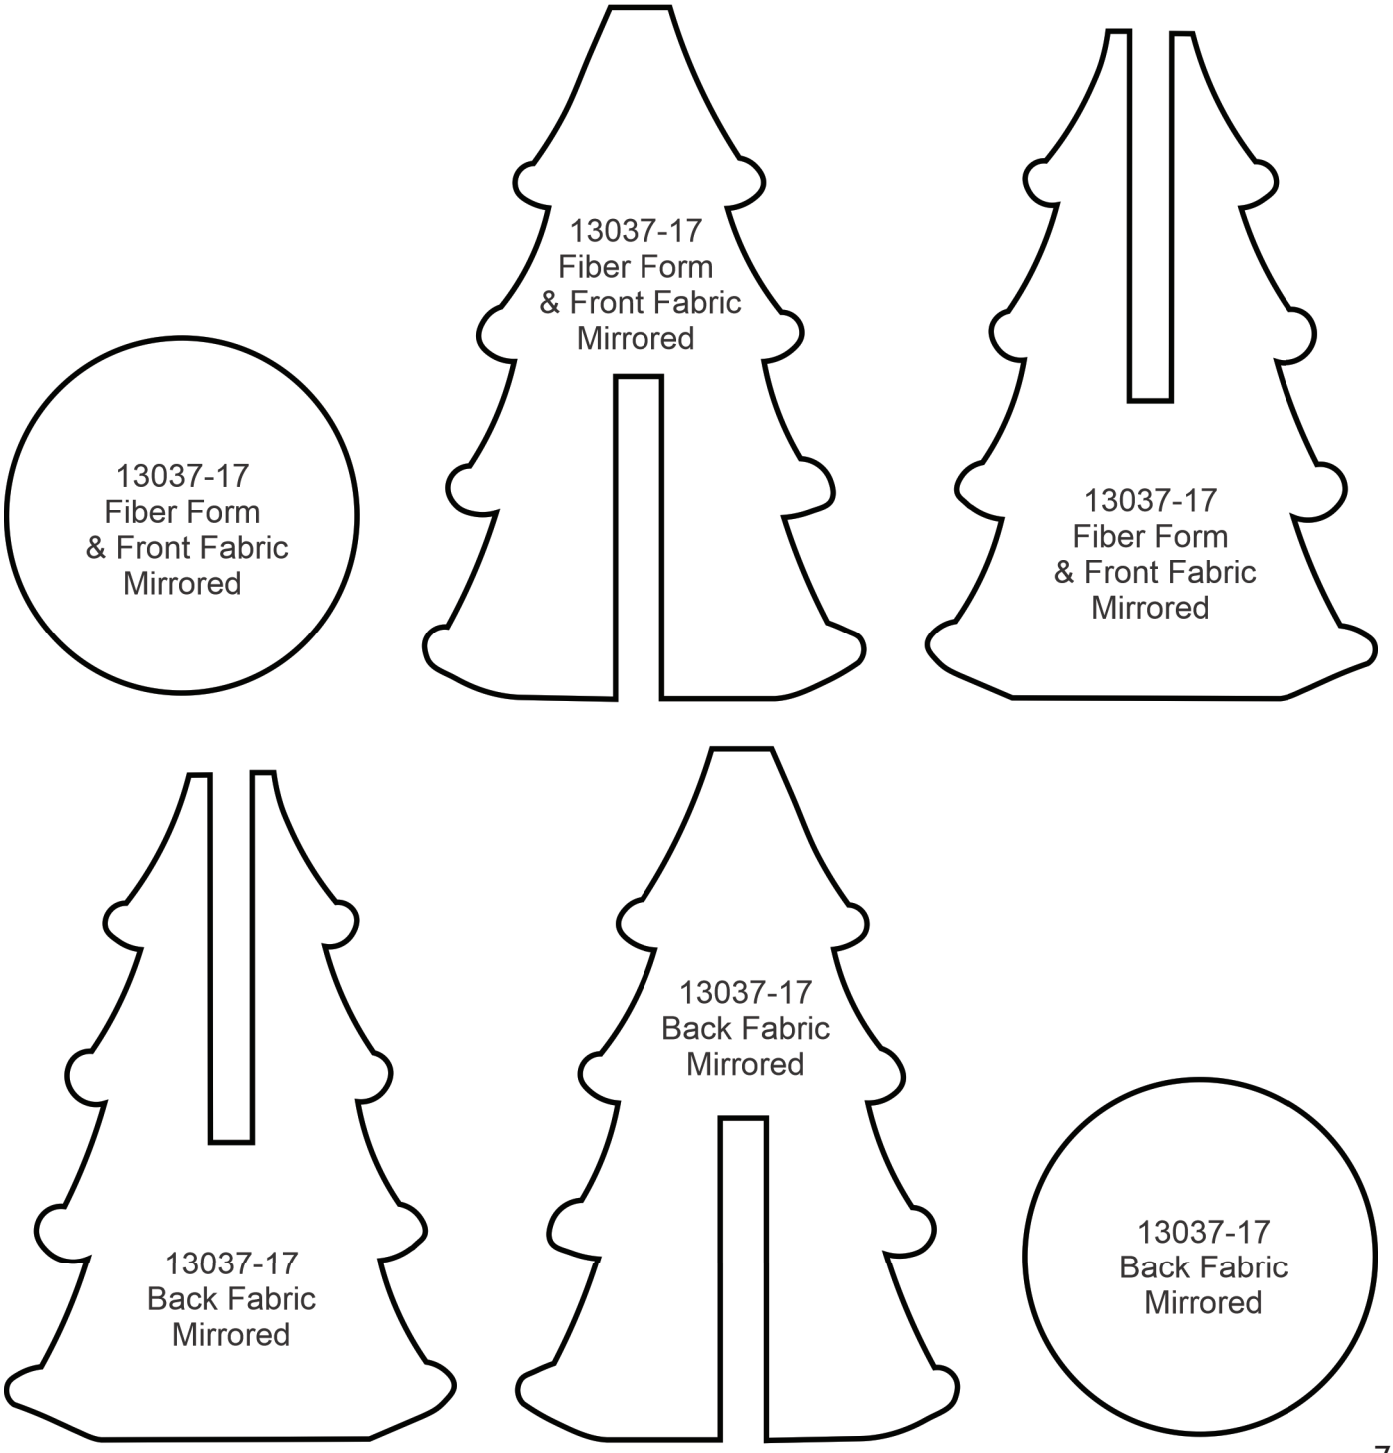

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

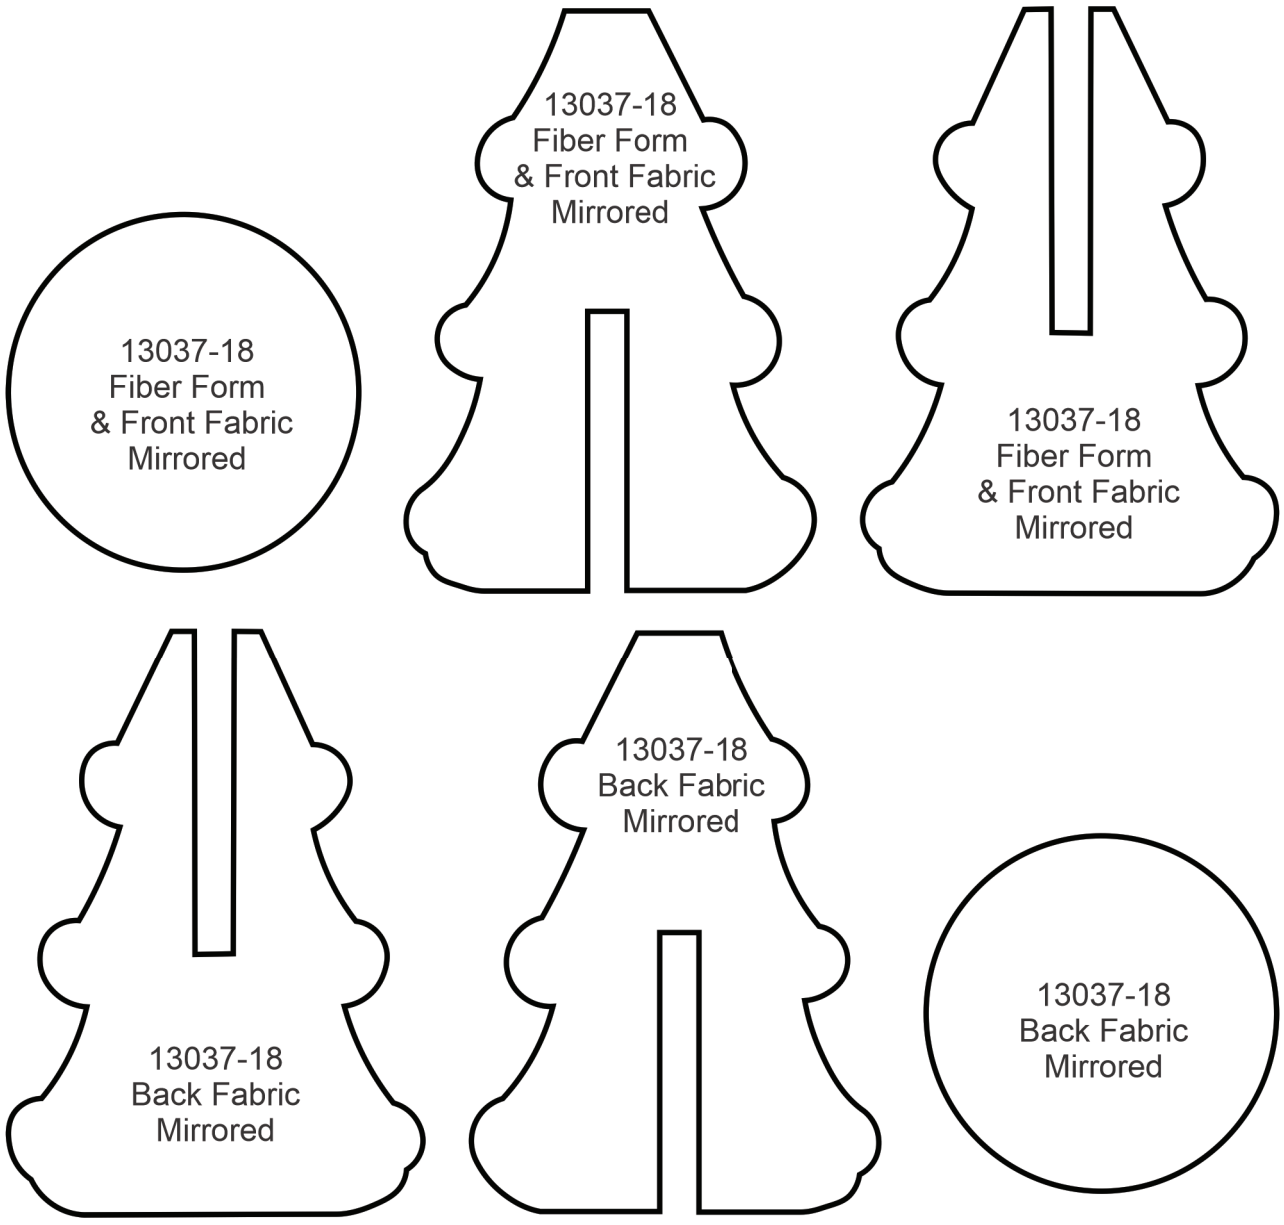

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

