



#51277
4 DESIGNS



FOUR SEASONS TAPESTRY ZIPPER BAGS

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2021 OESD, LLC. All rights reserved.

MATERIALS



Isacord Thread Colors

0010 Silky White	2510 Roseate	3730 Something Blue
0520 Daffodil	2520 Garden Rose	3820 Celestial
0605 Daisy	2655 Aura	4240 Spearmint
0660 Vanilla	2830 Wild Iris	4610 Deep Aqua
0731 Applesauce	2905 Iris Blue	
0800 Golden Rod	2920 Purple	
0821 Honey Gold	3045 Cachet	
0940 Autumn Leaf	3622 Imperial Blue	
0941 Golden Grain	3710 Blue Bird	
1134 Light Cocoa	3722 Empire Blue	

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

Table of Contents

Designs.....	3
Collection Supplies.....	5
Summary	6
Embroidery	7

Interactive Menu

Click to navigate to each section.
Section headings also contain links back to the top.

DESIGNS
















Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51277-01 Spring Tapestry Zipper Bag



Size Inches: Size mm: Stitch Count:
9.11 X 5.98 in. 231.5 X 151.8 mm 26208 St.












	1. Zipper Placement Guide.....	2510
	2. Zipper Tackdown	2510
	3. Front Panels Tackdown	2510
	4. White Detail	0010
	5. Light Pink Detail	2655
	6. Light Purple Detail	3045
	7. Purple Detail.....	2830
	8. Medium Purple Detail	2920
	9. Dark Purple Detail	2905
	10. Stamens	0605
	11. Inner Panels Tackdown	2510
	12. Backing Tackdown.....	2510
	13. Inner Lining Tackdown.....	2510

FABRIC REQUIRED

51277-02 Summer Tapestry Zipper Bag



Size Inches: Size mm: Stitch Count:
9.33 X 6.01 in. 237.1 X 152.7 mm 49869 St.

	1. Zipper Placement Guide.....	4610
	2. Zipper Tackdown	4610
	3. Front Panels Tackdown	4610
	4. Dark Yellow Detail	0800
	5. Medium Yellow Detail	0605
	6. Light Yellow Detail	0520
	7. Blue Detail	4240
	8. Pink Detail	2520
	9. Inner Panels Tackdown	4610
	10. Backing Tackdown.....	4610
	11. Inner Lining Tackdown.....	4610

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51277-03 Fall Tapestry Zipper Bag




Size Inches: Size mm: Stitch Count:
9.11 X 5.98 in. 231.3 X 151.8 mm 37395 St.

- 1. Zipper Placement Guide..... 0941
- 2. Zipper Tackdown 0941
- 3. Front Panels Tackdown 0941
- 4. Light Yellow Detail 0660
- 5. Dark Gold Detail 0940
- 6. Medium Gold Detail 0821
- 7. Light Gold Detail 0731
- 8. Brown Detail 1134
- 9. Inner Panels Tackdown 0941
- 10. Backing Tackdown..... 0941
- 11. Inner Lining Tackdown..... 0941

FABRIC REQUIRED

51277-04 Winter Tapestry Zipper Bag

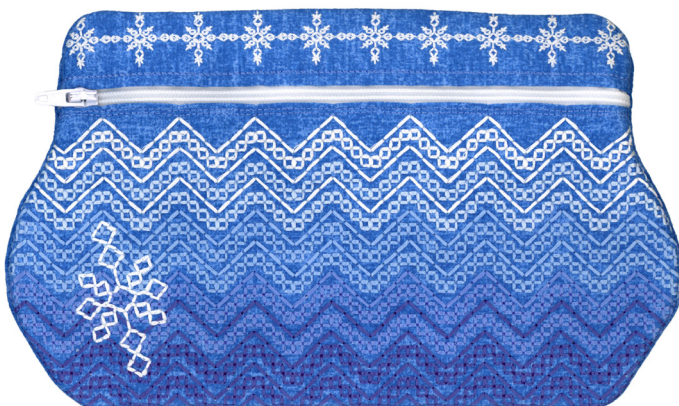

Size Inches: Size mm: Stitch Count:
9.11 X 6.09 in. 231.3 X 154.7 mm 33016 St.

- 1. Zipper Placement Guide..... 3722
- 2. Zipper Tackdown 3722
- 3. Front Panels Tackdown 3722
- 4. Pale Blue Detail 3730
- 5. Light Blue Detail 3820
- 6. Medium Blue Detail 3710
- 7. Dark Blue Detail 3622
- 8. White Detail 0010
- 9. Inner Panels Tackdown 3722
- 10. Backing Tackdown..... 3722
- 11. Inner Lining Tackdown..... 3722

MATERIALS



Stabilizers

- OESD Light Weight TearAway
- OESD Fusible Woven

Fabrics/Textiles

- 1 fat quarter for outer fabric
- 1 fat quarter for lining
- Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Polyester or nylon zipper at least 2" larger than opening - NO metal zippers
- Embroidery Needle Sharp 80/12

Isacord Thread Colors

- Per thread chart

SUMMARY



51277-01



Completed Size: 9 x 5.25 in.

51277-02



Completed Size: 9 x 5.25 in.

51277-03



Completed Size: 9 x 5.25 in.

51277-04



Completed Size: 9 x 5.25 in.

Fabric Cutting Chart	Front Panel Top	Front Panel Bottom	Back
Outer Fabric	(1) 8 1/2" x 3 1/2"	(1) 10" x 10"	(1) 10 " x 7"
Lining Fabric	(1) 8 1/2" x 3 1/2"	(1) 10" x 10"	(1) 10 " x 7"
Fusible Woven	(1) 8 1/2" x 1 3/4"	(1) 10" x 5"	(1) 10 " x 7"


Measurements include one of each design

EMBROIDERY




Step 1

- Press Bottom Front, Top Front, Top Front Lining and Bottom Front Lining in 1/2 wrong sides together, lengthwise.

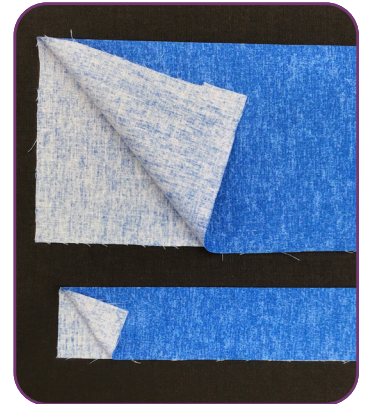

Step 2

- Apply Fusible Woven to the wrong side of the outer fabrics.
- Note: Fusible Woven is applied only to the outer fabrics, not the lining. Open fabrics and press Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.

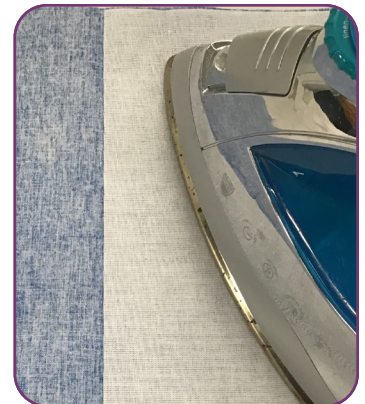

Step 3

- Re-fold outer fabrics and press.




EMBROIDERY



Step 4

- Hoop one layer of Light Weight TearAway.
- Load selected design into the machine.
- Design in the example is 51277-04.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Zipper Placement Guide.

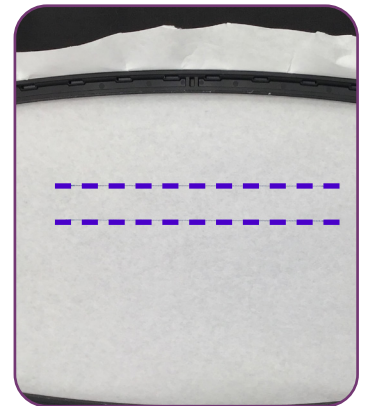


Step 5

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the zipper, right side up, within the Zipper Placement Guide.
- Tape in place to secure.
- Note: Metal ends must be outside of the stitching area.



Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.

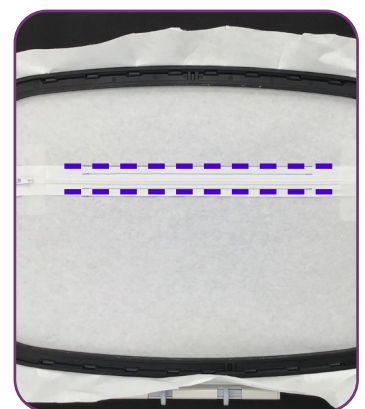


EMBROIDERY




Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the folded edge of the Top and Bottom Front Panels next to the zipper teeth.
- Cover the zipper tackdown line. Do not cover the zipper teeth.
- Tape in place to secure.
- Note: The fabric side backed with Fusible Woven should be on top to better support the embroidery stitches.

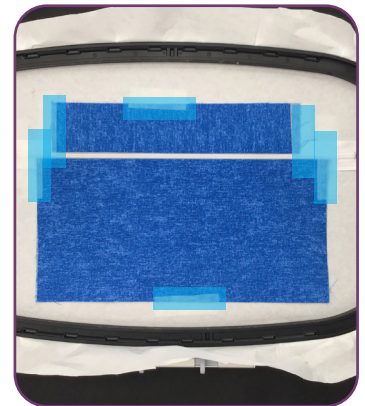

Step 8

- Return the hoop to the machine.
- Stitch Machine Step 3, Front Panels Tackdown.

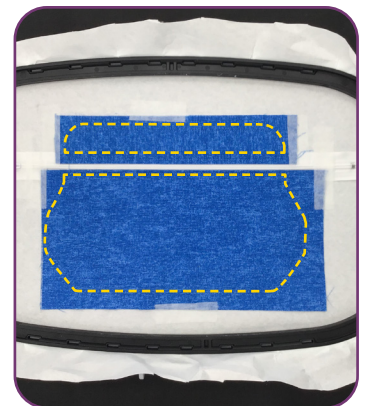

Step 9

- Follow the thread color chart and stitch the remaining embroidery details, Machine Steps 4-8.



EMBROIDERY



Step 10

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Turn hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edges of the Top and Bottom Lining fabric slightly inside the Zipper Tackdown.
- Gently secure with tape. (Do not press too hard!)



Step 11

- Return the hoop to the machine.
- Stitch Machine Step 9, Inner Panels Tackdown.



Step 12

- Unzip the zipper halfway. Not all the way, just HALFWAY.
- Note: This is the most important step in the whole project. Be mindful to unzip halfway.



EMBROIDERY




Step 13

- Position the back fabric, right side down over the front of the zipper pouch completely covering the stitched pieces. (Fusible Woven prepped fabric).



Step 14

- Stitch Machine Step 10, Backing Tackdown.

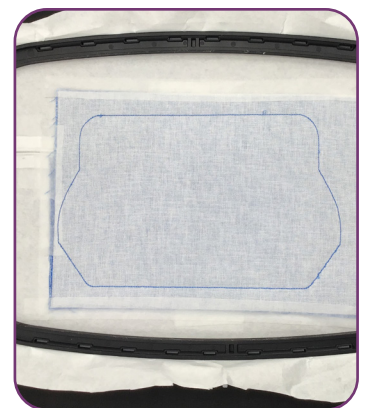

Step 15

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and position the back lining, face down on the back of the hoop.
- Tape in place to secure.




EMBROIDERY




Step 16

- Return the hoop to the machine.
- Stitch Machine Step 11, Inner Lining Tackdown.
- Note: The opening in the top is called the “neck”. This opening is used for turning the back fabric.

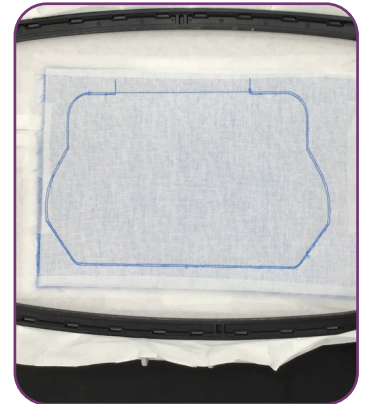

Step 17

- The stitching is complete.
- Remove the project from the hoop and trim approximately 1/4” from the outermost stitching line.
- DO NOT cut the neck opening. Trim across the neck above the vertical lines of stitching.
- Clip each inner corner of the neck to, but not through, the corner stitch.
- Note: Zipper pouches are turned twice, so don't panic after the first turn!

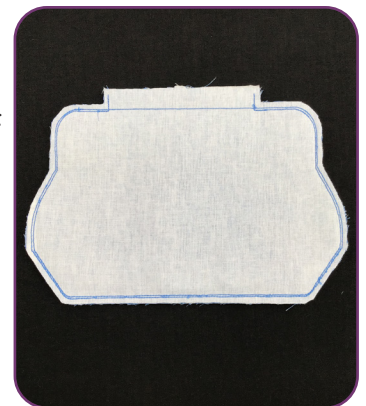

Step 18

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.



EMBROIDERY



Step 19

- Remove the stabilizer from the zipper area.
- Unzip the zipper.



Step 20

- Tuck the neck area to the inside of the bag, press.
- Tip: Close the opening by hand stitching.



Step 21

- Turn the pouch right side out through the zipper.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth.



EMBROIDERY



Step 22

- The bag is complete. Enjoy!

