On the Go Luggage Tags

MATERIALS

Isacord Thread Colors

1760 Twine	2905 Iris Blue	3951 Azure Blue
2152 Heather Pink	3030 Amethyst	5542 Garden Moss
2520 Garden Rose	3620 Marine Blue	5552 Palm Leaf

* Project instructions included after design list.
Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

Table of Contents

Interactive Menu
Click to Navigate

DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51288-01 Let's Start the Journey Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	11621 St.

■	1. Front Fabric Placement Stitch	2520
■	2. Front Fabric Tackdown	2520
■	3. Sage Green Detail	5542
■	4. Light Olive Green Detail	5552
■	5. Mauve Detail	2152
■	6. Tan Detail	1760
■	7. Pink Detail	2520
■	8. Back Fabric Tackdown	2520
■	9. Clear Vinyl Tackdown	2520
■	10. Tag Cut Line	2520

FABRIC REQUIRED
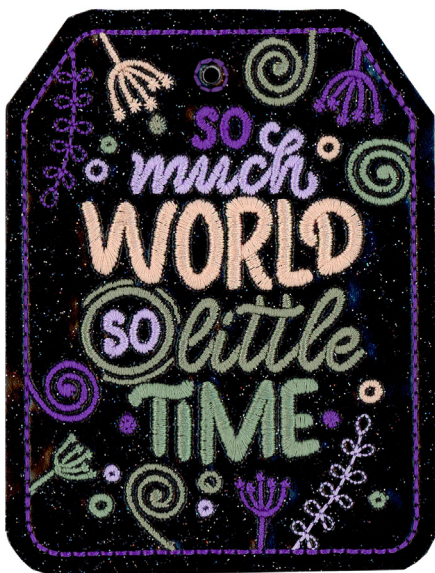
51288-02 So Much World So Little Time Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	13648 St.

■	1. Front Fabric Placement Stitch	2905
■	2. Front Fabric Tackdown	2905
■	3. Tan Detail	1760
■	4. Sage Green Detail	5542
■	5. Light Olive Green Detail	5552
■	6. Iris Blue Detail	2905
■	7. Amethyst Detail	3030
■	8. Back Fabric Tackdown	2905
■	9. Clear Vinyl Tackdown	2905
■	10. Tag Cut Line	2905

DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.
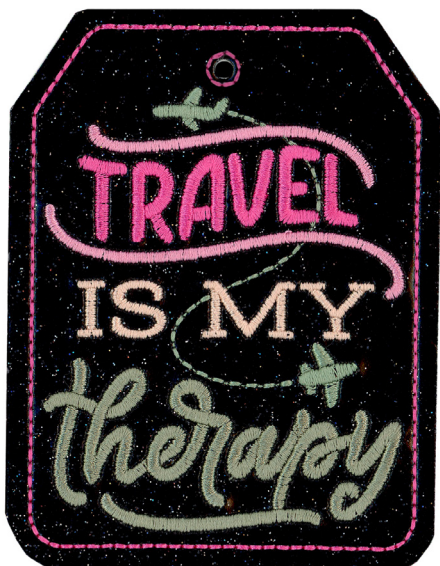
FABRIC REQUIRED

51288-03 Go Where You Feel Most Alive Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	12145 St.

1. Front Fabric Placement Stitch 3620
2. Front Fabric Tackdown 3620
3. Azure Blue Detail... 3951
4. Light Olive Green Detail 5552
5. Sage Green Detail 5542
6. Marine Blue Detail 3620
7. Tan Detail 1760
8. Back Fabric Tackdown 3620
9. Clear Vinyl Tackdown 3620
10. Tag Cut Line 3620

FABRIC REQUIRED

51288-04 Travel Is My Therapy Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	9162 St.

1. Front Fabric Placement Stitch 2520
2. Front Fabric Tackdown 2520
3. Sage Green Detail 5542
4. Tan Detail 1760
5. Pink Detail 2520
6. Mauve Detail 2152
7. Light Olive Green Detail 5552
8. Back Fabric Tackdown 2520
9. Clear Vinyl Tackdown 2520
10. Tag Cut Line 2520

DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51288-05 Flower Border Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	5850 St.

1. Front Fabric Placement Stitch 2905
2. Front Fabric Tackdown 2905
3. Iris Blue Detail 2905
4. Tan Detail 1760
5. Sage Green Detail 5542
6. Amethyst Detail 3030
7. Light Olive Green Detail 5552
8. Back Fabric Tackdown 2905
9. Clear Vinyl Tackdown 2905
10. Tag Cut Line 2905

FABRIC REQUIRED

51288-06 Blank Luggage Tag

Size Inches:	Size mm:	Stitch Count:
4.85 X 3.66 in.	123.1 X 92.9 mm	1373 St.

1. Front Fabric Placement Stitch 2520
2. Front Fabric Tackdown 2520
3. Back Fabric Tackdown 2520
4. Clear Vinyl Tackdown 2520
5. Tag Cut Line 2520

SUPPLIES

Stabilizers

- OESD Light Weight TearAway
- OESD StabilStick CutAway

Fabrics/Textiles

- 5.75" x 4.75" OESD Luxe Sparkle Vinyl Black
- 5.75" x 4.75" Quilter's cotton fabric
- 5.75" x 4.75" OESD Clear Vinyl
- 1/4" x 10" long Ribbon (1)

  Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Perfect Punch Tool
- 505 Temporary Spray Adhesive

Isacord Thread Colors

- Per thread chart

EMBROIDERY

General Instructions

The instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.

Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

☐ Step 1

- Adhere one layer of StabilStick CutAway to the wrong side of the quilter's cotton fabric, to provide stiffness to the finished tag.
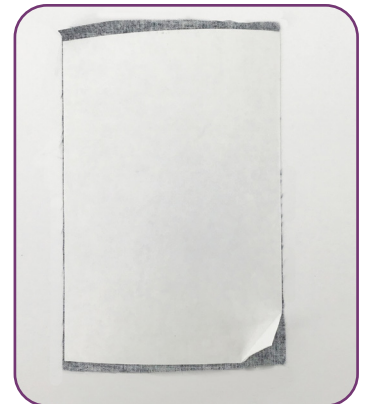
☐ Step 2

- Hoop one layer of Light Weight TearAway.

☐ Step 3

- Load selected design into the machine.
- Example design is 51288-03.
- Thread the machine per the thread chart.
- Place hoop on the machine.
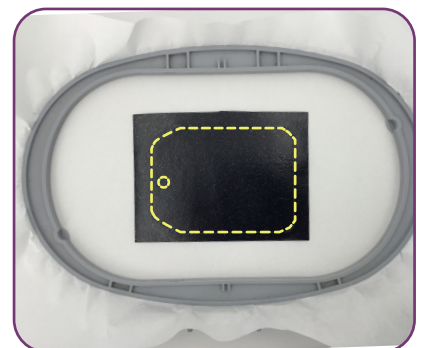- Stitch Machine Step 1, Front Fabric Placement Stitch.
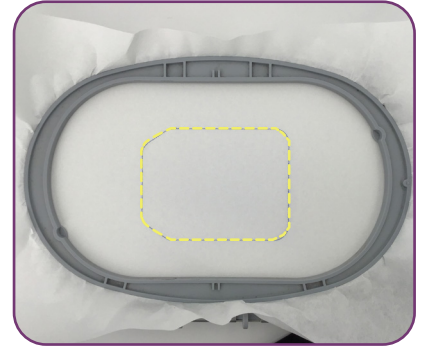
☐ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay the hoop on a flat surface.
- Spray the back of the vinyl piece with 505 Temporary Spray Adhesive.
- Completely cover the placement stitch with the prepared vinyl.
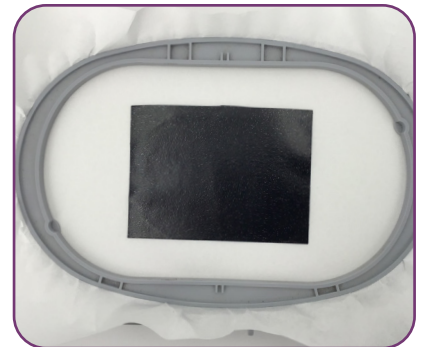
☐ Step 5

- Return the hoop to the machine and stitch Machine Step 2, Front Fabric Tackdown.

Step 6

- Continue stitching Machine Steps 3 – 7.

- Note: Stop before the Back Fabric Tackdown Stitch.

Step 7

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Turn the hoop over and place the prepared fabric, right side up, completely covering the placement stitch.
- Carefully tape corners to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.


BACK OF HOOP

BACK OF HOOP

☐ Step 8

- Return the hoop to the machine.
- Stitch Machine Step 8, Back Fabric Tackdown. Match the bobbin thread to the upper thread.

BACK OF HOOP

☐ Step 9

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Turn the hoop over and place the clear vinyl, completely covering the placement stitch.
- Carefully tape corners to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.
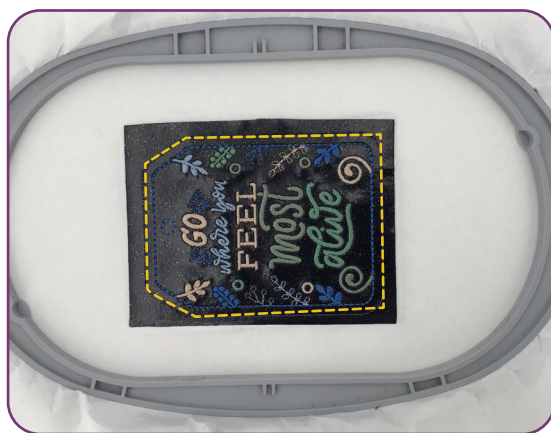- Note: Only apply tape to the corners of the clear vinyl.

BACK OF HOOP
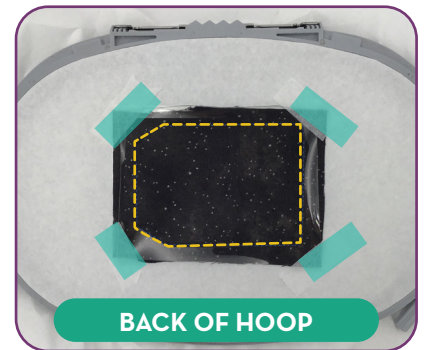
☐ Step 10

- Return the hoop to the machine.
- With matching bobbin thread, stitch Machine Steps 9 - 10 per the thread chart.

BACK OF HOOP

☐ Step 11

- When the design is complete, remove the project from the hoop and tear away stabilizer. Trim the design slightly inside the Tag Cut Line.

EMBROIDERY

☐ Step 12

• Using the OESD Perfect Punch Tool fitted with the 4mm tip, punch a hole through the eyelet.
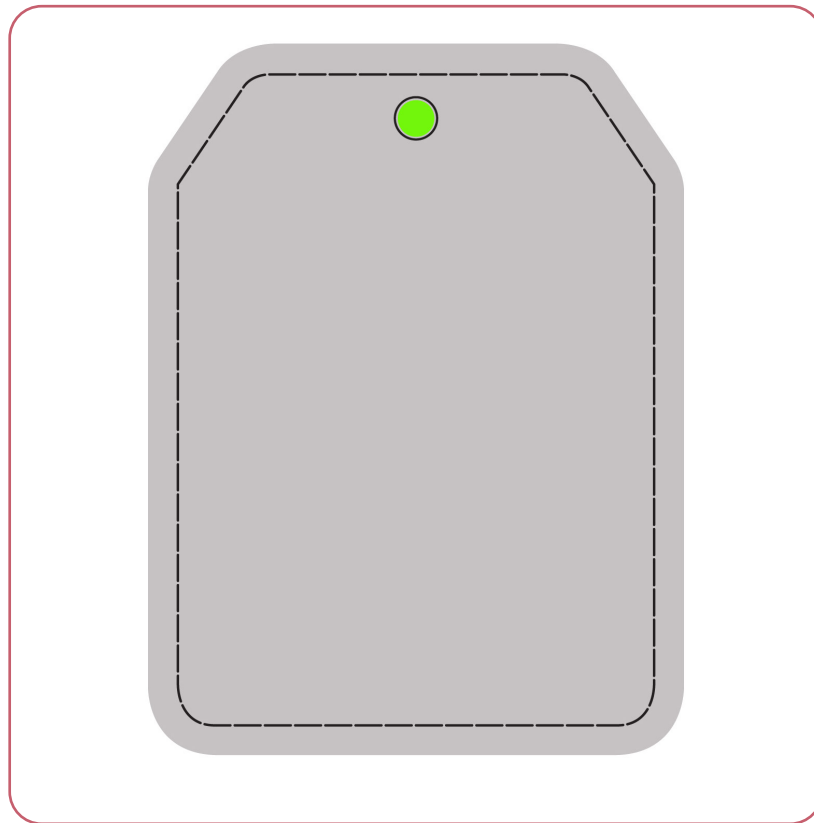

☐ Step 13

• Insert card in the back of tag and secure in place by tying a ribbon through the punched hole. The tag is now complete!

- 🔵 = 2 MM
- 🔴 = 3 MM
- 🟢 = 4 MM