


Freestanding Lace Dreamcatcher

#12520 / 9 Designs




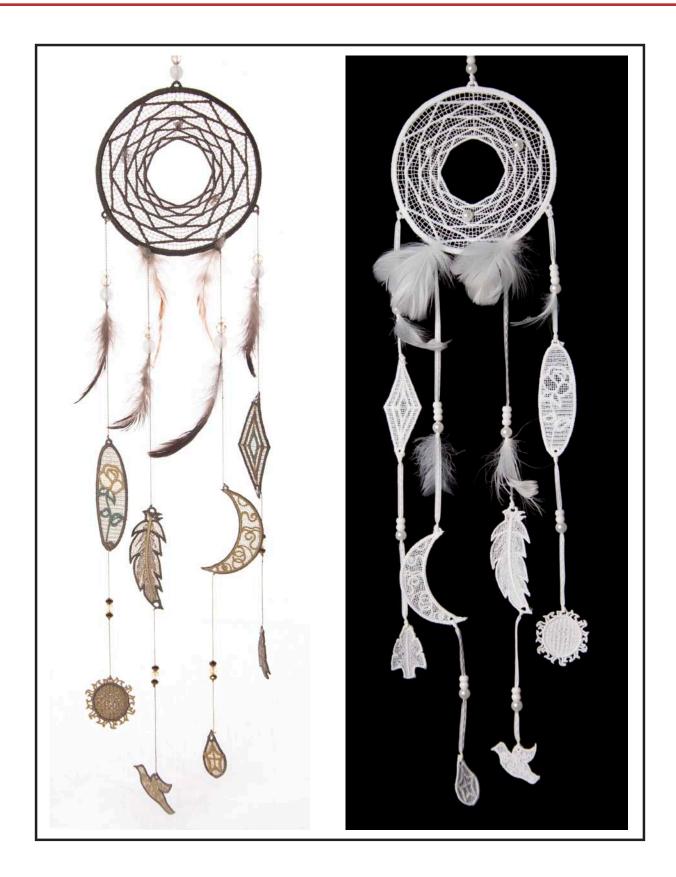

Freestanding Lace Dreamcatcher

#12520 / 9 Designs

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

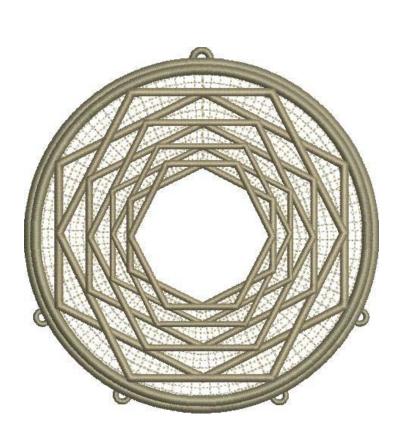

12520-01 Webbed Ring FSL 4.88 X 5.04 in. 123.95 X 128.02 mm 24,393 St. ₩♡ L



12520-02 Rose Dangler FSL 1.18 X 3.27 in. 29.97 X 83.06 mm 7,112 St. ₩♡ S



12520-04 Diamond Dangler FSL 1.32 X 3.26 in. 33.53 X 82.80 mm 5,024 St. ₩♡ S



12520-03 Feather Dangler FSL 1.24 X 3.01 in. $31.50 \; X \; 76.45 \; mm$ 5,698 St. ₩♡ S



12520-05 Moon Dangler FSL 1.73 X 2.71 in. 43.94 X 68.83 mm 5,107 St. ##



12520-06 Sun Dangler FSL

1.49 X 1.54 in.

37.85 X 39.12 mm

5,356 St. ₩\$ S

12520-07 Bird Dangler FSL $2.01 \ X \ 1.12 \ in.$ 51.05 X 28.45 mm

3,359 St. ₩♡ S

1.09 X 1.53 in. 27.69 X 38.86 mm 2,467 St. ₩♡ S



12520-08 Arrowhead Dangler FSL 12520-09 Teardrop Dangler FSL .91 X 1.51 in. 23.11 X 38.35 mm 2,200 St. ₩♡ S

- Design contains a loose fill.
- Some solid areas shown are not stitched.

- Design is larger than 5" (127 mm) in either direction.
- Design is smaller than 1.5" (38.1 mm) in either direction.



Freestanding Lace Dreamcatcher

#12520 / 9 Designs

Listings below indicate color sample, stitching order and suggested thread color number. "I" refers to Isacord thread and "I" refers to Timeless thread. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

I	Т	I	Т	I	Т
12520-01 Webbed Ring FSL	_	12520-04 Diamond Dangler FSL	_	12520-07 Bird Dangler FSL	_
1. Tan Netting	28169	1. Tan Netting0672	28169	1. Tan Netting0672	28169
2. Dark Brown Outer Ring0776	28175	2. Yellow Netting & Detail0771	20106	2. Yellow Swirls0771	20106
3. Brown Inner Rings	28118	3. Dark Brown Outline0776	28175	3. Brown Outline	28118
		4. Brown Outline	28118		
12520-02 Rose Dangler FSL		5. Green Outline	18211	12520-08 Arrowhead Dangler FSL	
1. Tan Netting	28169			1. Brown Netting	28118
2. Dark Brown Outline0776	28175	12520-05 Moon Dangler FSL		2. Tan Netting	28169
3. Brown Outline	28118	1. Tan Netting0672	28169	3. Dark Brown Outline0776	
4. Green Stem & Leaves	18211	2. Yellow Swirls0771	20106		
5. Yellow Rose0771	20106	3. Brown Outline0722	28118	12520-09 Teardrop Dangler FSL	
		4. Yellow Outline0771	20106	1. Tan Netting	28169
12520-03 Feather Dangler FSL				2. Brown Outline	
1. Tan Netting	28169	12520-06 Sun Dangler FSL		3. Yellow Star0771	20106
2. Brown Netting	28118	1. Brown Netting0722	28118		
3. Yellow Spine0771	20106	2. Yellow Flares0771	20106		
4. Dark Brown Outline	28175	3. Brown Outline	28118		

General Freestanding Lace Guidelines

Supplies:

Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle.
- Use an Organ 80/12 Titanium needle for extended needle life. **Stabilizer:**
- Use water-soluble stabilizer or film water-soluble stabilizer.

Handy Hints:

For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a "stiffer" lace.
 Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

For Very Soft Lace:

 Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. Note: If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

Drying Lace:

The lace looks best when left to dry completely. Lay lace
piece with right side down to dry. This will minimize the
tendency for the lace to curl. Be sure to flatten the piece out
entirely and allow ample time to dry.

General Instructions

- 1. Hoop two layers of water-soluble stabilizer.
- Attach the hoop to the machine and select the design of your choice.
- 3. Stitch the design.
- 4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
- 5. Rinse away remaining stabilizer and allow it to dry.