

Contour Appliqué

NOTE: Appliqué Fabric Not Included.

BE110401 Appliqué

Size Inches: 4.59w x 4.58h
 Size mm: 116.59w x 116.33h
 Stitch Count: 12,976

I S



■ 1 Appliqué Placement Stitches	1921	1257
■ 2 Appliqué Tackdown & Cover Stitches	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Green Linework	6051	1104
■ 5 Blue Linework	4952	1204

BE110406 Appliqué

Size Inches: 2.25w x 2.26h
 Size mm: 57.15w x 57.40h
 Stitch Count: 3,284

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Blue Linework	4952	1204

BE110402 Appliqué

Size Inches: 4.61w x 4.61h
 Size mm: 117.09w x 117.09h
 Stitch Count: 15,463

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Green Linework	6051	1104
■ 5 Blue Linework	4952	1204

BE110407 Appliqué

Size Inches: 2.31w x 4.26h
 Size mm: 58.67w x 108.20h
 Stitch Count: 4,293

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Blue Linework	4952	1204
■ 5 Green Linework	6051	1104

BE110403 Appliqué

Size Inches: 4.73w x 4.73h
 Size mm: 120.14w x 120.14h
 Stitch Count: 14,692

I S



■ 1 Appliqué Placement Stitches	1921	1257
■ 2 Appliqué Tackdown & Cover Stitches	1921	1257
■ 3 Blue Linework	4952	1204
■ 4 Orange Linework	0811	1137
■ 5 Green Linework	6051	1104

BE110408 Appliqué

Size Inches: 5.26w x 2.24h
 Size mm: 133.60w x 56.90h
 Stitch Count: 7,167

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Green Linework	6051	1104

BE110404 Appliqué

Size Inches: 4.69w x 4.68h
 Size mm: 119.13w x 118.87h
 Stitch Count: 15,398

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Blue Linework	4952	1204
■ 4 Green Linework	6051	1104
■ 5 Orange Linework	0811	1137

BE110409 Appliqué

Size Inches: 2.94w x 3.83h
 Size mm: 74.68w x 97.28h
 Stitch Count: 4,039

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Orange Linework	0811	1137
■ 4 Blue Linework	4952	1204
■ 5 Green Linework	6051	1104

BE110405 Appliqué

Size Inches: 4.83w x 4.83h
 Size mm: 122.68w x 122.68h
 Stitch Count: 15,068

I S



■ 1 Appliqué Placement Stitch	1921	1257
■ 2 Appliqué Tackdown & Cover Stitch	1921	1257
■ 3 Blue Linework	4952	1204
■ 4 Orange Linework	0811	1137
■ 5 Green Linework	6051	1104

BE110410 Appliqué

Size Inches: 4.32w x 4.32h
 Size mm: 109.73w x 109.73h
 Stitch Count: 10,958

I S



■ 1 Blue Linework	4952	1204
■ 2 Orange Linework	0811	1137
■ 3 Green Linework	6051	1104
■ 4 Red Linework	1921	1257

Some designs in this collection were created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

I = Isacord® thread color number
 S = Sulky® thread color number


Isacord® is a registered trademark of Ackermann, A Division of the Amann Group
 Sulky® is a registered trademark of Sulky of America

Color crossovers from Isacord® to Sulky® are the closest possible match.
 Not responsible for oversights, errors, or omissions. To ensure accuracy, sew a test piece first.

Contour Appliqué

NOTE: Appliqué Fabric Not Included.

BE110411 Size Inches: 1.76w x 1.75h
Size mm: 44.70w x 44.45h
Stitch Count: 3,260

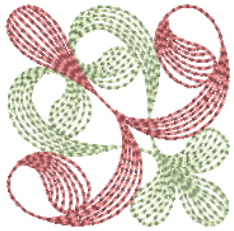

1 Green Linework
2 Red Linework

	I	S
6051	1104	
1921	1257	

BE110416 Size Inches: 3.70w x 4.26h
Size mm: 93.98w x 108.20h
Stitch Count: 3,793



1 Orange Linework
2 Blue Linework
3 Red Linework

	I	S
0811	1137	
4952	1204	
1921	1257	

BE110412 Size Inches: 2.68w x 4.88h
Size mm: 68.07w x 123.95h
Stitch Count: 4,345



1 Orange Linework
2 Blue Linework
3 Red Linework

	I	S
0811	1137	
4952	1204	
1921	1257	

BE110417 Size Inches: 1.76w x 5.25h
Size mm: 44.70w x 133.35h
Stitch Count: 8,178



1 Blue Linework
2 Green Linework
3 Orange Linework

	I	S
4952	1204	
6051	1104	
0811	1137	

BE110413 Size Inches: 4.16w x 1.97h
Size mm: 105.66w x 50.04h
Stitch Count: 3,549



1 Orange Linework
2 Blue Linework
3 Red Linework

	I	S
0811	1137	
4952	1204	
1921	1257	

BE110418 Size Inches: 2.30w x 3.56h
Size mm: 58.42w x 90.42h
Stitch Count: 3,330



1 Orange Linework
2 Blue Linework
3 Red Linework

	I	S
0811	1137	
4952	1204	
1921	1257	


BE110414 Size Inches: 1.83w x 5.31h
Size mm: 46.48w x 134.87h
Stitch Count: 2,860



1 Green Linework
2 Red Linework
3 Orange Linework

	I	S
6051	1104	
1921	1257	
0811	1137	

BE110419 Size Inches: 4.27w x 4.27h
Size mm: 108.46w x 108.46h
Stitch Count: 14,390

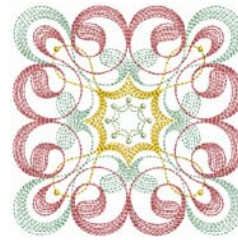

1 Green Linework
2 Orange Linework
3 Blue Linework
4 Red Linework

	I	S
6051	1104	
0811	1137	
4952	1204	
1921	1257	

BE110415 Size Inches: 1.72w x 6.79h
Size mm: 43.69w x 172.47h
Stitch Count: 6,495



1 Green Linework
2 Orange Linework
3 Red Linework

	I	S
6051	1104	
0811	1137	
1921	1257	

BE110420 Appliqué
Size Inches: 2.19w x 4.23h
Size mm: 55.63w x 107.44h
Stitch Count: 3,087



1 Appliqué Placement Stitch
2 Appliqué Tackdown & Cover Stitch
3 Orange Linework
4 Blue Linework
5 Green Linework

	I	S
1921	1257	
1921	1257	
0811	1137	
4952	1204	
6051	1104	

Contour Appliqué

NOTE: Appliqué Fabric Not Included.

BE110421	Size Inches:	Size mm:	Stitch Count:	
	3.28w x 3.18h	83.31w x 80.77h	3,769	
			I	S



1 Orange Linework	0811	1137
2 Blue Linework	4952	1204
3 Red Linework	1921	1257

BE110426	Size Inches:	Size mm:	Stitch Count:	
	1.18w x 5.20h	29.97w x 132.08h	3,784	
			I	S




1 Orange Linework	0811	1137
2 Blue Linework	4952	1204
3 Green Linework	6051	1104

BE110422	Size Inches:	Size mm:	Stitch Count:	
	3.09w x 5.11h	78.49w x 129.79h	5,753	
			I	S



1 Orange Linework	0811	1137
2 Blue Linework	4952	1204
3 Green Linework	6051	1104

BE110427	Size Inches:	Size mm:	Stitch Count:	
	2.26w x 2.26h	57.40w x 57.40h	2,435	
			I	S

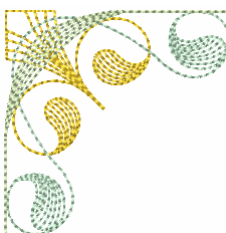

1 Orange Linework	0811	1137
2 Blue Linework	4952	1204
3 Green Linework	6051	1104

BE110423	Appliqué	Size Inches:	Size mm:	Stitch Count:	
		4.76w x 4.76h	120.90w x 120.90h	18,109	
			I	S	



1 Appliqué Placement Stitch	1921	1257
2 Appliqué Tackdown & Cover Stitch	1921	1257
3 Blue Linework	4952	1204
4 Orange Linework	0811	1137
5 Green Linework	6051	1104

BE110428	Jumbo Appliqué	Size Inches:	Size mm:	Stitch Count:	
		8.92w x 8.92h	226.57w x 226.57h	38,243	
			I	S	



1 Appliqué Placement Stitches	1921	1257
2 Appliqué Tackdown & Cover Stitches	1921	1257
3 Orange Linework	0811	1137
4 Blue Linework	4952	1204
5 Green Linework	6051	1104

BE110424	Size Inches:	Size mm:	Stitch Count:	
	2.88w x 5.71h	73.15w x 145.03h	4,920	
			I	S



1 Orange Linework	0811	1137
2 Green Linework	6051	1104
3 Red Linework	1921	1257

BE110429	Jumbo	Size Inches:	Size mm:	Stitch Count:	
		8.98w x 8.98h	228.09w x 228.09h	30,185	
			I	S	



1 Orange Linework	0811	1137
2 Green Linework	6051	1104
3 Red Linework	1921	1257

BE110425	Appliqué	Size Inches:	Size mm:	Stitch Count:	
		2.34w x 4.97h	59.44w x 126.24h	6,673	
			I	S	



1 Appliqué Placement Stitch	1921	1257
2 Appliqué Tackdown & Cover Stitch	1921	1257
3 Orange Linework	0811	1137
4 Blue Linework	4952	1204
5 Green Linework	6051	1104


BE110430	Jumbo Appliqué	Size Inches:	Size mm:	Stitch Count:	
		9.01w x 9.01h	228.85w x 228.85h	51,136	
			I	S	



1 Appliqué Placement Stitch	1921	1257
2 Appliqué Tackdown & Cover Stitch	1921	1257
3 Green Linework	6051	1104
4 Blue Linework	4952	1204
5 Orange Linework	0811	1137


ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

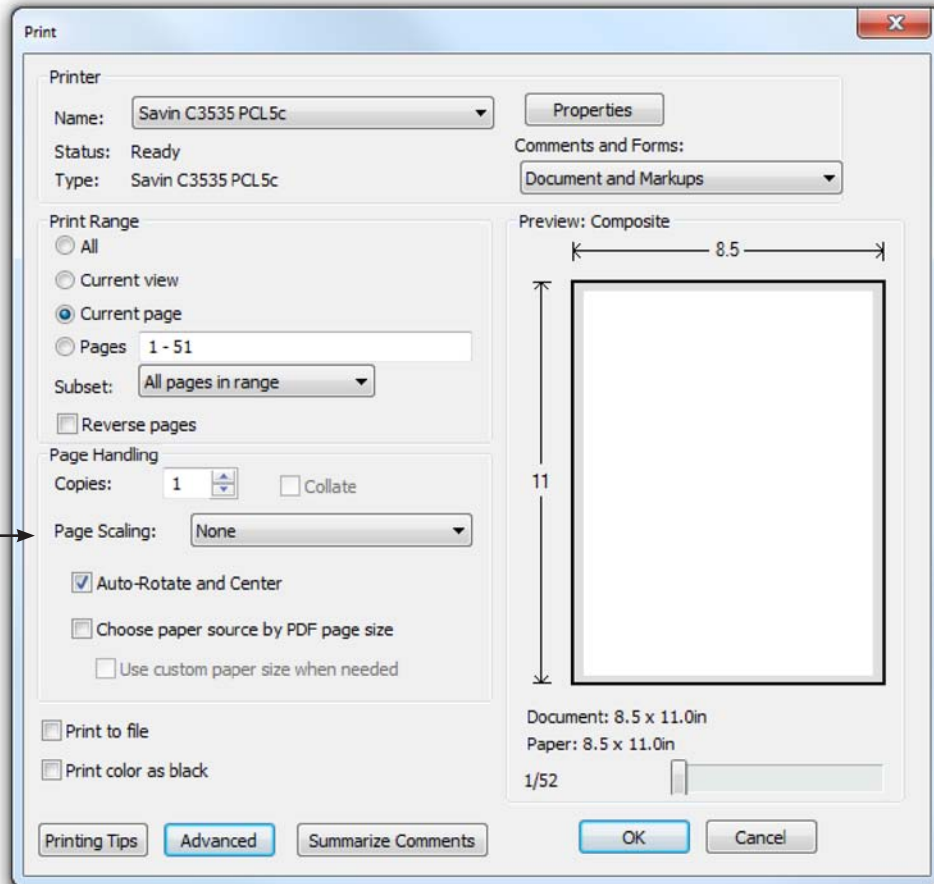








TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

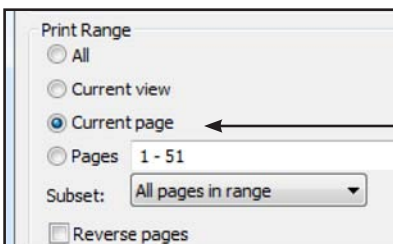








Contour Appliqué

Appliqué Patterns

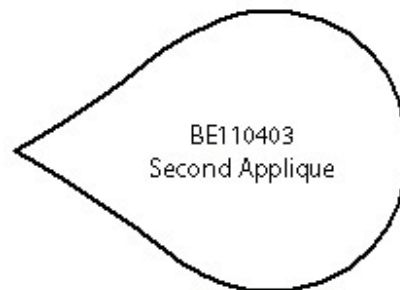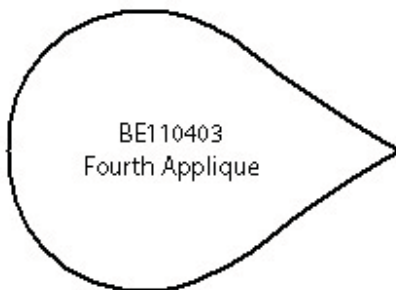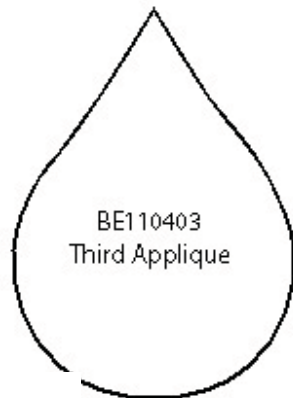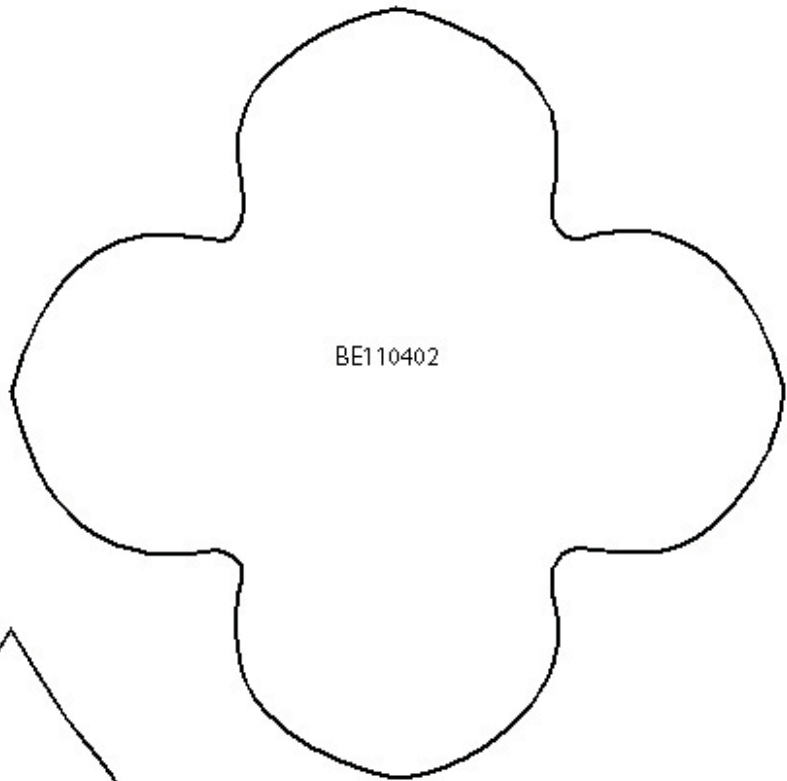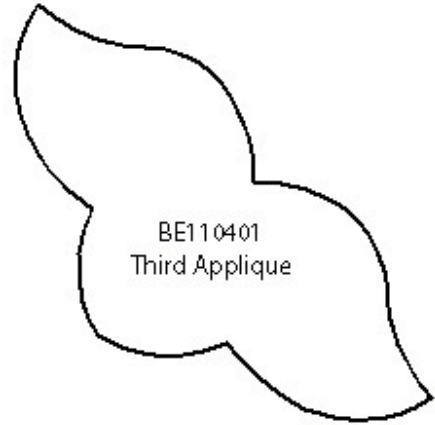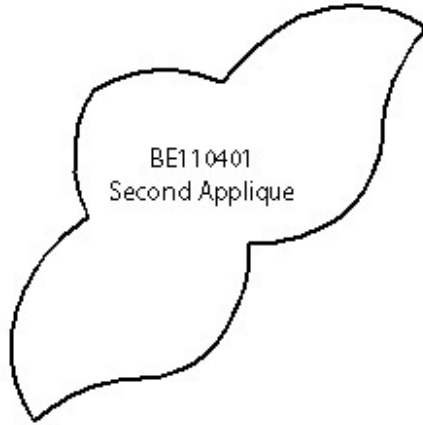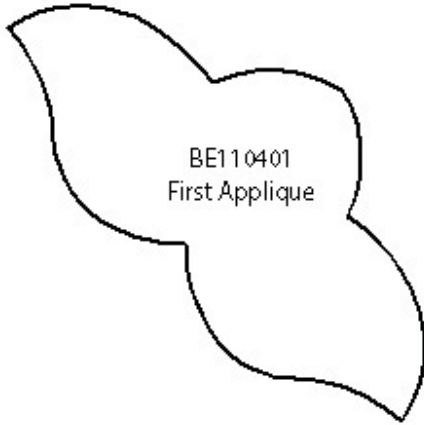







Contour Appliqué

Appliqué Patterns

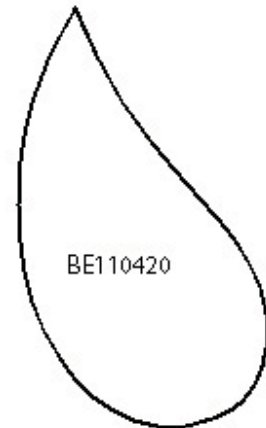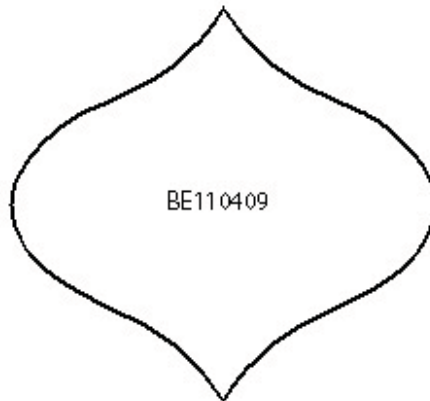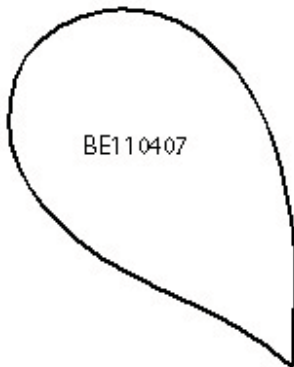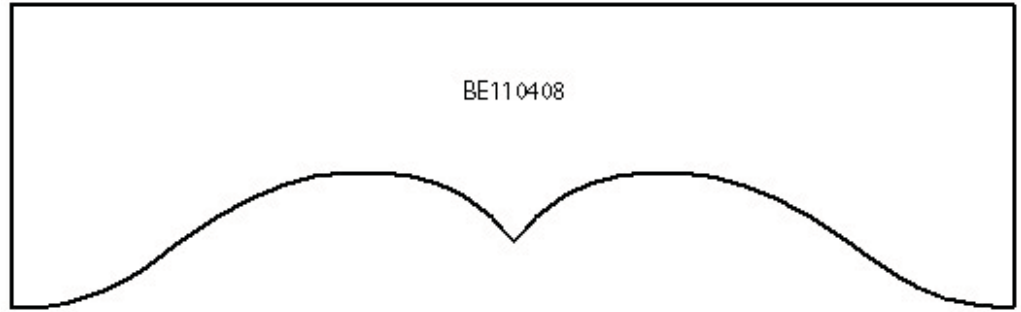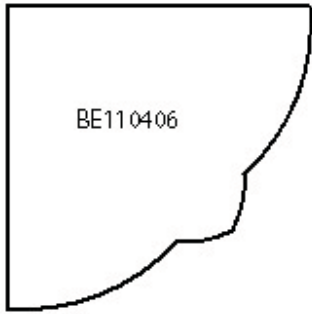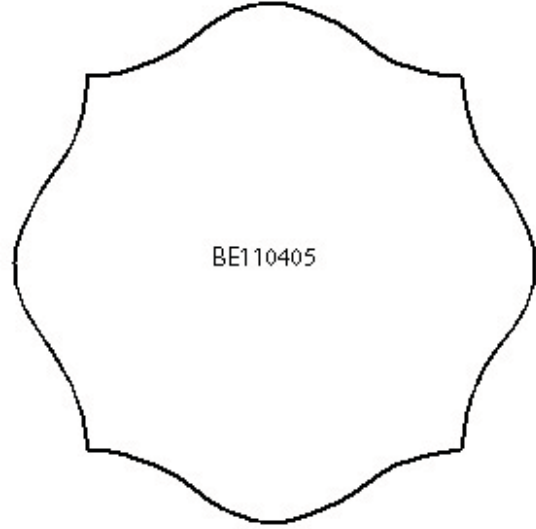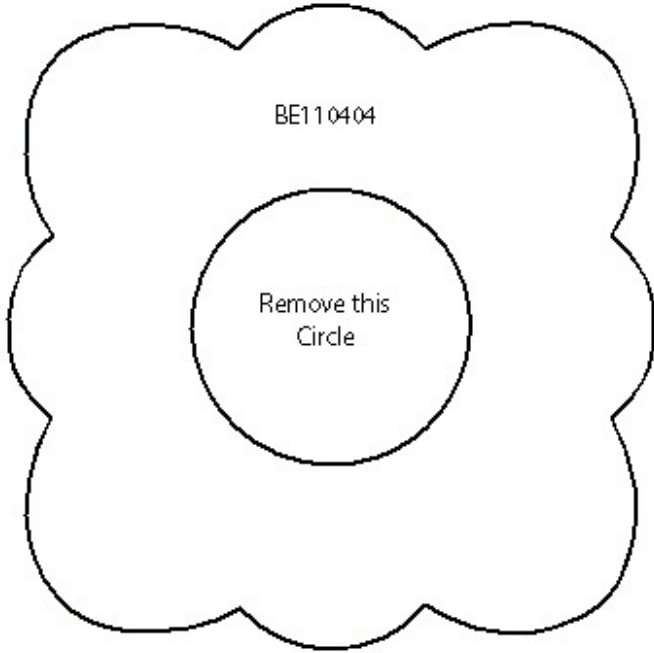




Contour Appliqué

Appliqué Patterns

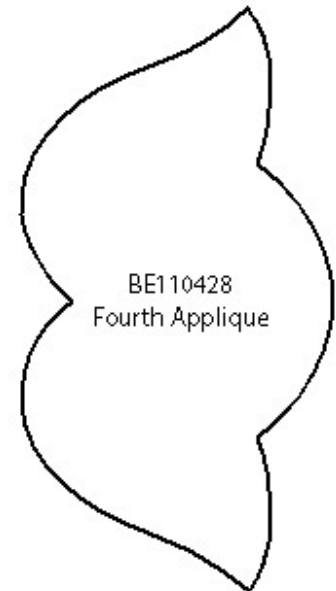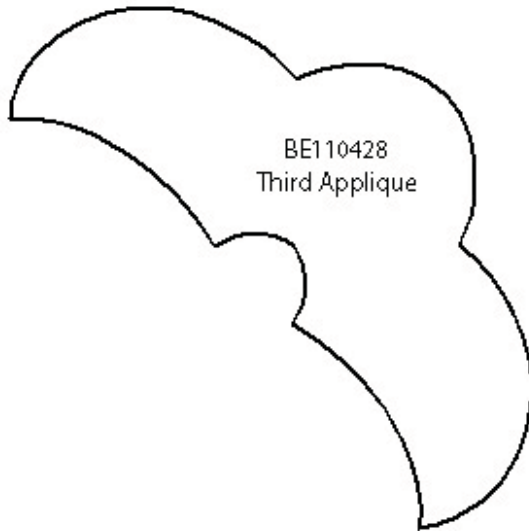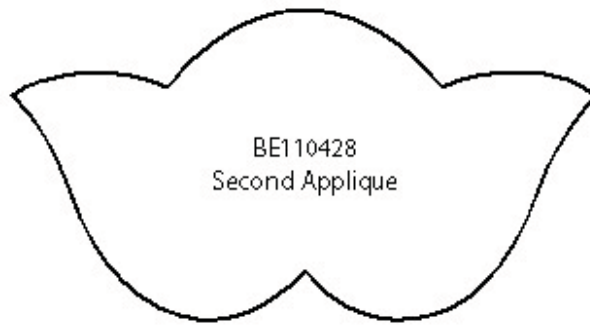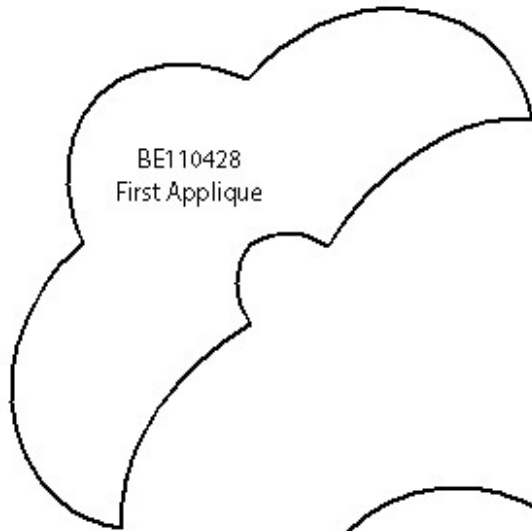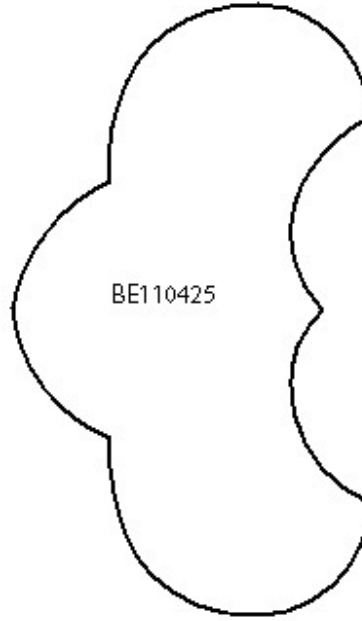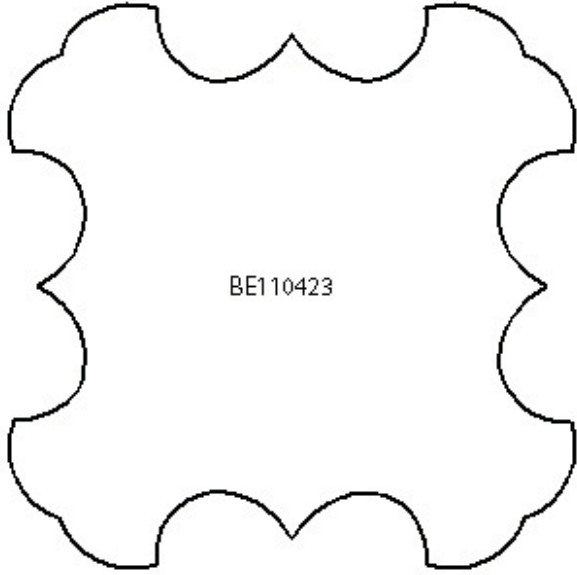




Contour Appliqué

Appliqué Patterns

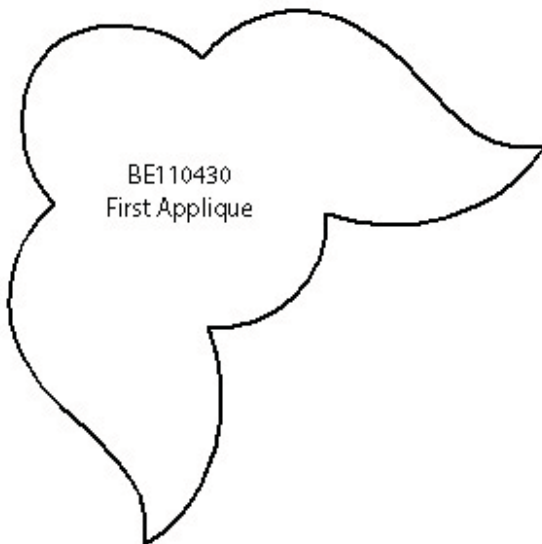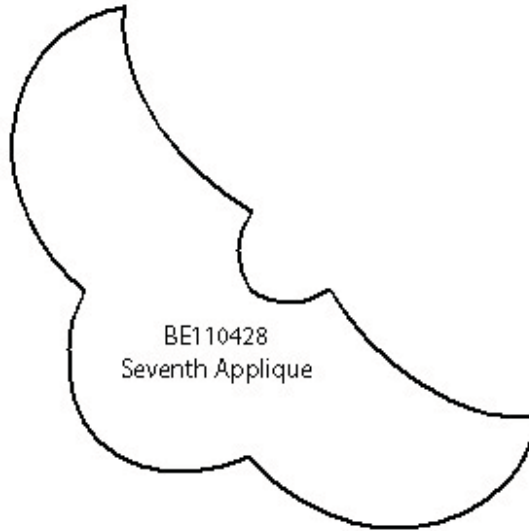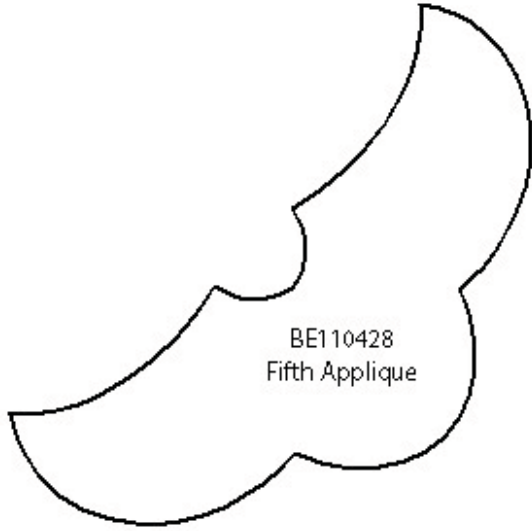

Contour Appliqué

Appliqué Patterns

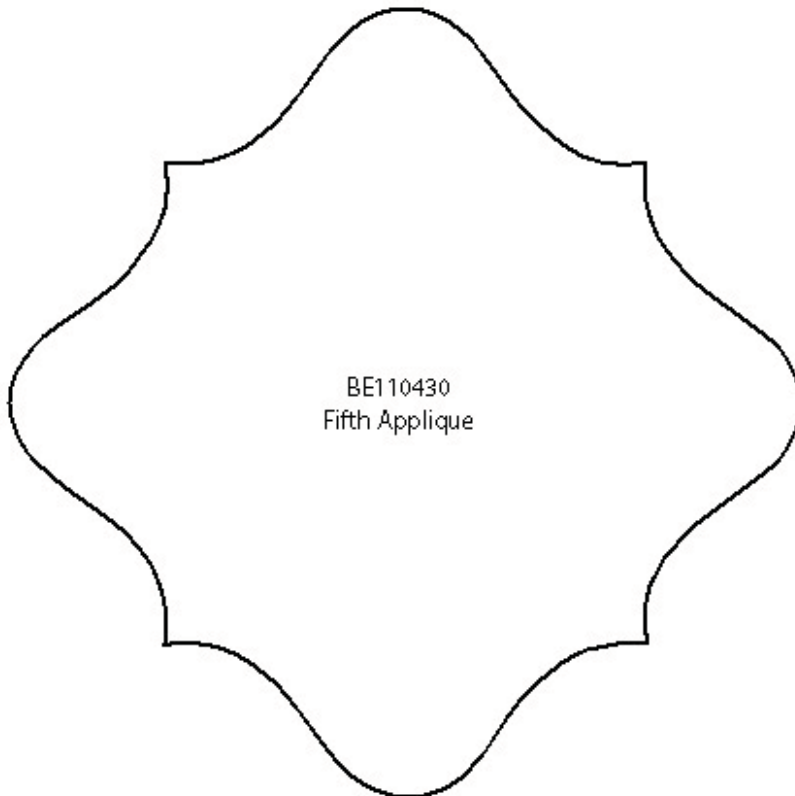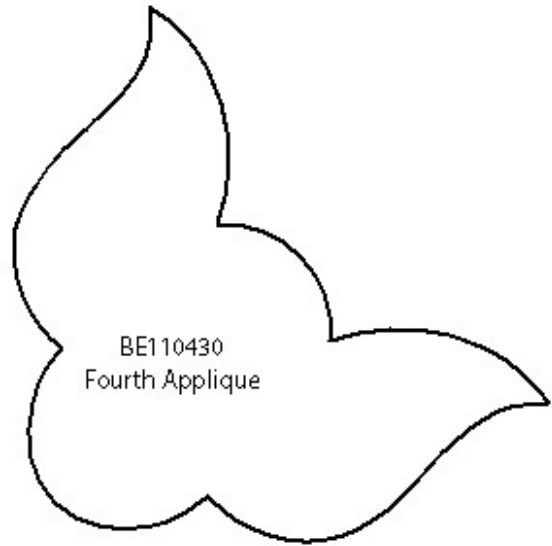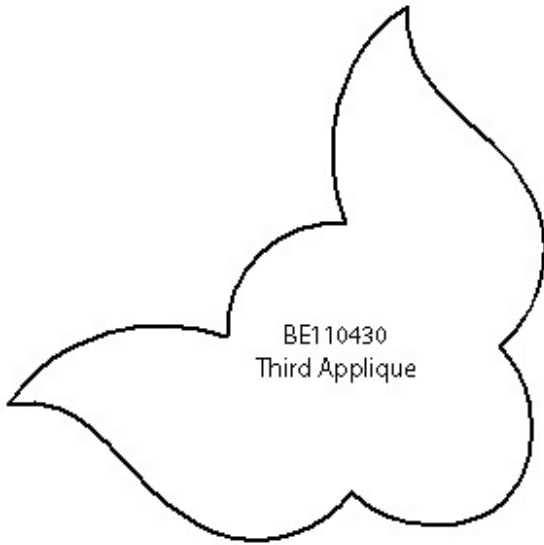




Contour Appliqué

Pre-Cut Appliqué Instructions

1. Print out the necessary pages from the PDF of the appliqué pattern(s).
2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
7. Place the fabric inside the sewing placement stitch so that it matches the stitching line then remove the paper pattern. **PHOTO 3**
8. Sew the tackdown. **PHOTO 4**
9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**

NOTE: The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size, i.e. resize the designs to 80%, resize the printed pattern to 80%.

TIP: When Printing the patterns, make sure that the “Fit to page” option is **UNCHECKED** in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

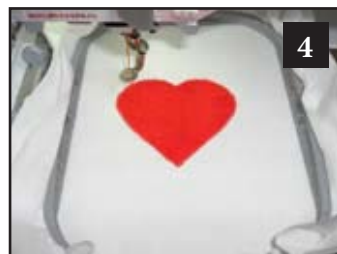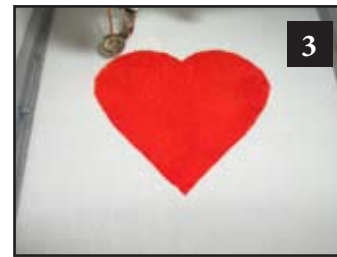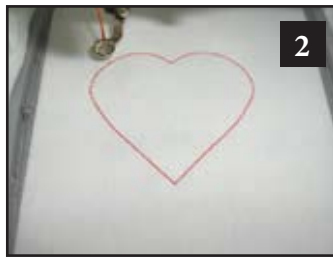

Contour Appliqué

BERNINA® Cutwork Accessory Pre-Cut Appliqué Instructions

SUPPLIES

- Cut-Away Stabilizer
- Temporary Spray Adhesive
- Appliqué Fuse & Fix Stabilizer
- Embroidery Thread
- Stabilizer that is appropriate for your project
- BERNINA® CutWork Accessory

PREPARE APPLIQUE FABRIC

1. Starch appliqué fabric 2-3 times following manufacturer's instructions.
2. Appliqué fabric should be crisp.
3. Iron Appliqué Fuse & Fix to the wrong side of the starched appliqué fabric following instructions on product packaging.


CUT APPLIQUE PIECES

1. Hoop one layer of Cut-Away Stabilizer.
2. Send first CWA file to the embroidery machine. (CWA files are the pre-cut appliqué files to use with the CutWork Accessory; these files will end in CWA01, CWA02, and CWA03 etc. The number of CWA files available for each design will depend upon how many separate appliqués each design contains.)
3. Stitch the first color, this will be the placement stitch.
4. Remove the hoop from the machine but do not remove the stabilizer from the hoop. Spray the hooped stabilizer with temporary spray adhesive. Lay prepared appliqué fabric over the placement stitch, being sure to completely cover the stitching. Apply pressure to appliqué fabric to ensure it is adhered.
5. Stitch the second color, this will be the basting stitch. It is meant to baste the appliqué fabric to your hooped stabilizer.
6. Replace normal stitch plate with the CutWork stitch plate.
7. Unthread the machine.
8. If necessary, turn off the upper thread control on your machine. Refer to your machine's user manual. Note that the most recent version of the 830 will perform this task automatically.
9. Replace embroidery needle with the CutWork Accessory.
10. Replace embroidery foot with foot #44 (If you do not have foot #44 you can leave foot #15 on the machine; foot #44 will simply keep the cut fabric from flagging as much).
11. Attach the hoop to the machine.
12. To cut the first appliqué piece follow the "thread changes" on your machine screen and turn the dial on the CutWork tool as required.
13. Remove the hoop from the machine.
14. Gently remove cut appliqué piece, trimming any thread that may have not been cut completely. **PHOTO 1**
15. Repeat as needed for designs with multiple appliqué pieces.

TACKDOWN APPLIQUE AND COMPLETE EMBROIDERY DESIGN

1. Replace the embroidery needle and rethread the machine.
2. Replace the embroidery foot #15.
3. Spray hoop sized piece of stabilizer that is appropriate for your project and adhere to wrong side of background fabric or project that is to be hooped.
4. Hoop fabric/project and stabilizer.
5. Attach hoop to machine.
6. Send the embroidery file to the machine (this is not a CWA file).
7. Stitch design as normal following the thread changes on the provided thread chart stopping after each Appliqué Placement Stitch.
8. After stitching an Appliqué Placement Stitch, take the precut appliqué pieces required and peel off the cutaway backing and the release paper revealing a sticky backing. **PHOTO 2**
9. Remove hoop from machine, but do not remove the fabric from the hoop.
10. Adhere precut appliqué piece evenly over the Appliqué Placement Stitch; use pressure to make sure pieces stick well. **PHOTO 3**
11. Reattach hoop to machine.
12. Continue stitching design until all appliqué pieces are placed and all stitching is complete. **PHOTO 4**

NOTE: Design pictured is for instructional purposes and may not be included in this collection.

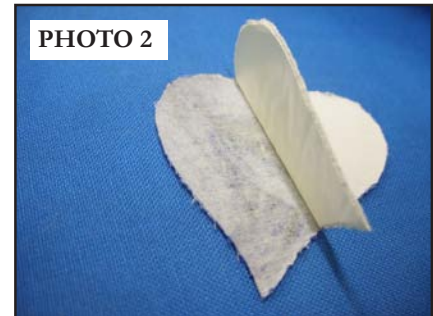







Contour Appliqué

BE110401_CWA01 For use with the BERNINA CutWork Accessory

Size Inches: 2.83w x 2.83h Size mm: 71.88w x 71.88h Stitch Count: 1,574

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

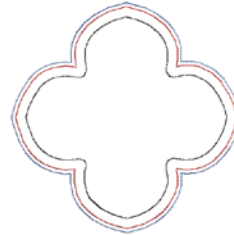BE110402_CWA For use with the BERNINA CutWork Accessory

Size Inches: 4.59w x 4.58h Size mm: 116.59w x 116.33h Stitch Count: 2,756

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

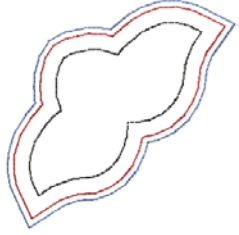BE110401_CWA02 For use with the BERNINA CutWork Accessory

Size Inches: 2.83w x 2.83h Size mm: 71.88w x 71.88h Stitch Count: 1,570

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

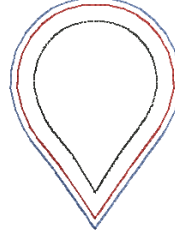BE110403_CWA01 For use with the BERNINA CutWork Accessory

Size Inches: 2.01w x 2.72h Size mm: 51.05w x 69.09h Stitch Count: 1,182

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

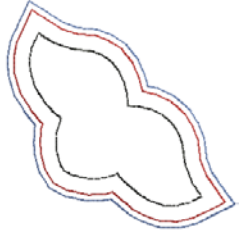BE110401_CWA03 For use with the BERNINA CutWork Accessory

Size Inches: 2.83w x 2.83h Size mm: 71.88w x 71.88h Stitch Count: 1,574

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

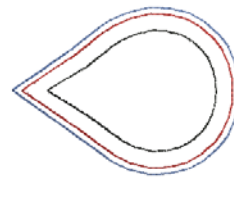BE110403_CWA02 For use with the BERNINA CutWork Accessory

Size Inches: 2.72w x 2.01h Size mm: 69.09w x 51.05h Stitch Count: 1,180

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

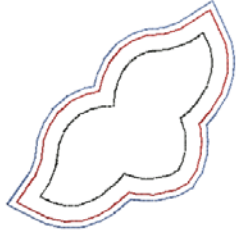BE110401_CWA04 For use with the BERNINA CutWork Accessory

Size Inches: 2.83w x 2.83h Size mm: 71.88w x 71.88h Stitch Count: 1,570

I S










- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

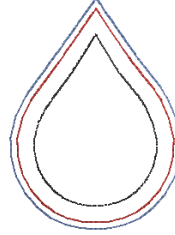BE110403_CWA03 For use with the BERNINA CutWork Accessory

Size Inches: 2.01w x 2.72h Size mm: 51.05w x 69.09h Stitch Count: 1,178


I S



- | | | | |
|---|--------------------------------------|-------|------|
|  | 1 Placement Stitch | 3600 | 1076 |
|  | 2 Basting Stitch | 1902 | 1147 |
|  | 3 BERNINA CutWork Accessory
Cut 1 | Cut 1 | 1001 |
|  | 4 BERNINA CutWork Accessory
Cut 2 | Cut 2 | 1001 |
|  | 5 BERNINA CutWork Accessory
Cut 3 | Cut 3 | 1001 |
|  | 6 BERNINA CutWork Accessory
Cut 4 | Cut 4 | 1001 |

BE110403_CWA04 For use with the BERNINA CutWork Accessory


Size Inches: 2.72w x 2.01h Size mm: 69.09w x 51.05h Stitch Count: 1,184

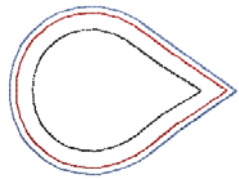

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110407_CWA For use with the BERNINA CutWork Accessory


Size Inches: 2.04w x 2.61h Size mm: 51.82w x 66.29h Stitch Count: 1,189

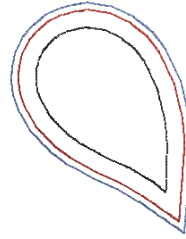

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110404_CWA For use with the BERNINA CutWork Accessory


Size Inches: 3.90w x 3.91h Size mm: 99.06w x 99.31h Stitch Count: 3,337

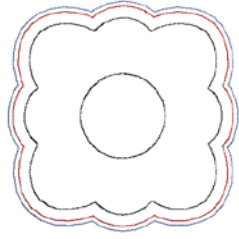

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110408_CWA For use with the BERNINA CutWork Accessory


Size Inches: 5.58w x 1.97h Size mm: 141.73w x 50.04h Stitch Count: 2,637



	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110405_CWA For use with the BERNINA CutWork Accessory


Size Inches: 3.25w x 3.25h Size mm: 82.55w x 82.55h Stitch Count: 1,905

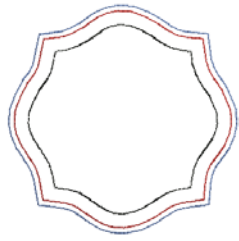

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110409_CWA For use with the BERNINA CutWork Accessory


Size Inches: 2.74w x 2.79h Size mm: 69.60w x 70.87h Stitch Count: 1,414

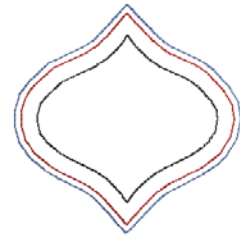

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

BE110406_CWA For use with the BERNINA CutWork Accessory


Size Inches: 2.14w x 2.15h Size mm: 54.36w x 54.61h Stitch Count: 1,206

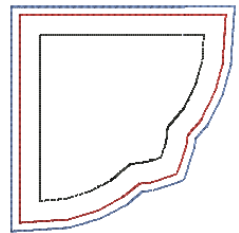

	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001

BE110420_CWA For use with the BERNINA CutWork Accessory

Size Inches: 1.84w x 2.96h Size mm: 46.74w x 75.18h Stitch Count: 1,244

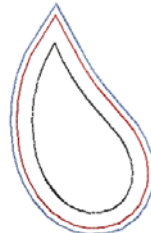


	I	S
1 Placement Stitch	3600	1076
2 Basting Stitch	1902	1147
3 BERNINA CutWork Accessory Cut 1	Cut 1	1001
4 BERNINA CutWork Accessory Cut 2	Cut 2	1001
5 BERNINA CutWork Accessory Cut 3	Cut 3	1001
6 BERNINA CutWork Accessory Cut 4	Cut 4	1001

Contour Appliqué

BE110423_CWA For use with the BERNINA CutWork Accessory

Size Inches: 3.51w x 3.50h Size mm: 89.15w x 88.90h Stitch Count: 3,053

I S

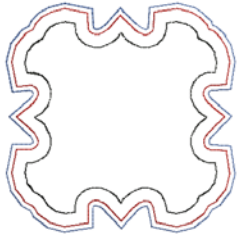


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA03 For use with the BERNINA CutWork Accessory

Size Inches: 3.33w x 3.31h Size mm: 84.58w x 84.07h Stitch Count: 1,965

I S

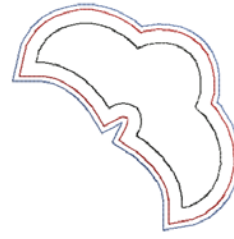


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110425_CWA For use with the BERNINA CutWork Accessory

Size Inches: 2.44w x 3.71h Size mm: 61.98w x 94.23h Stitch Count: 1,902

I S

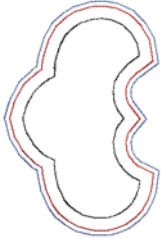


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA04 For use with the BERNINA CutWork Accessory

Size Inches: 2.17w x 3.87h Size mm: 55.12w x 98.30h Stitch Count: 1,795

I S

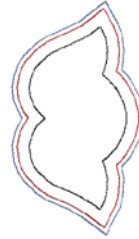

- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA01 For use with the BERNINA CutWork Accessory

Size Inches: 3.35w x 3.33h Size mm: 85.09w x 84.58h Stitch Count: 1,941

I S



- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA05 For use with the BERNINA CutWork Accessory

Size Inches: 3.35w x 3.33h Size mm: 85.09w x 84.58h Stitch Count: 1,942

I S




- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA02 For use with the BERNINA CutWork Accessory

Size Inches: 3.87w x 2.17h Size mm: 98.30w x 55.12h Stitch Count: 1,766

I S

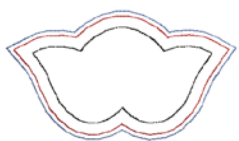


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

BE110428_CWA06 For use with the BERNINA CutWork Accessory

Size Inches: 3.87w x 2.17h Size mm: 98.30w x 55.12h Stitch Count: 1,762

I S

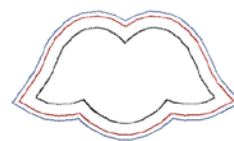


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory
Cut 1 1001
- 4 BERNINA CutWork Accessory
Cut 2 1001
- 5 BERNINA CutWork Accessory
Cut 3 1001
- 6 BERNINA CutWork Accessory
Cut 4 1001

Contour Appliqué

BE110428_CWA07 For use with the BERNINA CutWork Accessory

Size Inches: 3.33w x 3.35h
 Size mm: 84.58w x 85.09h
 Stitch Count: 1,947

I S

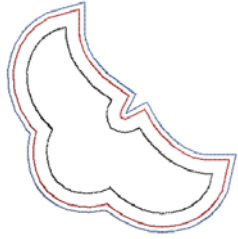


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110430_CWA03 For use with the BERNINA CutWork Accessory

Size Inches: 3.50w x 3.54h
 Size mm: 88.90w x 89.92h
 Stitch Count: 2,000

I S

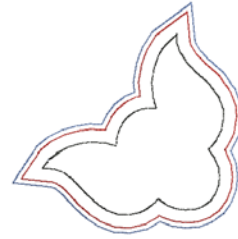


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110428_CWA08 For use with the BERNINA CutWork Accessory

Size Inches: 2.17w x 3.87h
 Size mm: 55.12w x 98.30h
 Stitch Count: 1,834

I S

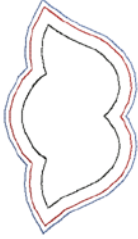


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110430_CWA04 For use with the BERNINA CutWork Accessory

Size Inches: 3.54w x 3.50h
 Size mm: 89.92w x 88.90h
 Stitch Count: 1,999

I S

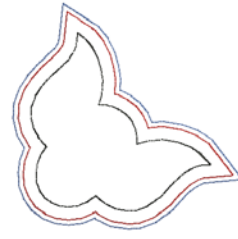


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110430_CWA01 For use with the BERNINA CutWork Accessory

Size Inches: 3.49w x 3.54h
 Size mm: 88.65w x 89.92h
 Stitch Count: 2,008

I S

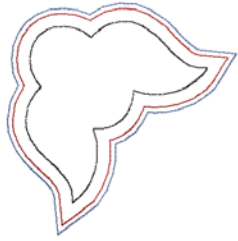


- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110430_CWA05 For use with the BERNINA CutWork Accessory

Size Inches: 4.67w x 4.67h
 Size mm: 118.62w x 118.62h
 Stitch Count: 2,586

I S

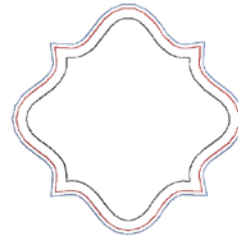

- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001

BE110430_CWA02 For use with the BERNINA CutWork Accessory

Size Inches: 3.54w x 3.49h
 Size mm: 89.92w x 88.65h
 Stitch Count: 2,011

I S



- 1 Placement Stitch 3600 1076
- 2 Basting Stitch 1902 1147
- 3 BERNINA CutWork Accessory Cut 1 1001
- 4 BERNINA CutWork Accessory Cut 2 1001
- 5 BERNINA CutWork Accessory Cut 3 1001
- 6 BERNINA CutWork Accessory Cut 4 1001