OESD™

Winter VILLAGE

FREESTANDING
Toy Store

1
Design

Fits hoop size 5" x 7" and larger

THREAD LIST

Isacord Thread Colors

0015 White (2 spools)

* Project instructions included after design list.
Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.
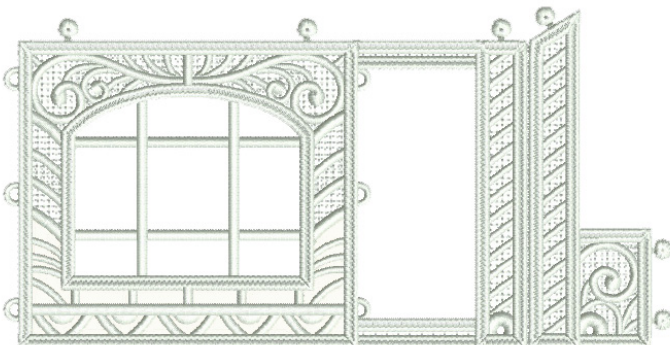
DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12598-01 Front Window Wall FSA

Size Inches:	Size mm:	Stitch Count:
3.47 X 6.79 in.	88.14 X 172.47 mm	31,941 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace... 0015

OESD™

*Fabric Required

12598-02 Front Window Outer Wall FSA

Size Inches:	Size mm:	Stitch Count:
1.7 X 3.87 in.	43.18 X 98.3 mm	10,122 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace... 0015

*Fabric Required

12598-03 Front Window Inner Wall FSA

Size Inches:	Size mm:	Stitch Count:
1.7 X 5.59 in.	43.18 X 141.99 mm	12,779 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace... 0015

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12598-04 Door & Inner Wall FSA

Size Inches:	Size mm:	Stitch Count:
4.1 X 6 in.	104.14 X 152.4 mm	40,000 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace.. 0015

*Fabric Required

12598-05 Side Wall FSA

Size Inches:	Size mm:	Stitch Count:
4.15 X 5.04 in.	105.41 X 128.02 mm	36,996 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace.. 0015

*Fabric Required

12598-06 Back Wall FSA

Size Inches:	Size mm:	Stitch Count:
4.1 X 5.99 in.	104.14 X 152.15 mm	41,596 St.
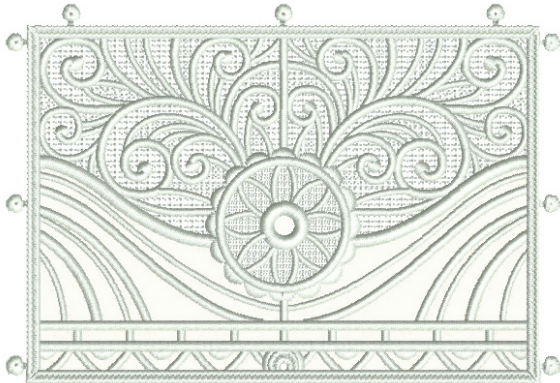
1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace.. 0015

*Fabric Required

12598-07 Front Roof FSA

Size Inches:	Size mm:	Stitch Count:
4.39 X 6.46 in.	111.51 X 164.08 mm	42,156 St.

1. Roof Placement Stitch.................................... 0015
2. Roof Cut Line and Tackdown 0015
3. Snow Placement Stitch 0015
4. Snow Cut Line and Tackdown 0015
5. Lace.. 0015

OESD™

*Fabric Required

12598-08 Back Roof FSA

Size Inches:	Size mm:	Stitch Count:
3.04 X 6.46 in.	77.22 X 164.08 mm	27,020 St.
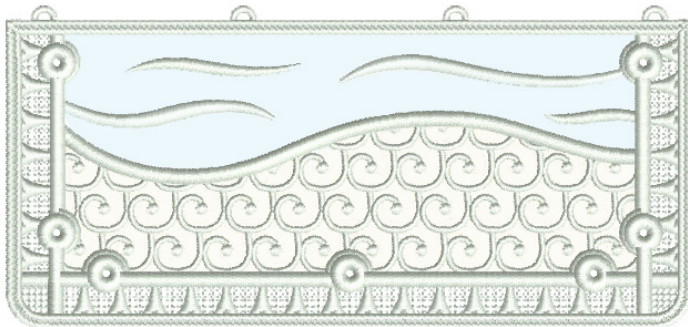
1. Roof Placement Stitch 0015
2. Roof Cut Line and Tackdown 0015
3. Snow Placement Stitch 0015
4. Snow Cut Line and Tackdown 0015
5. Lace.. 0015

*Fabric Required

12598-09 TOYS Sign FSA

Size Inches:	Size mm:	Stitch Count:
1.5 X 6.01 in.	38.1 X 152.65 mm	9,897 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Sign 0015
4. Boxes 0015
5. Lettering 0015

OESD™

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12598-10 Floor FSA
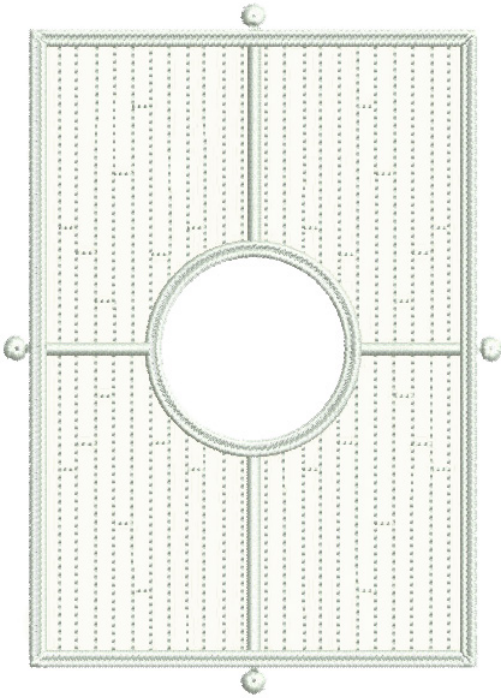
Size Inches:	Size mm:	Stitch Count:
4.34 X 6 in.	110.24 X 152.4 mm	14,449 St.

1. Placement Stitch 0015
2. Cut Line and Tackdown 0015
3. Lace.. 0015

12598-11 Rocking Horse FSL

Size Inches:	Size mm:	Stitch Count:
2.12 X 3.12 in.	53.85 X 79.25 mm	6,857 St.

1. Single Color Design.. 0015

COLLECTION SUPPLIES

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway

Fabrics/Textiles

- White cotton fabric 1/4 yard
- Note: Fabric sizes are estimates and may result in overage.

Notions & Tools

- OESD Alligator Clamps
- OESD Button Clips
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Point and Press Tool
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart
- Match bobbin thread to top thread
- 0015 White (2 spools)

OESD™

Completed Size: 5" H x 6 ¾" W x 6" D
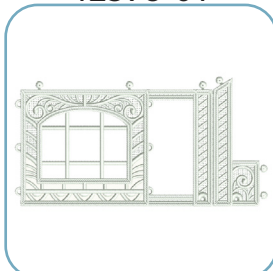
12598-01
Requires 1 Design

12598-02
Requires 1 Design
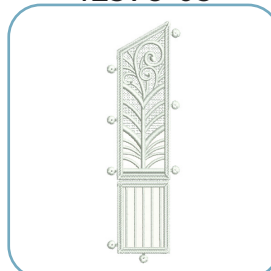
12598-03
Requires 1 Design
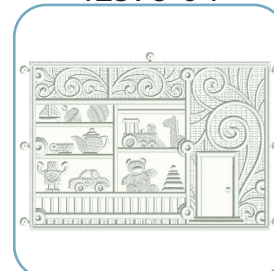
12598-04
Requires 1 Design
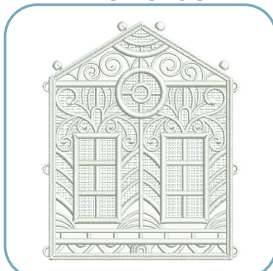
12598-05
Requires 2 Designs
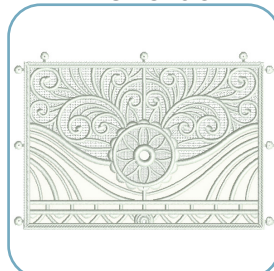
12598-06
Requires 1 Design
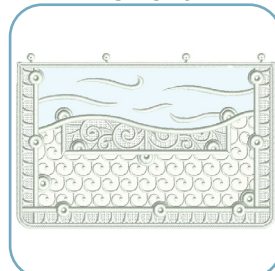
12598-07
Requires 1 Design
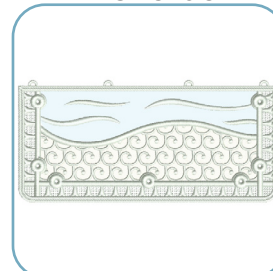
12598-08
Requires 1 Design
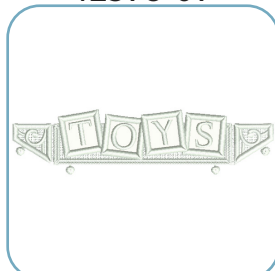
12598-09
Requires 1 Design
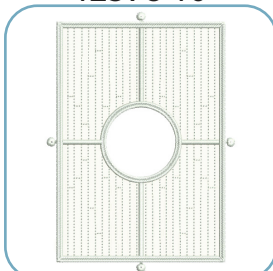
12598-10
Requires 1 Design

12598-11
Requires 1 Design

EMBROIDERY

Notes

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread in the top and bobbin.

For other designs in the collection, use the applique templates as a guide to the dimensions of the various applique pieces.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

STEP 1

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.

STEP 2

- Adhere two layers of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.
- Cut the prepared applique fabrics ¼" - ½" larger than the templates.

EMBROIDERY

STEP 3

- Load selected design into the machine.
- Example design is Front Window Walls FSA (12598-01).
- Place hoop on the machine.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Placement Stitch.
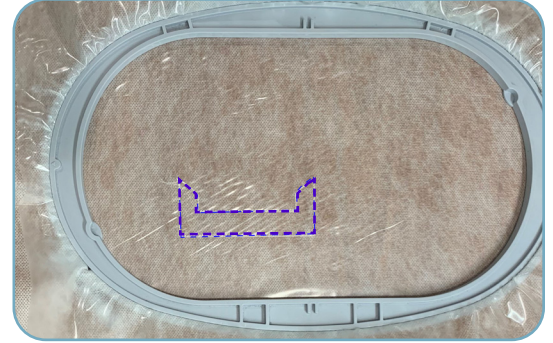
STEP 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Cut a piece of prepared fabric slightly larger than the placement line.
- Cover the placement line completely with the prepared fabric.
- Tape in place to secure.
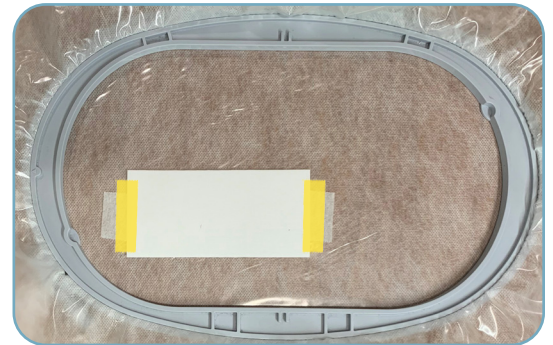
STEP 5

- Return the hoop to the machine.
- Machine Step 2, Cut Line and Tackdown.
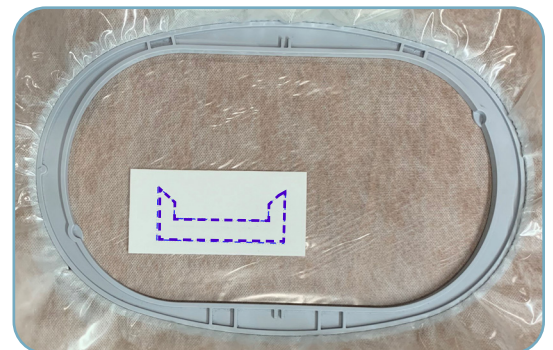
STEP 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line stitching as possible.
- Return the hoop to the machine.
- Note: If the outermost row of stitching (cut line) is accidentally cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the OESD AquaMesh is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.
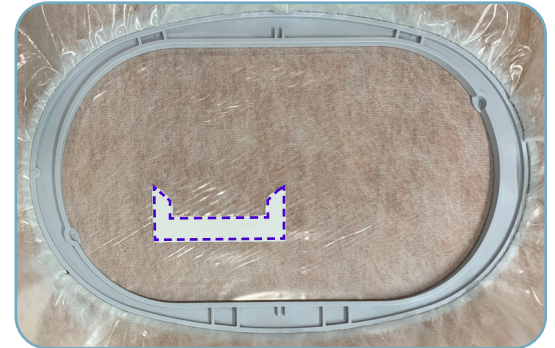
STEP 7

- Stitch Machine Step 3, Lace.
- Return the hoop to the machine and stitch the remaining steps according to the thread chart.
- When the design is complete, remove the project from the hoop and trim the stabilizer 1/4"- 1/2" outside the design.
- Note: Stitch all required designs. Design 12598-11 is lace only. Fabric is not required. Follow General Lace Instructions.
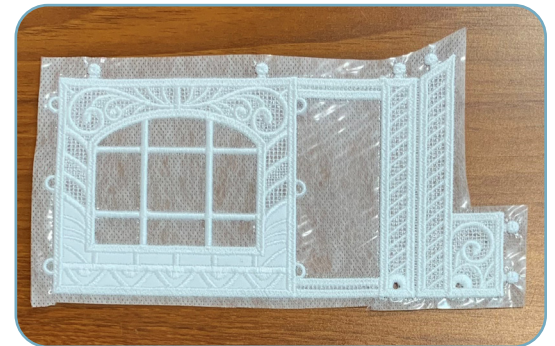
ASSEMBLY

STEP 8

- Rinse each piece in warm running water until the design is only slightly sticky.
- Lay face down on a non-stick surface to dry. Parchment paper or a cooling rack work well. This prevents the piece from curling.
- Press each piece, right side down, on a Perfect Embroidery Press Cloth.

STEP 9

- Using alligator clamps attach Door & Inner Wall FSA (12598-04) to both Side Wall FSA (12598-05) pieces by pulling the three buttonettes along each side of inner wall to the three eyelets along each side wall.

STEP 10

- Attach Back Wall FSA (12598-06) to each side wall by pulling the three buttonettes along each side of the back wall to the three eyelets along each side wall.

STEP 11

- Attach Front Window Outer Wall FSA (12598-02) to Front Window Wall FSA (12598-01) by pulling the three buttonettes along the right side of outer wall into the three eyelets along the left side of the front window.
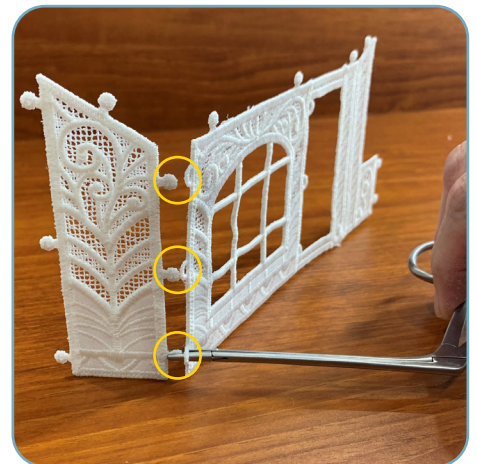
STEP 12

- Attach Front Window Inner Wall FSA (12598-03) to Front Window Wall FSA (12598-01) by pulling the three buttonettes along the right side of the inner wall into the three eyelets on the front window wall behind the door opening.
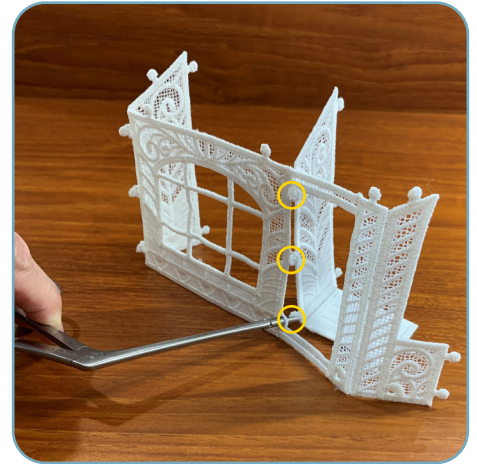
STEP 13

- Continue to attach the inner wall to front wall by pulling the remaining two buttonettes of the Front Window Inner Wall FSA (12598-03) into the two remaining eyelets on bottom of Front Window Wall FSA (12598-01).
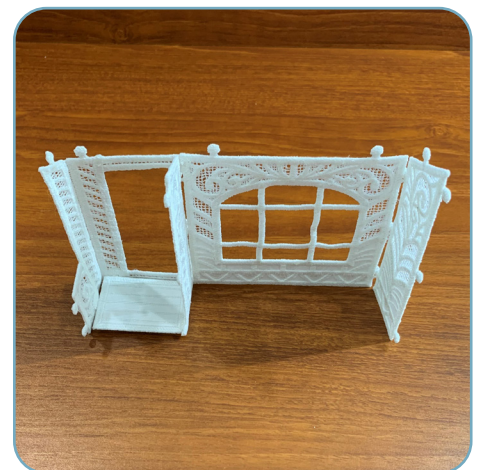
ASSEMBLY

STEP 14

- Attach the assembled front wall to the door & inner wall by pulling the eight buttonettes into the corresponding eight eyelets.

STEP 15

- Attach Front Roof FSA (12598-07) to Back Roof FSA (12598-08) by pulling the four buttonettes along the top edge of the front roof into the four eyelets along the top edge of the back roof.

ASSEMBLY

STEP 16

- Attach TOYS Sign FSA (12598-09) to assembled roof by pulling the four buttonettes into the four eyelets on the roof.

STEP 17

- Attach assembled roof to walls by pulling the fifteen buttonettes of the walls into the corresponding fifteen eyelets of the roof.
- Note: Start with the inner wall.

STEP 18

- Attach Floor FS (12598-10) to walls by pulling the four buttonettes of floor into the four corresponding eyelets on the walls.
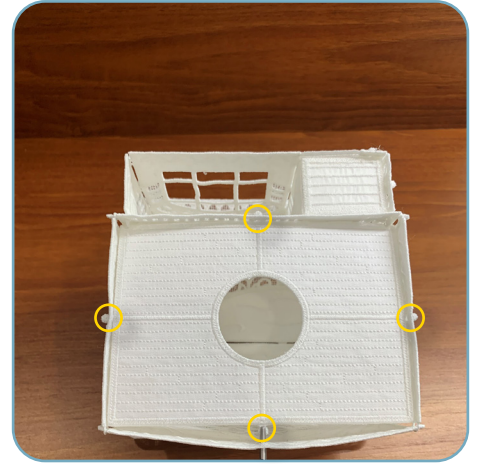
STEP 19

- Fold the hinge of Rocking Horse FSL (12598-11) up and pull the one buttonette into the one eyelet to the front of the rocking horse. Work with the folded hinge and rocking horse to stand up.
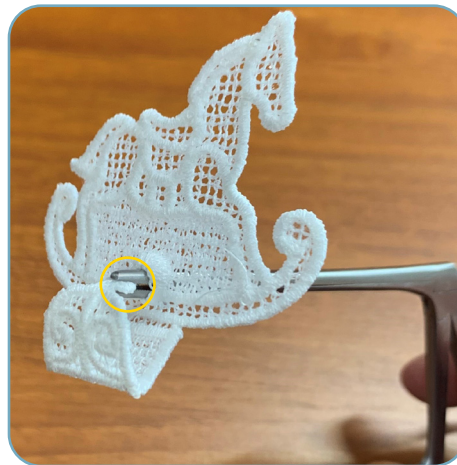
FINISHING TOUCHES

- The toy store is complete. Enjoy.
- Add tea lights or pixie lights to create a glow.

GENERAL FREESTANDING LACE GUIDE

OESD™

Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

Notions/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool

Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

Instructions

Step 1 - Hoop
For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid.
For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

Step 2 - Embroider
Stitch the design per the thread chart with matching thread in the bobbin at each color change.
When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

Step 3 - Rinse
Rinse remaining stabilizer out in warm running water.
For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky.
For softer lace, rinse until all traces of the stabilizer are removed.

Step 4 - Dry
Lay right side down flat on a non-stick surface, such as a cooling rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl.
Let the pieces dry completely before proceeding with any assembly.

Step 5 - Press
Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

Step 6 – Assemble Structure
Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.
Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.
Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets. Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

Helpful Tips

Limp Lace
If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

Eyelets Too Small
If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

Button Clips
During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether. Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process. Remove the Button Clips when the assembly is complete.

Alternative Construction Option
In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside.
Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette. Pull the buttonette to the wrong side of the lace.
Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be placed on the completed buttonette(s) to prevent them from pulling out of the eyelet during construction.
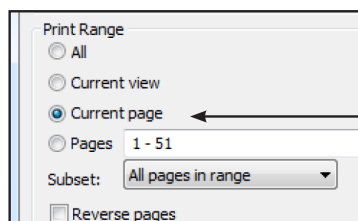
ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.
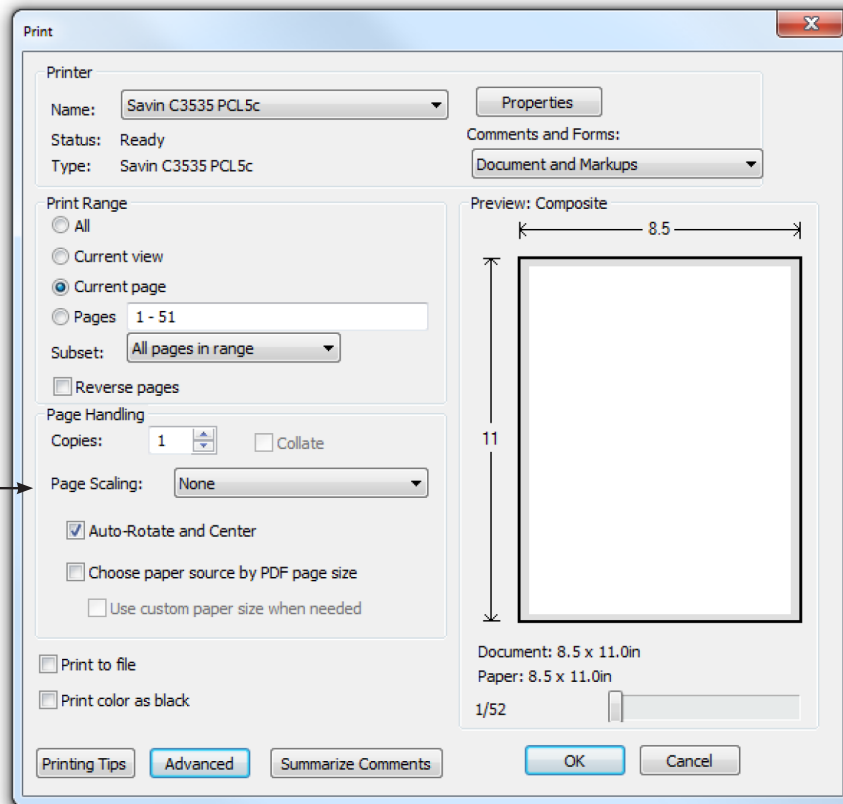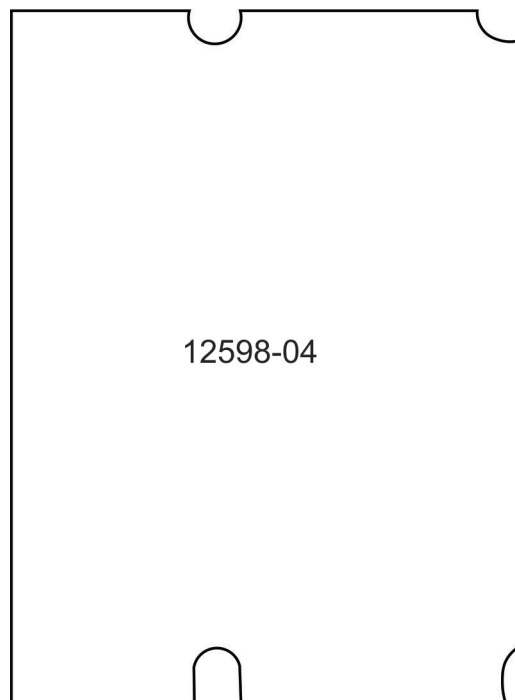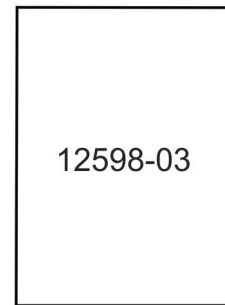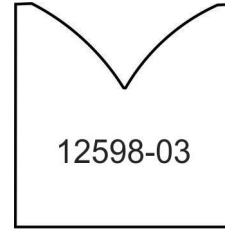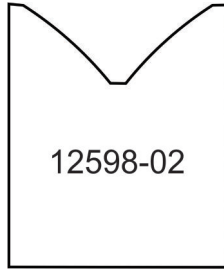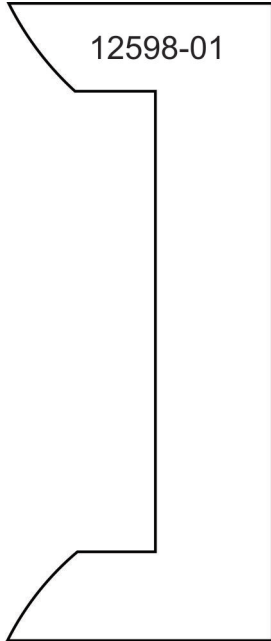

TO SAVE PAPER

Only print the desired image by navigating to the image's page,
go to File > Print and select "Current page" in the print dialog
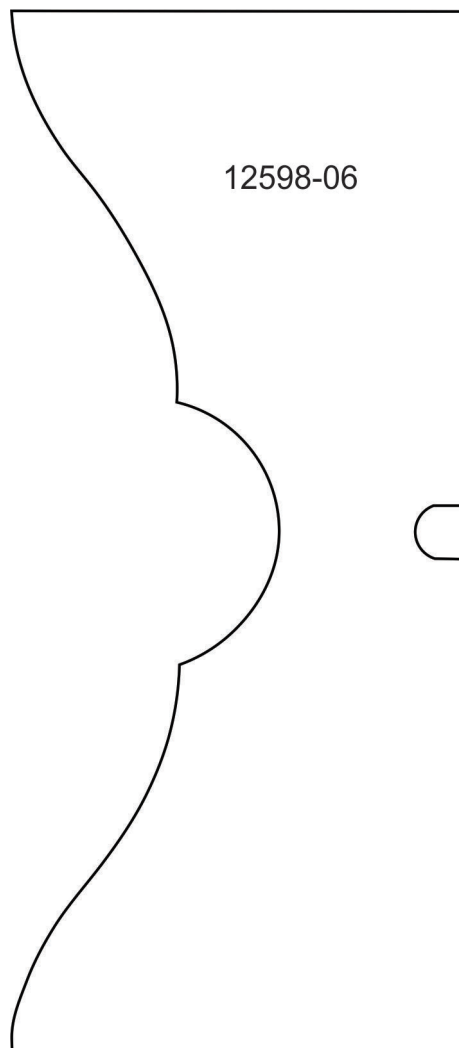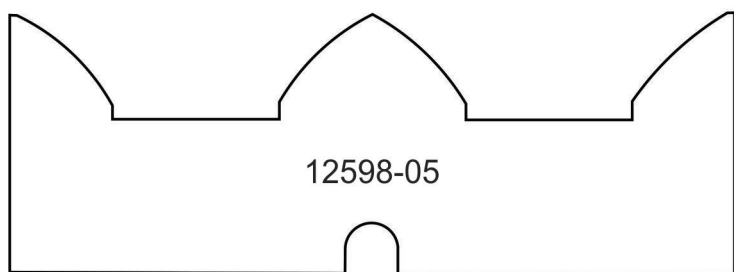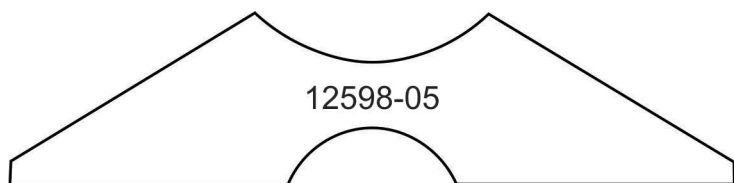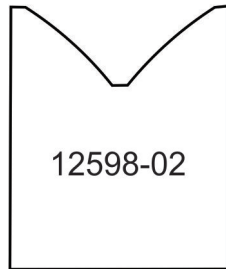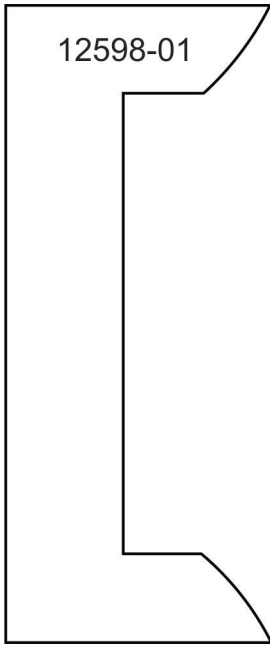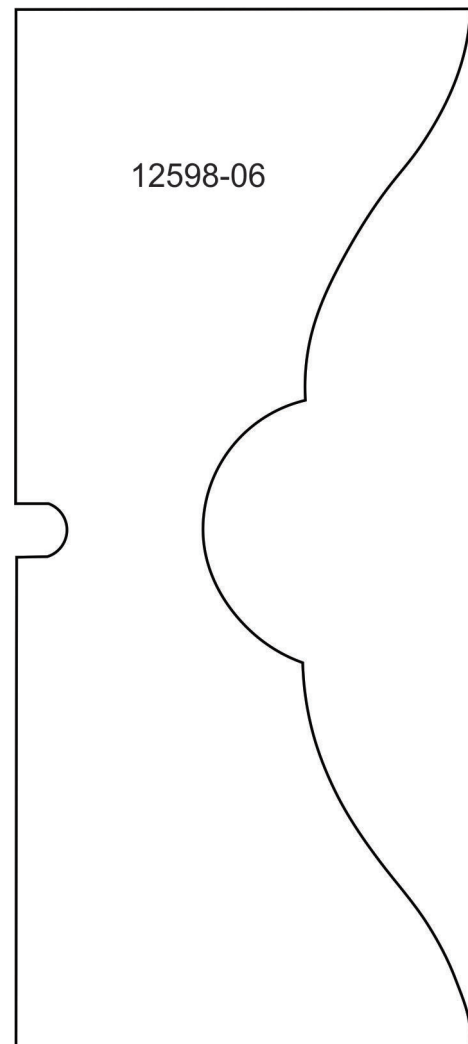box. Repeat for each desired image.

APPLIQUE PATTERNS

OSD™
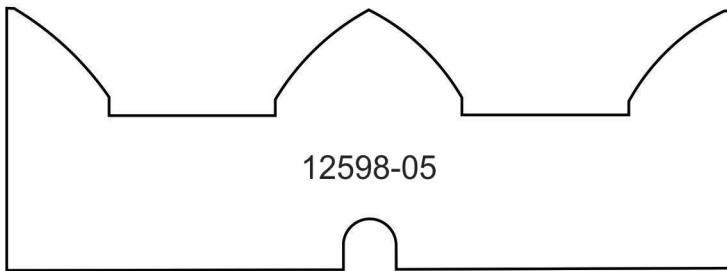
Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12598-01

12598-02

12598-03

12598-03

12598-04

12598-04

APPLIQUE PATTERNS

O SD™

12598-05

12598-05

12598-06

APPLIQUE PATTERNS

O SD™

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12598-07

12598-07

12598-08

12598-08

OESD™

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12598-09

12598-10

Cut Out

MIRRORED PATTERNS

12598-01

12598-02

12598-03

12598-03

12598-04

12598-04

OESD™

12598-05

12598-05

12598-06

MIRRORED PATTERNS

OeSD™

12598-07

12598-07

12598-08

12598-08

MIRRORED PATTERNS

OeSD™
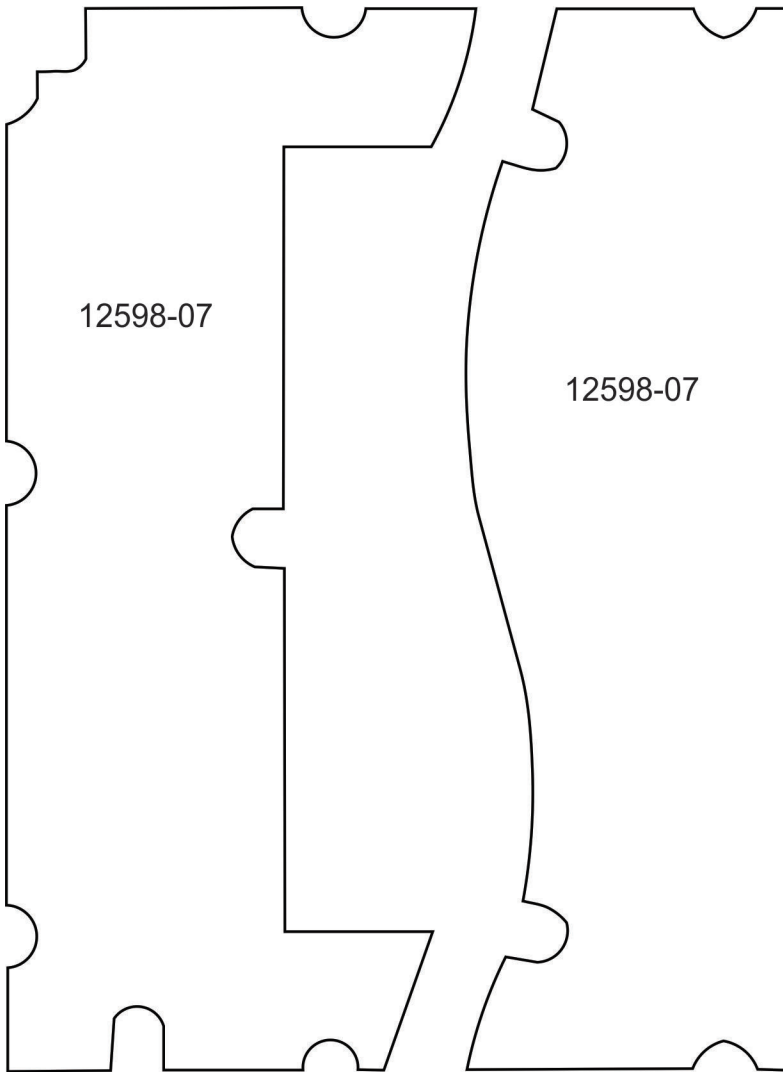
Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

12598-09

12598-10

Cut Out